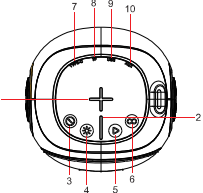
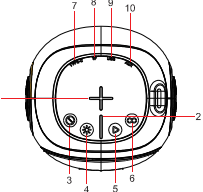


A	1		2		3		4		5		6		A
	修改区域		描述		日期		担当						
	1		XXXXXXXXXXXXXXXXXXXXXXXXXXXX		XXXXXXX		XXXXXX						
B	70 mm 122.5 mm HOPESTAR -P72 便携式无线音箱  无线扬声器说明书		HOPESTAR 技术规格: 无线标准: 5.3 传输距离: 10米 输出功率: 30W 播放时间: 4 ~ 6小时 频率响应: 80Hz-20KHz 扬声器 :66mm 4D 15W*2 输入电源: 5V $\square$ 1A 电池类型: 1650mAh锂离子电 4000mAh 音频信号输入接口: 标准Φ3.5mm耳机插孔(立体声) 特点: 1. 无线连接 2. 记忆功能, 断点续播 3. 支持U盘/ TF卡/ AUX/蓝牙模式 4. 内置锂离子电池 5. 支持MP3音乐格式解码 6. 使用高保真的扬声器, 发出声音更自然和细腻 7. 5级防水 8. 1+1 双发声单元功能 9. 支持收音功能		无线扬声器 - P72  P72 按键指示示意图		HOPESTAR 按键说明: 1. 按键 " ": 单击: 音源切换 长按: 下一曲 2. 按键 " ": 单击: 音量减小 长按: 上一曲 3. 开关机键 长按开/关机的3秒/次 4. 灯光控制 单击: 切换灯光模式 长按: 开/关灯 5. 暂停/继续 单击: 暂停/继续 单击: 退出/返回蓝牙模式 长按: 切换/返回 6. 充电接口 长按: 充电/退出充电 7. Type-C 接口 单击: 充电/退出充电 8. TF插孔 单击: 插入TF卡 9. USB插孔 单击: 插入USB 10. AUX插孔 单击: 插入AUX		无线扬声器 - P72 使用说明: 1. 无线配对 1.1. 使用无线配对前, 请先打开充电电源, 它已经是默认无线配对模式。 1.2. 打开无线设备, 搜索HOPESTAR-P72, 连接配对, 连接成功后, 开始播放音乐。 2. 适用于各种手机配件无线技术, 无线适配器, 无线播放器。 3. 前置提示 3.1. 万/关机前请提示: 3.2. 音量加前提示: 3.3. 电量低提示: 3.4. 模式切换 4.1. 开机默认进入无线模式, 模式切换提示: FM模式, TF卡模式, U盘模式, AUX模式 4.2. 模式: 音质优先。 5. TWS操作说明 5.1. 在两个手机同时打开, 单击其中一个TWS连接键, 单击 "是" 将一手机TWS连接, 当TWS连接成功, 将连接提示音, 手机指示灯闪烁, 耳机长亮。 6. 无线充电提示 无线充电状态: 指示灯闪, 10-15秒/次; 无线充电状态: 指示灯亮 无线充电提示: 指示灯闪 10秒/次; 7. 充电指示灯 充电时红灯亮, 充满电时灯灭 8. 音量 开机默认音量70%音量。		HOPESTAR 9. 充电使用: 手机内置过充保护电路, 可长时间连续充电, 约15小时即可充满电, 每个电池的播放时间会因使用不同大小的音量而有所不同。 10. 无工作状态, 15分钟后自动关机。 故障排除: 1. 自动关机: 电量不足时会自动启动电池保护, 请充电4小时后使用。 2. 无法播放音乐: 音乐文件不能被正确识别, 音乐文件存储在可移动的存储设备上。 3. 连接失败: 请检查连接是否正确, 请检查正确的音频输出接口。 4. 按错无反应或功能错误: 关机后重试。 5. 当机器出现故障时, 请关机后重启机器内部重新启动。 产品保修 用户名: _____ 联系电话: _____ 购买日期: _____ 产品编号: _____ 维护故障: _____ 注意: 产品保修期为6个月		
	正面												
C	HOPESTAR -P72 Portable Wireless Speaker  WIRELESS SPEAKER INSTRUCTIONS		HOPESTAR Technical Specifications: Wireless standard: 5.3 Transmission distance: 10 meters Output power: 30W Playing time: 4 ~ 6 hours Frequency effect: 80Hz-20KHz Speaker: 66mm 4D 15W*2 Input power: 5V $\square$ 1A Battery type: 1650mAh lithium ion battery 4000mAh Audio signal input interface: standard Φ3.5mm headphone jack (stereo) Features: 1. Wireless connection 2. Memory function, breakpoint resuming 3. Support U disk / FM / TF card / AUX playback mode 4. Built-in lithium ion battery 5. Support Mp3 music format decoding 6. Using high-fidelity speakers, the sound is more natural and delicate 7. Level 5 waterproof 8. 1+1 device serial connection function 9. Support FM radio function		Wireless speaker - P72  P72 button indication section view		HOPESTAR Button instruction: 1. Press the " " button Click: Volume Up Long press: Next song 2. Press the " " button Click: Volume decrease Long press: Previous track 3. On/Off button Long press: turn on/off lights Click: Current Light Model Long press: turn on/off lights Click: Play/Pause Long press: Exit/Connect to Bluetooth connection Double click: a wireless mode to make a call Click: Answer/Hang up Press and hold for 2 seconds during an incoming call to reject the call Click: Make in radio mode, long press: Retreat 6. Series key Click: Series/Ext Series Long press: Switch functions, Type-C jack 1. Charging cable interface, when inserting Type-C charging cable, defaults to device charging 2. When using the radio function, it is necessary to insert a charging cable as the radio antenna. The radio function is necessary for normal use 8. TF jack When inserting a TF card, default to TF card playback mode 9. USB jack When inserting a USB drive, it defaults to USB playback mode 10. AUX jack Standard Φ 3.5mm headphone jack, defaults to AUX playback mode when inserted		Wireless speaker - P72 Directions for use: 1. Wireless pairing 1.1. Before using wireless pairing, first turn on the audio power. It is already the default wireless model. 1.2. Turn on the wireless device, search for HOPESTAR-P72, connect and pair. After successful connection, start playing music experience. 2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player. 3. Voice prompt 3.1. There is a voice prompt when turning on/off. 3.2. When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt. 3.3. Automatically shut down after detecting low battery prompt three times. 4. Mode switching 4.1. 1. enters wireless mode by default when power on. Mode switching sequence: Wireless mode - FM mode - TF card mode - USB mode - AUX mode 4.2. Mode: Post-insertion priority 5. TWS operating instructions Open any two speakers at the same time, click one of the TWS serial keys. When you hear the beep to enter TWS search, when TWS connection is successful, the connection prompt sounds, the host indicator flashes, and the copilot lights up. 6. Play indicator Wireless search status: white light flashing fast, about 0.5 seconds. Wireless pairing status: White light is always on Playback status: White light flashes slowly for about 1 second. 7. Charging indicator The red light is on when charging, and the red light is off when fully charged. 8. Volume Turn on the default speaker volume at 70%.		HOPESTAR 9. Charging and using: This machine has a built-in overcharge protection circuit, which can be connected to a computer or charger for a long time, about four hours. Charging is complete. The play time of each battery will vary depending on the volume used after different. 10. If there is no working state, it will automatically shut down after 15 minutes. Troubleshooting: 1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge it for 4 hours before use. 2. Unable to play music: The music file storage path cannot be recognized by the player. Please store the music file in the root directory of the removable device. 3. There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port. 4. There is no response to the keys or the function is disordered: try again after shutting down. 5. When the machine encounters abnormal situations, press the reset button inside the circular hole behind the charging dock to automatically reset it. Product warranty Username: _____ Contact number: _____ Date of purchase: _____ Product number: _____ Maintenance failure: _____ Note: The product warranty is 6 months		
	反面												
D	HOPESTAR P72说明书		成品尺寸: 122.5x70mm		材质工艺: 128g双铜, 单张双面四色印刷, 风琴折		设计: Zep		2024-01-28		订单编号:		
							业务:				料号:		
							电子:				文件编号:		
						结构:				名称: P72 中性 说明书		审核:	
												核准:	
												页次: 1/1	
												版次: 1. 0	
1		2		3		4		5		6			

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.