ZTE

ZTE Blade A3 2019 User Manual

LEGAL INFORMATION

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Copyright

Copyright © 2019 ZTE CORPORATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to <u>For Your Safety</u> to be sure to use your phone properly and safely. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at http://www.ztedevices.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation. Android™ is a trademark of Google LLC; Oreo is a trademark of Mondelez International, Inc. group.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by ZTE Corporation is under license.

microSDXC Logo is a trademark of SD-3C, LLC.

Other trademarks and trade names are those of their respective owners.

Instructional Icons

NOTE Additional information, supplementary

instruction or tips for the operation of

the product.

CAUTION Safety information that, if ignored, may

cause minor damage to the equipment

or service interruption.

WARNING Safety information that, if ignored, may

cause serious damage to the equipment or danger to personal

safety.

Version No.: R1.0

Edition Time: October 16, 2019

Contents

Getting Started	9
Overview	9
Knowing the Keys	11
Setting Up Your Phone	
Charging the Phone	
Powering On/Off	15
Setting Up for the First Time	16
Knowing the Home Screen	16
Personalizing	17
Choosing Your Wallpaper	
Removing Items From Your Home Screen	
Using Do Not Disturb Mode	
Knowing the Basics	20
Monitoring the Phone Status	
Managing Notifications	
Using Quick Settings	
Opening and Switching Apps	
Security	
Protecting Your Phone With a Screen Lock	
Protecting Your Phone With Screen Pinning	
6	
Connecting to Networks	27
Connecting to Mobile Network	27

Connecting to Devices	29
Bluetooth [®]	29
Connecting to a Computer via USB	
Sharing Your Mobile Data Connection	32
Phone Calls	33
Placing Calls	33
Answering or Rejecting Calls	34
Contacts	37
Creating a Contact	37
Searching for a Contact	38
Importing and Exporting Contacts	38
Setting a Ringtone for a Contact	40
Joining Duplicate Contacts	
Separating Contact Information	41
Setting Call/Message Blocking	41
Gmail	43
Setting Up the First Email Account	43
Writing and Sending an Email	43
Responding to an Email	44
Messages	45
Opening the Messages Screen	
Sending a Message	45
Message Options	46
Message Settings	47


Camera	48
Taking Pictures	48
Recording Videos	49
Using Other Camera Modes	50
Gallery	51
Opening Gallery	51
Sharing Pictures and Videos	51
Retouching Your Pictures	51
YT Music	53
Playing Your Music	53
Managing Playlists	53
Settings	55
Network & Internet	
Connected Devices	57
Apps & Notifications	57
Battery	59
Display	59
Scheduled Power On/Off	59
Sound	60
Storage	60
Security & Location	60
Security of Economic	00
Users & Accounts	
Users & Accounts	63 63

Software Update	65
For Your Safety	66
General Safety	
Radio Frequency (RF) Energy	
Distractions	
Product Handling	72
Electrical Safety	77
Radio Frequency Interference	78
Explosive Environments	80
Disposal of Your Old Appliance	81

Getting Started

Overview



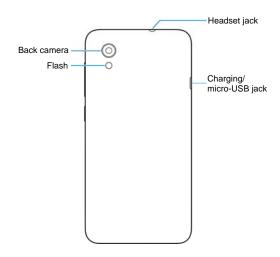

Knowing the Keys

Tallowing the reys		
Key	Function	
Power key	 Press and hold to turn on or off aeroplane mode, restart or power off. Press to turn off or on the screen display. 	
Volume key	Press or hold either end of the key to turn the volume up or down.	
(Home key)	 Touch to return to the home screen from any application or screen. Touch and hold to use the Google Assistant. 	
(Back key)	Touch to go to the previous screen.	
(Recent apps key)	 Touch to see recently used apps. Double-tap to switch to the most recent application. 	

Setting Up Your Phone


The nano-SIM card can be installed or removed while the phone is turned on.

Power off your phone before removing or replacing the battery.


WARNING!

To avoid damage to the phone, do not use any other kind of SIM cards, or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.


1. Place your finger into the slot at the bottom of the back cover, and gently lift and remove the cover.

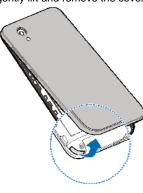

2. Install the nano-SIM card and the microSDXC card as shown.

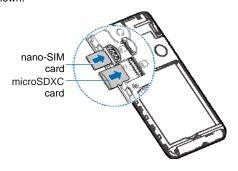

3. Insert the battery, making sure the connectors align. Gently push down on the battery until it clicks into place.

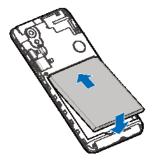


4. Replace the back cover.

Charging the Phone

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

WARNING!

Use only ZTE-approved chargers and USB cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

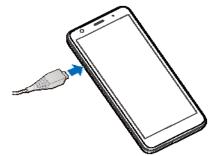

NOTE:

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Contact the customer service if you still cannot power on the phone after prolonged charging.

Powering On/Off

- Press and hold the **Power** key to turn on your phone.
- To switch it off, hold the Power key to open the options menu and touch Shut Down > OK.

Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings, you need to do some settings before using it.

Touch the language to select the language you want to use and then touch **START**. Then follow the prompts to set up Wi-Fi, name, screen lock, Google services, and other options.

Knowing the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding folders, shortcuts, and more.

Your home screen is extendable, providing more space for shortcuts and folders. Touch and hold a shortcut or folder and drag it to the right edge of the screen to create an extended panel for the shortcut/folder. Swipe left or right on the screen to switch between panels.

Personalizing

Choosing Your Wallpaper

You can set the wallpaper for the home screen and the lock screen.

- 1. Touch and hold on a blank area of the home screen and touch **WALLPAPERS**.
- 2. Touch **My photos** to select an image or directly touch a built-in static wallpaper. For images in My photos, you can pan and zoom on them to select the area you need.
- 3. Touch Set wallpaper.
- 4. Touch Home screen, Lock screen, or Home screen and lock screen.

NOTE:

You can also set the wallpaper by opening the Settings app and selecting **Display > Wallpaper**.

Removing Items From Your Home Screen

- 1. Touch and hold the item you want to delete.
- 2. Drag it to \times **Remove** to delete it.



If the item is an app icon, you may also drag it to **Tuninstall** and touch **OK** to uninstall the app. Some preinstalled apps cannot be uninstalled.

Using Do Not Disturb Mode

You can limit interruptions with Do not disturb mode. This mode silences your phone so that it doesn't make sounds or vibrate when you don't want it to.

Turn on Do Not Disturb Mode

- Swipe down from the top of the screen with two fingers to access the Quick Settings.
- 2. Find and touch the word "Do not disturb."
- Touch Total silence, Alarms only, or Priority only depending on whether you want to allow exceptions. You can customize the exceptions when Priority only is selected.
- Touch Until you turn off Do not disturb if you want to turn off Do not disturb mode manually; touch + or - to set the time before Do not disturb mode turns off automatically.
- 5. Touch **DONE**.

NOTE:

Press the **Volume** key when no media application is active to show the volume bar. Drag the slider to the left or keep pressing the **Volume down** key to turn on vibration. Press the key again to turn on **Alarms only**.

Set Do Not Disturb Mode

- From the home screen, touch Settings > Sound > Do not disturb preferences.
- 2. Touch the following options as you need:
 - Priority only allows: Set reminders, events, message senders, and callers that you specify as exceptions.
 - Block visual disturbances: Set Do not disturb mode to block visual disturbances. Turn on/off the switches to choose whether to block visual notifications when the screen is on and off.
 - Automatic rules: If you want to turn on and off Do not disturb mode during certain periods or events, use the default time rules and event rule, or touch Add more to set new rules.

Knowing the Basics

Monitoring the Phone Status

The status bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

3G	3G connected	.dl	No signal
H+	HSDPA+ connected	4	Signal strength
4G	4G connected	\	Aeroplane mode
11	Mobile data in use	*	Bluetooth [®] on
1	Vibration on	•	Connected to a Wi-Fi [®] network
0	Do not disturb mode on (Alarms only or Priority only)	6	Speaker on
	Do not disturb mode on (Total silence)	18	Phone microphone off
1	Battery low	0	Location service active
1	Battery full	G	Wired headset connected
	Battery charging	Ö	Alarm set

Managing Notifications

Notification Icons

The status bar at the top of the home screen provides notification icons on the left. Below are some of the icons you may see.

=	New SMS/MMS	$oxed{\Psi}$	USB tethering on
M / M	New message(s) from the Gmail™ app	?	Open Wi-Fi network detected
č	Missed call	6	Call in progress
<u>+</u>	Downloading/ Receiving data	<u>↑</u>	Uploading/Sending data
	Call on hold		

Open/Close the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you are playing music. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down from the top of the screen.
- To close the notification panel, swipe your finger up on the screen or touch the **Back** key.

Using Quick Settings

The Quick Settings make it convenient to view or change the most common settings for your phone.

Swipe down from the status bar and drag the notification panel downwards to open the Quick Settings panel.

To turn on or off settings quickly:

- 1. Open the Quick Settings panel.
- To turn on or off a setting, touch its tile. Touch and hold certain tiles to access more setting options. For example, touch and hold the Wi-Fi tile to open Wi-Fi settings.

To customize the Quick Settings panel:

You can add, remove or rearrange the tiles on the Quick Settings panel.

- 1. Open the Quick Settings panel.
- 2. Touch pelow the tiles and do one of the following.
 - υ Touch and hold a tile and drag it to the position you want.
 - $_{\upsilon}$ Touch and hold a tile and drag it to the **Drag here to remove** section to hide it.
 - $_{\upsilon}$ In the **Drag to add tiles** section, drag a tile up to show it in the Quick Settings panel.

Opening and Switching Apps

Open an App

- 1. Swipe up on the home screen to view apps.
- 2. Slide up or down on the screen and touch an app to open it

NOTE:

Drag the slider on the right side of the screen to the initial letter of the app you need, or touch the search box at the top to search for apps.

Switch Between Recently Opened Apps

- Touch the Recent apps key. The apps you've used recently are displayed as a series of cards. Slide up and down to see all the cards.
- 2. Touch a card to open that app.

NOTES:

- You can swipe a card left to remove it from the screen, which will free up running memory on the phone.
- Double-tap the Recent apps key to switch to the most recent app.

Security

Protecting Your Phone With a Screen Lock

- From the home screen, touch Settings > Security & location > Screen lock.
- 2. Touch None, Swipe, Pattern, PIN, or Password.
 - υ Touch **None** to disable the screen lock.
 - $_{\upsilon}$ Touch \pmb{Swipe} to allow unlocking with a 'swipe' gesture. Anyone can unlock the screen by touching the display and sliding up.
 - Touch Pattern to create a pattern that you must draw to unlock the screen.
 - Touch PIN or Password to set a numeric PIN or a password that you must enter to unlock the screen.



When setting up a Pattern, PIN, or Password lock, you can touch **YES** to enable or **NO** to disable secure start-up, which requires you to unlock before the phone starts up.

Protecting Your Phone With Screen Pinning

You can use the screen pinning feature to keep an app in view, so others cannot switch to other apps or access your personal information.

Turn On Screen Pinning

- 1. From the home screen, touch Settings > Security & location > Screen pinning.
- 2. Touch the Off switch.
- To add security for unpinning, switch on Lock device when unpinning and set up a screen lock as prompted, or switch on Ask for unlock pattern/PIN/password before unpinning if you've set a screen lock already.

Pin a Screen

- 1. Ensure that screen pinning is turned on.
- 2. Open the app you want to keep in view.
- 3. Touch the Recent apps key.
- If there are many app tabs, swipe up to find
 on the front-most tab.
- 5. Touch .

Unpin the Screen

To unpin the screen and return to normal use, touch and hold the **Back** key.

If you have asked for the unlock pattern, PIN or password before unpinning the screen, swipe up on the lock screen and draw the pattern or enter the PIN/password.

Connecting to Networks

Connecting to Mobile Network

Set Access Point Names

To connect to the Internet, you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information

- From the home screen, touch Settings > Network & Internet > Mobile network.
- 2. Touch Access point names > +.
- 3. Touch each item to enter the information you get from your service provider.
- 4. Touch : > Save to complete.
- NOTE:

To set the APN to default settings, on the **APNs** screen touch > **Reset to default**.

Turn on/off Mobile Data Switches

- From the home screen, touch Settings > Network & Internet > Mobile network.
- 2. Turn on/off mobile data related switches.

- υ Switch on/off **Mobile data** to turn on/off mobile data
- $_{\mbox{\tiny U}}$ Switch on/off $\mbox{\bf Roaming}$ to turn on/off mobile data when roaming.
- Switch on/off Data reminder to turn on/off permission prompt before connecting to data when device is powered on.

Connecting to a Wi-Fi Network

- From the home screen, touch Settings > Network & Internet > Wi-Fi.
- 2. Slide the Wi-Fi switch to the **On** position to turn it on.
- 3. Touch a network name to connect to it.
- 4. If the network is secured, enter the password and touch **CONNECT**.

NOTE:

Your phone automatically connects to previously used Wi-Fi networks when they are in range.

Connecting to Devices

Bluetooth[®]

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters (33 feet). The Bluetooth devices must be paired before communication is performed.

- 1. From the home screen, touch Settings > Connected devices > Bluetooth.
- 2. Slide the switch to the On position if Bluetooth is off.
- Touch Pair new device. Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range.
- 4. Touch the device you want to pair with.
- 5. If necessary, confirm that the Bluetooth passkeys are the same between the two devices and touch PAIR. Alternatively, enter a Bluetooth passkey and touch PAIR. Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

NOTES:

When Bluetooth is on, the * icon appears in the status bar.

 The Bluetooth passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys), or refer to the documents for that device

Connecting to a Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in the phone storage or on a removable microSDXC card.

USB tethering will be turned off automatically when you use USB to transfer files between your phone and computer.

Connect Your Phone to the Computer

- 1. Connect your phone to a PC with a USB cable.
- 2. Open the notification panel and touch **USB charging this device** to open the connection options menu.
- 3. Choose one of the following options.
 - □ **Charge this device:** Charge your phone via USB.
 - Transfer files: Transfer files on Windows[®] PC or Mac[®].
 NOTE:

For Windows XP, please install Media Player 11 (or later version) when you use this mode.

□ Transfer photos (PTP): Transfer photos or files if

Transfer files mode is not supported by your computer.

Disconnect Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

Sharing Your Mobile Data Connection

You can use tethering to share your phone's Internet connection with a computer or other device that connects to your phone via USB cable or by Bluetooth.

- From the home screen, touch Settings > Network & Internet > Hotspot & tethering.
- 2. Switch on USB tethering or Bluetooth tethering.
 - For USB tethering, connect your phone to the computer with the supplied USB cable before touching USB tethering.
 - For Bluetooth tethering, pair your phone with another device via Bluetooth and set the device to obtain its network connection via Bluetooth.

To stop sharing your data connection, switch off **USB** tethering or **Bluetooth** tethering.

Phone Calls

Placing Calls

Place a Call by Dialing

- 1. From the home screen, touch ...
- Touch to open the dialer and enter the phone number or the contact name with the dialpad. Touch to delete incorrect digits.

NOTE:

As you enter the phone number or the contact name, your phone searches for matching information in your contacts. If you see the number and contact you want to call, touch it to place the call immediately.

3. Touch below the keypad to dial.

NOTE:

To make an international call, touch and hold the **0** key to enter the plus (+) symbol. Next, enter the country code, followed by the city/area code and then the phone number.

Place a Call From the Call History

- 1. From the home screen, touch -> ().
- 2. Touch \(\sqrt{\sqrt} \) next to an entry in the history list to call back.

Place a Call From a Text Message

While viewing a text message, you can call the sender or phone numbers contained in the message.

- 2. Touch the conversation.
- To call the message sender, touch at the top; to call a number in the message text, touch the number and touch

Call Your Contacts

- From the home screen touch > \(\frac{1}{2} \), or swipe up on the home screen and touch \(\frac{1}{2} \).
- 2. Touch the contact you want to call.
- Touch next to the contact's phone number to place the call.

Answering or Rejecting Calls

Answer a Call

When you receive a phone call, swipe up on the screen to answer the call.

- or -

If the screen is unlocked, touch ANSWER.

NOTE:

To silence the ringer before answering the call, press either end of the **Volume** key.

Reject a Call

When you receive a phone call, swipe down on the screen to reject the call

You can also swipe from at the bottom left to reject the call and select a preset text message or edit one to send to the caller.

- or -

If the screen is unlocked, touch **DECLINE** to reject the call.

Call Options

During a call, you will see a number of on-screen options. Touch an option to select it.

- Touch

 to turn on or off the speaker.
- Touch * to mute or unmute your microphone.
- Touch it to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail) during the call.
- Touch II to put the call on hold.
- Touch \(^t\) to make another call separately from the first call, which is put on hold.

- Touch \$\frac{1}{\tau}\$ to merge the separate calls into a single conference call.
- Touch II to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.
- Touch o to end the current call.

WARNING!

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Call Settings

Call settings let you set fast dial, voicemail, call forwarding, and other settings.

- 1. From the home screen touch <a>\subset.
- 2. Touch i next to Search contacts.
- 3. Touch Settings.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing. You can view and add contact information directly from Phone, Gmail, and message applications.

Creating a Contact

- 1. Swipe up from the home screen and touch <a>\blue{\text{L}}.
- 2. Touch to add a contact.
- 3. The first time you create a contact, choose the default account for new contacts.
- Touch Saving to to choose where to save the contact. You can save the contact on the phone, the nano-SIM card, or a web account (such as Google).
- 5. Enter the contact name, phone numbers, email addresses, and other information.
- 6. Touch SAVE.

Searching for a Contact

- 1. Swipe up from the home screen and touch <a>_.
- 2. Touch \mathbb{Q} at the top of the screen.
- 3. Input the contact name or any information the contact has to search for it. The contacts matched will be listed.

Importing and Exporting Contacts

You can import/export contacts from one account to another, or from/to the phone storage or an installed microSDXC card. This is especially useful when you need to transfer contacts between different devices.

Import/Export Contacts Between Accounts

- 1. Swipe up from the home screen and touch <a>\rightarrow.
- 2. Touch ≡ > Settings > Import/Export contacts > Copy to.
- 3. Touch the account you want to copy contacts data to.
 - NOTE:

Copying contacts from other accounts to the nano-SIM card may lose some information.

4. Touch the contact you want to copy or touch **> Multi** select, check multiple contacts, and touch .

Import Contacts From the Phone Storage or the microSDXC Card

- 1. Swipe up from the home screen and touch <a>_.
- Touch = > Settings > Import/Export contacts > .vcf file > OK.
- Touch = and find the vCard file(s) on the phone storage or microSDXC card and touch one to import contacts.

NOTE:

Touch *** > Show internal storage** if needed to find your vCard file(s).

Export Contacts to the Phone Storage or the microSDXC Card

- 1. Swipe up from the home screen and touch <a>\bigs_.
- Touch = > Settings > Import/Export contacts > Export to .vcf file.
- 3. Touch the contact you want to export or touch **> Multi** select, check multiple contacts, and touch .
- Touch = and select the directory in which the vCard file will be saved. Touch > Show internal storage if needed.
- Edit the file name if needed and touch SAVE to create the file

Setting a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

- Swipe up from the home screen and touch <a>L.
- 2. Touch a contact you want to set a ringtone for.
 - NOTE:

The contact must be saved on the phone or a web account, not the nano-SIM card.

- 3. Touch : > Set ringtone.
- 4. Select a ringtone you like and touch **OK**.
 - NOTE:

In addition to preinstalled ringtones, you can touch Add ringtone to select an audio file in your phone or microSDXC card.

Joining Duplicate Contacts

As your phone synchronizes with multiple online accounts, you may see duplicate entries for the same contact. You can merge all the separate information of a contact into one entry in the Contacts list.

- 1. Swipe up from the home screen and touch <a>\rightarrow.
- 2. Touch a contact, and then touch : > Link.

3. Touch the contact whose information you want to join with the first entry.

The information from the second contact is added to the first contact, and the second contact is no longer displayed in the contacts list.

To join another contact to the main contact, touch > View linked contacts > ADD.

Separating Contact Information

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.

- 1. Swipe up from the home screen and touch <a>\bigs_.
- 2. Touch a joint contact you want to separate.
- 3. Touch > View linked contacts > UNLINK.
- 4. Touch **UNLINK** to confirm.

Setting Call/Message Blocking

The call blocking feature allows you to block calls and messages from certain numbers.

- 1. Swipe up from the home screen and touch <a>\bigs_.
- 2. Touch = > Settings > Blocked numbers.
- 3. Touch : > Block calls / Block messages / Block calls

& messages to select a number from contacts or call log and block calls and/or messages from the number.

NOTE

You can also touch : > Add to add any number for call/message blocking.

NOTES:

- Touch and hold an entry in the Blacklist and select Remove or Edit to unblock the number or change blocking settings.

Gmail

Swipe up on the home screen and touch **Gmail**. Use it to receive and send emails from your Gmail accounts or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

Setting Up the First Email Account

- Open Gmail. If it is the first time the app is opened, touch GOT IT.
- 2. Touch Add an email address and select an email server.
- 3. Follow the on-screen instructions to set up the account.

Writing and Sending an Email

- Open your email Inbox and touch .
- Touch the To field and enter a contact name or email address. Enter a comma, a semi-colon, or a space to separate each recipient. You can also touch : > Add from Contacts to select recipients from your contacts.
- 3. Enter the email subject and compose the email text.
- Touch to add images, videos and other types of files as attachments.
- Touch at the top right of the screen to send the message.

Responding to an Email

You can reply to or forward a message that you receive.

- Open the message you want to reply to or forward from the Inbox.
- 2. Do the following as you need:
 - To reply to the sender, touch (Reply).
 - To reply to the sender and all recipients of the original email, touch (Reply all) or touch next to the sender and select Reply all.
 - To forward the email to someone else, touch (Forward) or touch next to the sender and select Forward.
- 3. Edit your message and touch .

Messages

You can use Messages to exchange text messages (SMS) and multimedia messages (MMS).

Opening the Messages Screen

The Messages screen opens, where you can create a new message or open an ongoing message thread.

- Touch Start chat to write a new text or multimedia message.
- Touch an existing message thread to open the conversation you've had with a certain number.

Sending a Message

- 2. On the Messages screen, touch Start chat at the bottom.
- 3. Add recipients by one of the following ways.
 - Manually enter the recipient's number or the contact name. If the phone presents a few suggestions, touch the one you want to add.
 - υ Touch a contact listed below the To field.
 - $_{\scriptscriptstyle \mathrm{D}}$ $\,$ To add more recipients for a group conversation, touch

- to add more recipients and then touch 2.
- Touch the **Text message** field and enter the message text. Touch to add emoji to your text message.
- If you want to send a multimedia message, touch to add pictures, audio, videos, or location to the message.
- 6. Touch >.
- NOTES:
- You can also include email addresses as recipients for a multimedia message.
- Do not add any attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

Message Options

On the Messages screen, touch and hold a thread and the following options are available.

- Touch to archive the thread. You can touch >
 Archived from the Messages screen to find all archived messages.
- Touch > Delete to delete the thread.
- Touch to add the new number in the thread to your contacts.
- Touch ♥ > OK to block the contact or number in the

thread, and the thread will be archived. You can touch **Blocked contacts** from the Messages screen to find all blocked numbers.

NOTE:

You can touch and hold a thread and touch more to select them, and then choose to archive or delete them.


Message Settings

On the Messages screen, touch : > Settings to change the message settings.

Camera

Taking Pictures

- 1. From the home screen, touch .
- 2. Aim the camera at the subject and make any necessary adjustment. Swipe right to select other camera modes.

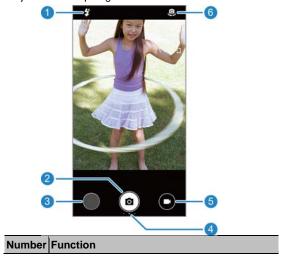

١	lumber	Function
	1	Change the flash setting.
	2	Capture a picture.
	3	View pictures and videos you have taken.
	4	Swipe left for camera settings and right for more camera modes.
	5	Switch to the camcorder.
	6	Switch between the front and back cameras.

WARNING!

Keep a safe distance when using the flash. Do not point the flash towards the eyes of people or animals.

NOTE:

You can spread or pinch on the screen to zoom in or out before taking pictures.

Recording Videos

- 1. From the home screen, touch >
- 2. Aim the camera at the subject.
- 3. Touch to start recording a video.
- 4. Touch to stop recording.

NOTES:

- You can spread or pinch on the screen to zoom in or out before and during recording.
- While the recording is in progress, touch u to pause the recording, or touch to save the frame as a photo.

Using Other Camera Modes

Your Camera app offers other powerful and interesting camera modes. Different mode offers different function or effect. Swipe right to use them.

- Manual: Adjust more camera options for your photo such as ISO, white balance, exposure, and metering.
- Scene: Choose different scene settings optimized for different light conditions or subjects.

NOTE

Manual and scene modes are only available for the back camera.

Gallery

Opening Gallery

From the home screen, touch to view your pictures and videos. Touch to view everything, all photos, all videos, or all albums.

Sharing Pictures and Videos

- Touch and hold a picture or video to select it. If necessary, touch > to see all pictures/videos in a time period or album.
- 2. Touch more items that you want to share.
- 3. Touch \leq and select how you want to share the items.

Retouching Your Pictures

You can edit any photos you took and some other pictures in Gallery. The changed picture is saved in the same album as the original one, while the original is never affected.

- While viewing a picture in full screen, touch the screen and touch .
- 2. Touch the icons along the bottom of the screen to edit the picture.

<i>"</i> .	Apply a frame to the picture.
•	Apply a filter to the picture.
뱂	Adjust brightness, saturation, contrast, vignette, and sharpness for the picture.
Ţ	Crop, rotate, or flip (mirror) the picture.

- If necessary, touch ✓ to keep the change or touch X to cancel it.
- 4. Touch ${\bf SAVE}$ to save the new picture.



Touch $\stackrel{*}{=}$ to show applied effects and undo or redo them.



Playing Your Music

Swipe up from the home screen and touch YT Music. You can follow the prompt to sign in to your YouTube Music account to stream and browse playlists, albums and artists. You can also select **DEVICE FILES ONLY** to play music files on the phone.

- Touch Playlists, Albums, or Artists and select a collection, or touch Songs.
- 2. Touch the song to play it.

Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

- In the music library, touch in next to a song > Add to
 playlist to add the song to a playlist or create a new
 playlist (touch Create new playlist).
- In the music library, touch Playlists to view existing
 playlists. You can then touch next to the playlist name
 to play the list, add the songs to other playlists, edit the
 playlist, or delete it.

Touch a playlist to view its content. You can then touch a next to a song > Remove from playlist to remove the song from the playlist.

Settings

From the home screen touch **Settings**. The **Settings** app contains most of the tools for customizing and configuring your phone. In some menus, you may need to touch **Advanced** to get all the options.

Network & Internet

Wi-Fi

Open **Settings** and touch **Network & Internet > Wi-Fi**. You can turn Wi-Fi on or off and configure your Wi-Fi connections. See <u>Connecting to a Wi-Fi Network</u>.

Mobile Network

Open **Settings** and touch **Network & Internet > Mobile network** to control mobile data, set access point names and other network options. See <u>Connecting to Mobile Network</u>.

Data Usage

Open Settings and touch Network & Internet > Data usage to check and manage mobile data use. You can view and restrict Wi-Fi data usage as well. Touch Data Saver to enable or disable it, which prevents apps from using data connection in the background. Apps you're currently using can access data but may do so less frequently when Data

saver is enabled. You can touch **Unrestricted data** to allow some apps to always have data connection access, even when Data saver is enabled.



The data usage is measured by your phone, and your carrier's data usage accounting may differ.

Hotspot & Tethering

Open Settings and touch Network & Internet > Hotspot & tethering to share your phone's mobile data connection with PCs or other devices. See Sharing Your Mobile Data Connection.

VPN

Open **Settings** and touch **Network & Internet > VPN** to set up and connect to virtual private networks.

Aeroplane Mode

Open Settings and touch Network & Internet > Aeroplane mode to turn aeroplane mode on or off. All the phone's radios that transmit voice or data are turned off when aeroplane mode is on.

Connected Devices

Open **Settings** and touch **Connected devices > Bluetooth**. You can turn Bluetooth on or off and configure your Bluetooth connections. See <u>Bluetooth</u>.

You can also touch **Connected devices > Printing** to use the default printing service or other printer plug-ins installed from the Google Play Store or your printer manufacturer.

Apps & Notifications

App Info

Open **Settings** and touch **Apps & notifications** to see recently opened apps or all apps installed on your phone and manage them. Touch an app to see its information and configure the available options.

Notifications

Open **Settings** and touch **Apps & notifications > Notifications** to manage app notifications.

App Permissions

Open Settings and touch Apps & notifications > App permissions to check what apps have been allowed to access certain permissions. You can also change the app permissions.

WARNING!

Changing the app permissions may result in the app not working correctly or as originally intended.

Auto-run Manager

Open Settings and touch Apps & notifications > Advanced > Auto-run Manager to prevent apps from running automatically, which helps to improve device performance and save battery.

NOTE:

Once an app is prevented from running automatically, you may not receive push notifications from it on time.

Default Apps

Open Settings and touch Apps & notifications > Advanced > Default apps to select the default app for voice assistant and input, web browsing, phone calling, messaging, etc. Touch Opening links to set Instant apps options, or touch an installed app to check its supported links and set whether to open the links in the app and clear the app's defaults.

Do Not Disturb Preferences

Open **Settings** and touch **Apps & notifications > Advanced > Do Not Disturb preferences** to set options for Do not disturb mode. See <u>Set Do Not Disturb Mode</u>.

Special App Access

Open **Settings** and touch **Apps & notifications > Advanced > Special app access** to set special access options of apps.

Battery

Open **Settings** and touch **Battery** to view the battery level, check what has been using the battery, enable battery saver, or optimize apps to improve battery life.

Display

Open **Settings** and touch **Display** to configure the display options, including brightness level, wallpaper, screen sleep time, font/display size, etc.

Scheduled Power On/Off

Open Settings and touch Scheduled power on/off > Power on or Power off to set the day and time when the phone automatically powers on or off. Check or uncheck Power on / Power off to turn the features on or off.

Sound

Open **Settings** and touch **Sound**. You can adjust different types of volume, set Do not disturb options (see <u>Set Do Not Disturb Mode</u>), set up ringtone and notification/alarm sound, or select system sounds and vibration.

Storage

Open **Settings** and touch **Storage** to view the memory information of the internal phone storage and the microSDXC card (if one is installed).

- Device storage: Touch Internal shared storage to get a
 detailed breakdown of space usage by type. Touch a data
 type to see more information or delete the files you do not
 need.
- Portable storage: Safely mount, unmount (eject), and format your microSDXC card.

Security & Location

Open **Settings** and touch **Security & location** to configure options that help keep your phone and data safe, and manage location services, which help your phone and apps determine your location.

• Google Play Protect: Google Play Protect regularly

- checks your apps and phone for harmful behaviour and warns you about any detected potential harm.
- Find My Device: Use Find My Device to locate, lock, or wipe your lost device remotely. The lost device must be signed in to a Google account.
- Security update: Check for security update of your system.
- Screen lock: Disable the screen lock or enable it with swipe, pattern, PIN, or password. See <u>Protecting Your</u> <u>Phone With a Screen Lock</u>.

Touch seide Screen lock to set its options.

- Lock screen preferences: Set notification display preference and message for the lock screen.
- Smart Lock: Keep the phone unlocked when connected to trusted devices, in trusted places, or unlocked when your phone is being carried on the body.

NOTE:

You need to sign in to your Google account on the phone to use all the **Smart Lock** features.

 Location: Manage location services, which help your phone and apps determine your location. To use location-related applications, such as finding your location on Google Maps, you must have location services enabled on your phone.

- Show passwords: Display passwords as you enter them
- Device admin apps: View or deactivate apps you have authorised to be device administrators.
- SIM card lock:
 - Lock SIM card: Activate or deactivate the PIN lock to require PIN before accessing the nano-SIM card.
 - υ **Change SIM PIN:** Change the PIN used to access the nano-SIM card.

NOTE:

Put all your confidential passwords in a safe place for future use. If you enter the wrong SIM PIN more times than allowed, your nano-SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the nano-SIM card.

- Encryption & credentials: Encrypt the data on your phone and set the credential storage options.
- Trust agents: View or deactivate trust agents.
- Screen pinning: Keep a screen of your choice in view, so that others cannot switch to other apps and access your personal information. See <u>Protecting Your Phone</u> With Screen Pinning.
- Apps with usage access: Turn on or off some apps' access to your phone usage information.

Users & Accounts

Open **Settings** and touch **Users & accounts** to manage your accounts and synchronization. Touch **Add account** to sign in to or create accounts on your phone. Touch an account you have added to adjust its settings. You can also touch **Emergency information** to edit your medical information and emergency contacts for first responders to read from your lock screen.

Accessibility

Open **Settings** and touch **Accessibility** to configure accessibility plug-ins and services on your phone, such as using **Color inversion** or **Display size** for users with sight problems.

Google

Open **Settings** and touch **Google** to manage settings for Google apps and services.

System

Languages & Input

Open **Settings** and touch **System > Languages & input** to configure options related to system language, input methods

and assistance, speech input and output as well as mouse/trackpad input.

Gestures

Open **Settings** and touch **System > Gestures > Jump to camera** to turn on/off the feature that opens camera when you press the **Power** key twice in any screen.

Date & Time

Open **Settings** and touch **System > Date & time** to set date, time, time zone, and the time format. You can also use network-provided data.

Backup

Open **Settings** and touch **System > Backup** to manage data backup options. To easily restore or switch phones at any time, you can enable automatic backup to Google Drive of important data. You need to sign in to your Google account to use this feature.

Reset Options

Open **Settings** and touch **System > Reset options** to reset network settings, app preferences, or the phone to factory default status.

About Phone

Open **Settings** and touch **System > About phone** to view phone status, legal information, and other information.

Software Update

Open **Settings** and touch **Software update** to check for system updates and install them when they become available.

For Your Safety

General Safety

General Salety			
	Don't make or receive phone calls while driving. Never text while driving.		
	Keep your phone at least 5 mm away from your body while making calls.		
**	Small parts may cause choking.		
A A	Your phone can produce a loud sound.		
1)P)	To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your phone near your ear while the loudspeaker is in use.		
É	Avoid contact with anything magnetic.		
	Keep away from pacemakers and other electronic medical devices.		
4	Turn off when asked to in hospitals and medical facilities.		



Radio Frequency (RF) Energy

General Statement on RF Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

FCC RF Exposure Information (SAR)

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 0.4 inches (10 mm). Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit

of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

This device is complied with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement methods and procedures specified in IEEE1528.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: SRQ-ZTEA32019V.

For this device, the highest reported SAR value for usage against the head is **0.779W/kg**, and for usage near the body is **0.961W/kg**.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 0.4 inches (10 mm) between the unit and the human body. Carry this device at least 0.4 inches (10 mm) away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation

of 0.4 inches (10 mm) between this device and your body.

RF exposure compliance with any body-worn accessory that contains metal was not tested and certified, and use of such body-worn accessory should be avoided.

FCC Regulations

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to 139 radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and

receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Distractions

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep them in a clean place.
- Keep the screen and camera lens clean. An unclean screen or camera lens may slow down the phone's reaction to your operations or interfere with the image quality.
- Clean your phone and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.

- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the phone or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do so.
- Do not place your phone inside or near heating equipment or high-pressure containers, such as water heaters, microwave ovens, or hot cooking utensils.
 Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Battery Safety

- Using ZTE-unapproved or incompatible battery, charger or power adapter may damage your device, shorten its lifespan or cause a fire, explosion or other hazards.
- The recommended operating temperatures are 0 °C to 35 °C and the storage temperatures are -20 °C to +45 °C.
 Extreme temperatures can damage the device and reduce the charging capacity and lifespan of your device and battery.
- Do not place the device or the battery in or near heating

equipment, such as microwave ovens, stoves or radiators. Keep the device and the battery away from excessive heat and direct sunlight. If not, the device or the battery may overheat and cause explosion or fire.

- Please disconnect the charger when the battery is fully charged. Overcharging may shorten the battery life.
- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not throw the battery into a fire to avoid explosion.
- Do not disassemble, squeeze or puncture the battery, as this can cause explosion or fire.
- When not using the battery for a long period, please charge the battery about half then remove the battery from your device and store it in a cool dry place.
- If the battery damages or shows signs of swelling or leakage, please stop use immediately and contact ZTE or ZTE authorized service provider for replacement.
- Return the worn-out battery to the provider or put it in the designated recycle place. Do not put it in household waste.
- There is a risk of explosion if the wrong battery model is replaced.

WARNING!

If the battery is broken, you should avoid contact with the

contents inside. If they contaminate the skin, immediately rinse with plenty of water and seek medical help when necessary.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the metallic connectors of the nano-SIM card and the ${\sf microSDXC}$ card.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Airbags

Do not place a phone in the area over an airbag or in the airbag deployment area, as an airbag inflates with great force and serious injury could result. Store the phone in a safe and secure area before driving your vehicle.

Seizures/ Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching videos. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician. To reduce the risk of blackouts or seizures, use your phone in a well-lit room and take frequent breaks.

Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

• Do not grip the phone too tightly.

- · Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take frequent breaks to stretch and relax.

Emergency Calls

This phone, like any other wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the charging jack. Never puncture the surface of the phone with sharp objects.

Connection to Vehicles

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its accessories.

If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Radio Frequency Interference

General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Please consult your doctor and the device manufacturers to determine if the operation of your phone may interfere with the operation of your medical devices.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm (6 inches) be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Medical Equipment

Turn off your wireless device when you are requested to do so in hospitals, clinics or healthcare facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices onboard the aircraft and enable aeroplane mode of your phone when boarding an aircraft.

Interference in Vehicles

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas where signs are posted to power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

Disposal of Your Old Appliance



- When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's recycling information based on WEEE directive, please send an e-mail to weee@zte.com.cn