

120.0 mm

84.6 mm

**WIRELESS CHARGER**  
**Instruction Manual**  
**XY-PRO17-1**

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL.**


**In the Box**

- EAC-TR23 Trident 15W Wireless Charge with FSC® Cork & Recycled Plastic (x1)
- USB Type-C Charging Cable (x1)
- Instruction Manual (x1)

**Safety Precautions**

- This product is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or power cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or power cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the power cable to disconnect, or use the cable as a handle.
- Do not use if device or power cable is damaged. If device or power cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.

**Product**

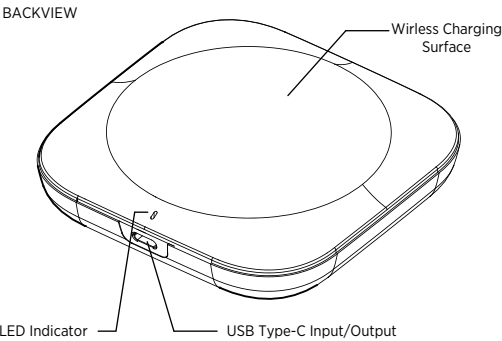

**Wireless Charging Instructions**

- Plug one end of the included charging cable into the USB Type-C charging port on the wireless charger.
- Plug the other end of the cable into a USB Type-C power source, such as the USB Type-C port on a computer or into a certified USB Type-C adapter (not included), and plug into a wall socket.
- The LED indicator will **flash RED & BLUE 3 times**, then **glow RED** to indicate the wireless charger is in standby mode and ready to begin charge.
- Place a wireless charging enabled mobile device on the wireless charging surface, the mobile device will begin to charge automatically.
- The LED indicator will **glow BLUE** to indicate that your device is charging properly.
- If your device does not begin to charge, try repositioning your device on the wireless charging surface. You may need to remove the case of your device to charge properly.

- Remove your device from the wireless charging surface when it is fully charged.
- Note:**
- *If the LED indicator is flashing **RED** rapidly when the wireless charger is in use, either the device is NOT wireless charging enabled, or there is an object between the device and charging pad interfering with the charging process.*
  - *To achieve a better wireless charging experience, please use 18W, 20W or higher power adapter (not included).*

**Note on Safety Features:**

The wireless charging will automatically power **OFF** when the wireless charging surface is overheated or when a metal object, such as a coin, is placed on the wireless charging surface. The LED indicator will **flash RED rapidly** to warn of automatic shutoff.

**Tech Specifications**

- Power Input (PD/QC): DC 5V/3A, 9V/2A
- Wireless Charging Output: 15W (Max)
- Working Temperature: 32°F - 122°F (0°C - 50°C)

**FCC Information**

This device complies with Part 15 of the FCC Rules.

**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.



**FC**  
Made in China

