



PMC-10

QUICK START GUIDE

4.3" Water-Proof Media Center with
AM/FM/WB Built-in Bluetooth, IPX6

 
This Quick Start Guide gives you the basics to start
using your PMC-10 Please visit www.audioformz.com
to download a complete owner's manual or call
customer service at 1-903-873-5902
(Monday-Friday,9AM-5PM PST).



Customer Service Toll Free:1-903-873-5902


USB Operation

To play audio files or MP3 files from a USB device, insert the
device and playback will begin automatically. To return USB
playback from another mode of operation, select the
corresponding icon from the Main Menu.

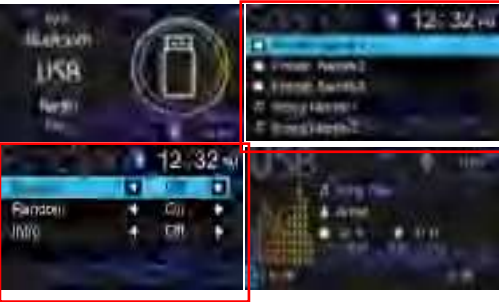

Radio Operation

 Press Mode button to select Radio from Main Menu screen.
Press Select while in Radio mode to enter the Preset Menu.
*Use the volume knob to scroll/adjust and the select button to choose

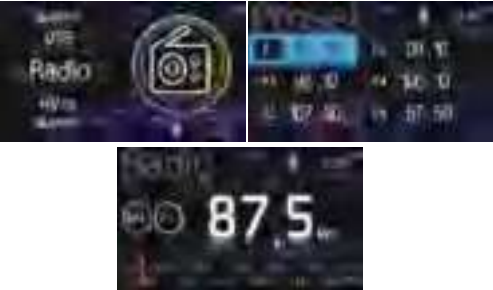

One-Year Limited Warranty

One-Year Limited Warranty
This warranty gives you specific legal rights. You may also have other
rights which vary from state to state.

Audioformz warrants this product to the original purchaser to be free
from defects in material and workmanship for a period of one year
from the date of the original purchase.

Audioformz agrees, at our option, during the warranty period, to repair
any defect in material or workmanship or to furnish an equal new,
renewed or comparable product (whichever is deemed necessary) in
exchange without charges, subject to verification of the defect or
malfunction and proof of the date of purchase. Subsequent
replacement products are warranted for the balance of the original
warranty period.

Who is covered? This warranty is extended to the original retail
purchase for products purchased from an authorized Audioformz
dealer and used in the U.S.A

What is covered? This warranty covers all defects in material and
workmanship in this product. The following are not covered: software,
installation/removal costs. Damage resulting from accident, misuse,
abuse, neglect, product modification, improper installation, incorrect
line voltage, unauthorized repair or failure to follow instructions
supplied with the product, or damage occurring during return shipment
of the product.

- Factory defects include:
- MID/Tweeter not playing or distorting
- Glue/adhesive separating or not holding correctly
- Tinsel leads not attached/soldered correctly
- LED/LCD not working out-of-box
- No Power/No Audio

What to do?

1.Before you call for service, check the troubleshooting guide in your
owner's manual. A slight adjusting of any custom controls may save
you a service call.

 
2.If you require service during the warranty period, you must carefully
pack the product (Preferably in the original package) and ship it by
prepaid transportation with a copy of the original receipt from the
retailer to an authorized service center.

3.Please describe your problem in writing and include your name, a
return UPS shipping address (P.O. Box not acceptable), and a daytime
phone number with your shipment.

4.For more information and for the location of the nearest authorized
service center please contact us by one of the following methods:

- Call us at 1-903-873-5902
- E-mail us at support@audioformz.com

Installation

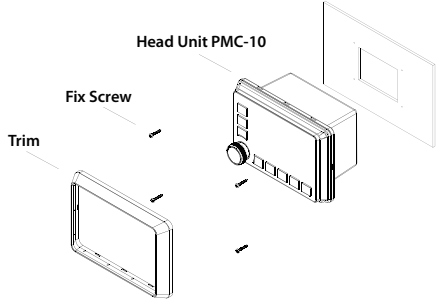


TYPICAL FRONT-LOAD DIN MOUNTING METHOD

Copyright and Trademark notes


The Bluetooth word mark and logos are registered
trademarks owned by the Bluetooth SIG, Inc.
Other trademarks and trade names are those of their
respective owners.

 Wiring Diagram-Inputs/Outputs

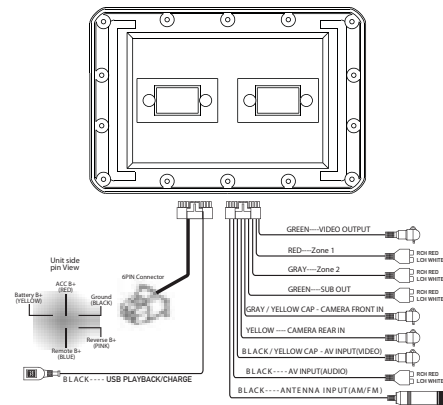

AV Input Operation

 Press Mode button to select AV In from Main Menu screen.

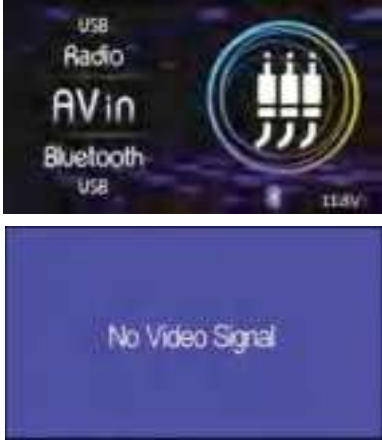

Control Locations



- | | |
|--|--------------------|
| 1. POWER/MUTE | 5. ZONE SELECT |
| 2. SOURCE | 6. TUNE/TRACK Down |
| 3. MENU/ESC | 7. PLAY/PAUSE/BAND |
| 4. VOLUME UP/DOWN,
SELECT/PRESET MENU | 8. TRACK/TUNE UP |
| | 9. CAMERA |

Main Menu

Press the Mode button to select from the corresponding
modes: USB, Radio, AV in, Camera, Bluetooth.
*Use the volume knob to scroll and Select button to choose



Bluetooth Operation

Press Mode button to select AV from Main Menu screen.
Bluetooth source is for music streaming only.



Pairing and Connecting

Before using Bluetooth functions, you must pair your mobile
phone to the PMC-10 unit. The device name is "PMC-10".
To ensure the best reception for pairing and re-connection,
please make sure the mobile phone battery is fully charged
before you begin.

- Try to perform pairing within a few minutes of the mobile
phone being turned on.
- Once the unit has been paired with the mobile phone, the
unit's model number,"PMC-10",will be displayed on the
mobile phone.
- To achieve the best performance, always keep the mobile
phone within 10 feet (3 meters) of the unit.
- Always keep a clear path between the mobile phone and
the unit. Never place a metal object of any other obstacle
between the mobile phone and the unit.
- Some mobile phones may have a "Power Saving Mode"
option. PLEASE DO NOT use the power saving mode with
the PMC-10.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is
subject to the following two conditions:

- (1) This device may not cause harmful interference,
- (2) This device must accept any interference received, including
interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved
by the party responsible for compliance could void the user's authority
to operate the equipment.

Note: This equipment has been tested and found to comply with the
limits for a class B digital device, pursuant to Part15 of the FCC Rules.
These limits are designed to provide reasonable protection against
harmful interference in a residential installation. This equipment
generates, uses and can radiate radio frequency energy and, if not
installed and used in accordance with the instructions, may cause
harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a
particular installation. If this equipment does cause harmful
interference to radio or television reception, which can be determined
by turning the equipment off and on, the user is encouraged to try to
correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that
to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF war ni ng f or Mbi l e devi ce:

Thi sequi pment compl i eswi thFCCr adi at i onexposur el i mi t sset f or t hf or a
n uncontr ol l edenvi ronment .

Thi sequi pment shoul dbei nst al l edandoper at edwi t h
mi ni mumdi st ance20cm bet weent her adi at or &your body.

Settings Menu

Press the Menu button to enter into the system menus.
*Use the volume knob to scroll/adjust and the select button to choose.

