

Inspiron 11-3148 2-in-1


Quick Start Guide

Translated Text Here
Translated Text Here
Translated Text Here
Translated Text Here




1 Connect the power adapter and press the power button

Connect the power adapter and press the power button
Connect the power adapter and press the power button
Connect the power adapter and press the power button
Connect the power adapter and press the power button

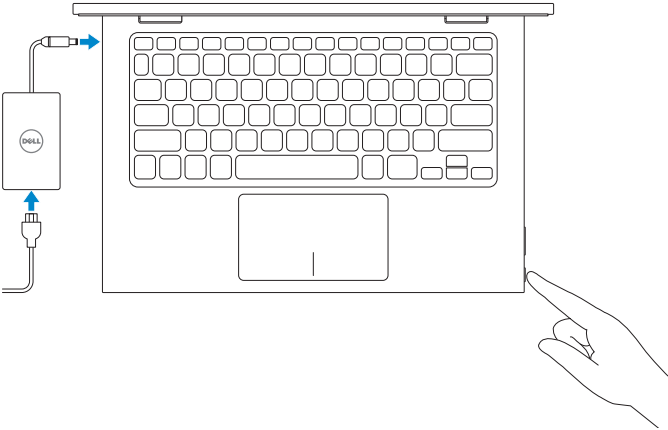

2 Finish Windows setup


Finish Windows setup | Finish Windows setup
Finish Windows setup | Finish Windows setup

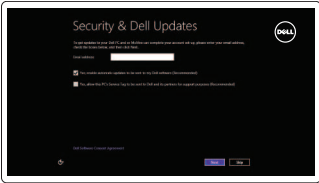

Enable security and updates
Enable security and updates
Enable security and updates
Enable security and updates



Connect to your network
Connect to your network
Connect to your network
Connect to your network

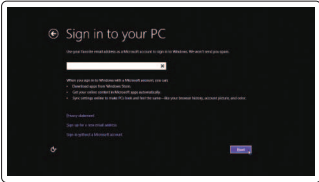

Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account

3 Explore resources

Explore resources | Explore resources
Explore resources | Explore resources



Help and Tips
Help and Tips | Help and Tips
Help and Tips | Help and Tips



My Dell
My Dell | My Dell
My Dell | My Dell



Register your computer
Register your computer | Register your computer
Register your computer | Register your computer

Shortcut keys

Shortcut keys | Shortcut keys
Shortcut keys | Shortcut keys



Mute audio
Mute audio | Mute audio
Mute audio | Mute audio



Decrease volume
Decrease volume | Decrease volume
Decrease volume | Decrease volume



Increase volume
Increase volume | Increase volume
Increase volume | Increase volume



Play/Pause
Play/Pause | Play/Pause
Play/Pause | Play/Pause



Open Search charm
Open Search charm | Open Search charm
Open Search charm | Open Search charm



Open Share charm
Open Share charm | Open Share charm
Open Share charm | Open Share charm



Open Devices charm
Open Devices charm | Open Devices charm
Open Devices charm | Open Devices charm



Open Settings charm
Open Settings charm | Open Settings charm
Open Settings charm | Open Settings charm



List recently-used apps
List recently-used apps | List recently-used apps
List recently-used apps | List recently-used apps



Display active app menu-bar
Display active app menu-bar | Display active app menu-bar
Display active app menu-bar | Display active app menu-bar



Decrease brightness
Decrease brightness | Decrease brightness
Decrease brightness | Decrease brightness



Increase brightness
Increase brightness | Increase brightness
Increase brightness | Increase brightness



Turn off/on wireless
Turn off/on wireless | Turn off/on wireless
Turn off/on wireless | Turn off/on wireless

NOTE: For more information, see *Specifications* at dell.com/support.
NOTE: For more information, see *Specifications* at dell.com/support.
NOTE: For more information, see *Specifications* at dell.com/support.
NOTE: For more information, see *Specifications* at dell.com/support.

Product support and manuals

Product support and manuals

Product support and manuals

Product support and manuals

Product support and manuals

Contact Dell

Contact Dell | Contact Dell

Contact Dell | Contact Dell

Regulatory and safety

Regulatory and safety | Regulatory and safety

Regulatory and safety | Regulatory and safety

Regulatory model

Regulatory model | Regulatory model

Regulatory model | Regulatory model

Regulatory type

Regulatory type | Regulatory type

Regulatory type | Regulatory type

Computer model

Computer model | Computer model

Computer model | Computer model

dell.com/support

dell.com/support/manuals

dell.com/windows8

dell.com/contactdell

dell.com/regulatory_compliance

P20T

P20T002

Inspiron 11-3148

Información para NOM, o Norma Oficial Mexicana



La información que se proporciona a continuación se mostrará en los dispositivos que se describen en este documento, en conformidad con los requisitos de la Norma Oficial Mexicana (NOM):

Importador:
Dell Mexico S.A. de C.V.
AV PASEO DE LA REFORMA NO 2620 PISO 11
COL. LOMAS ALTAS
MEXICO DF CP 11950

Modelo	P20T
Voltaje de alimentación	100 VAC–240 VAC
Frecuencia	50 Hz–60 Hz
Consumo de corriente de entrada	1.60 A
Voltaje de salida	19,50 VDC
Consumo de corriente de salida	3,34 A
País de origen	Hecho en China

Features

Features | Features | Features | Features

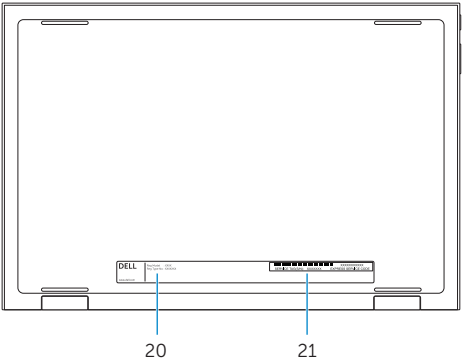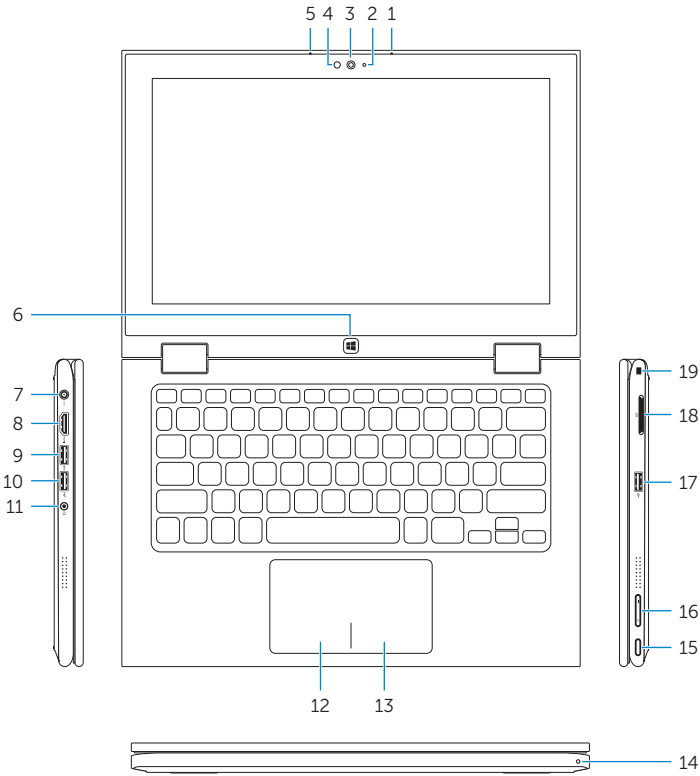

1. Right microphone

2. Camera-status light

3. Camera

4. Ambient-light sensor

5. Left microphone

6. Windows button

7. Power-adapter port

8. HDMI port

9. USB 3.0 port
10. USB 2.0 port

11. Headset port

12. Left-click area

13. Right-click area

14. Power and battery-status light

15. Power button

16. Volume-control buttons (2)
17. USB 2.0 port

18. Media-card reader

19. Security-cable slot

20. Regulatory label

21. Service Tag label

1. Right microphone

2. Camera-status light

3. Camera

4. Ambient-light sensor

5. Left microphone

6. Windows button

7. Power-adapter port

8. HDMI port

9. USB 3.0 port
10. USB 2.0 port

11. Headset port

12. Left-click area

13. Right-click area

14. Power and battery-status light

15. Power button

16. Volume-control buttons (2)
17. USB 2.0 port

18. Media-card reader

19. Security-cable slot

20. Regulatory label

21. Service Tag label

1. Right microphone

2. Camera-status light

3. Camera

4. Ambient-light sensor

5. Left microphone

6. Windows button

7. Power-adapter port

8. HDMI port

9. USB 3.0 port
10. USB 2.0 port

11. Headset port

12. Left-click area

13. Right-click area

14. Power and battery-status light

15. Power button

16. Volume-control buttons (2)
17. USB 2.0 port

18. Media-card reader

19. Security-cable slot

20. Regulatory label

21. Service Tag label

1. Right microphone

2. Camera-status light

3. Camera

4. Ambient-light sensor

5. Left microphone

6. Windows button

7. Power-adapter port

8. HDMI port

9. USB 3.0 port
10. USB 2.0 port

11. Headset port

12. Left-click area

13. Right-click area

14. Power and battery-status light

15. Power button

16. Volume-control buttons (2)
17. USB 2.0 port

18. Media-card reader

19. Security-cable slot

20. Regulatory label

21. Service Tag label

1. Right microphone

2. Camera-status light

3. Camera

4. Ambient-light sensor

5. Left microphone

6. Windows button

7. Power-adapter port

8. HDMI port

9. USB 3.0 port
10. USB 2.0 port

11. Headset port

12. Left-click area

13. Right-click area

14. Power and battery-status light

15. Power button

16. Volume-control buttons (2)
17. USB 2.0 port

18. Media-card reader

19. Security-cable slot

20. Regulatory label


21. Service Tag label

Modes

Modes | Modes | Modes | Modes


Notebook

Notebook | Notebook
Notebook | Notebook

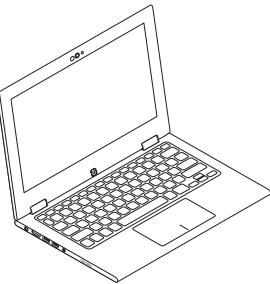


Tablet

Tablet | Tablet
Tablet | Tablet

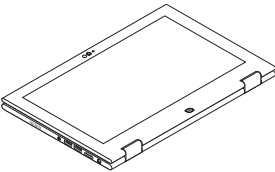

Tablet Stand

Tablet Stand | Tablet Stand
Tablet Stand | Tablet Stand

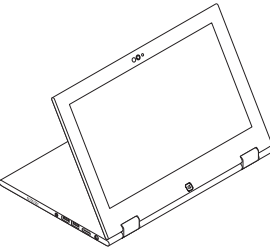

Tent

Tent | Tent
Tent | Tent

