

AUKEY

User Manual

Wireless Speaker & Tower Subwoofer Set

Thank you for purchasing the AUKEY SK-M39 Wireless Speaker & Tower Subwoofer Set. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

 
Package Contents

 
Wireless Speaker	3.5mm Audio Cable
Tower Subwoofer	User Manual
Micro-USB Cable	Warranty Card

Specifications

Model	SK-M39
Technology	BT 2.1, A2DP, AVRCP
Audio Output Power	2 x 7.5W (speaker), 10W (subwoofer)
Frequency Response	100Hz-18KHz
Signal-to-Noise Ratio	>75dB
Input	DC 5V 1A
Play Time	8 hours (speaker)
Charging Time	6 hours
Battery Type	Li-ion (2000mAh)
Frequency Band	2.4GHz - 2.48GHz
Operating Range	Up to 10m / 33ft
Dimensions	150 x 150 x 125mm / 5.91" x 5.91" x 4.92" (speaker) 136 x 136 x 280mm / 5.35" x 5.35" x 11.02" (subwoofer)
Weight	2.75kg / 6.06lb


Product Diagram

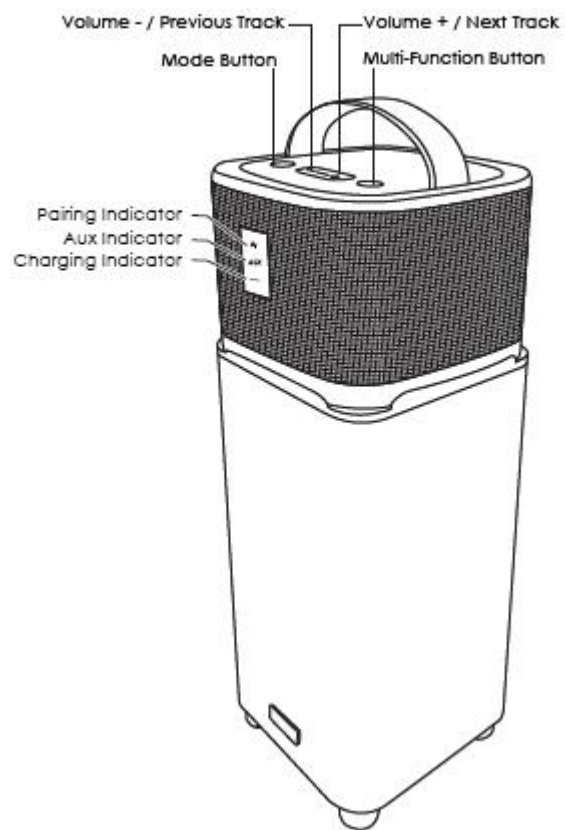

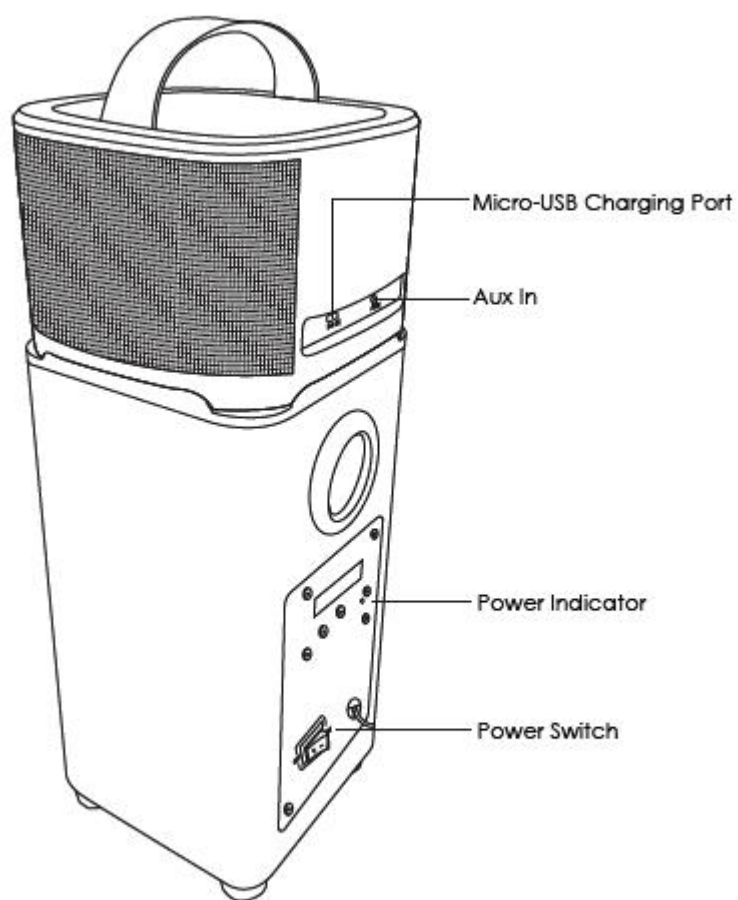

Charging

 To charge the wireless speaker, connect it to a USB charger or charging port with the included micro-USB cable. When the red charging indicator turns green, your speaker is fully charged and ready for use. If you want to use the subwoofer with your speaker, put it on the subwoofer (facing the same way). Then connect the power cable on the subwoofer to an AC outlet and turn on the subwoofer power switch. This will also charge the wireless master speaker. When the red charging indicator turns green, your speaker is fully charged.

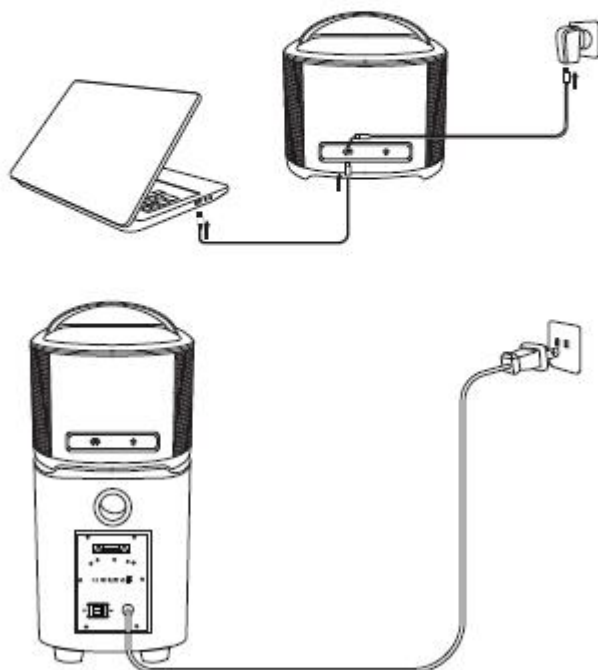

Powering On / Off

- To power on, press and hold the multi-function button on the speaker for 2 seconds and the pairing indicator will turn blue. If you want to use the subwoofer too, remember to turn on the subwoofer power switch
- To power off, press and hold the multi-function button on the speaker for 3 seconds and the pairing indicator will turn off. Turn off the subwoofer power switch

Pairing

1. When you turn on the speaker, it will automatically enter pairing mode and the pairing indicator will start to flash blue rapidly
2. Activate the pairing function on your phone or other compatible device and select "AUKEY SK-M39"
3. If a code or pin is required for pairing, enter "0000"
4. When successfully paired, the pairing indicator will flash blue once every second

Notes

- The speaker will automatically shut down after 10 minutes in pairing mode if no devices are paired
- If your paired device is switched off or manually disconnected, the speaker will enter connection mode and automatically shut down after 10 minutes
- If the speaker or connected device exceeds the operating range, the speaker will disconnect. The connection to the last successfully connected device will be re-established once you re-enter wireless range within 10 minutes. To connect to other devices, please repeat the previous "Pairing" steps

Playing Audio via Aux Connection

Connect the SK-M39 to your PC, laptop, or other device with Aux output using the included 3.5mm audio cable. Press and hold the multi-function button to turn on and the Aux indicator will light up blue.

Notes

- The speaker will disconnect from your phone or other paired devices when an audio cable is plugged into the Aux in jack. Short-press the mode button to switch back to wireless mode
- When playing audio through the Aux in jack, short-press the multi-function button to pause or resume. Next / previous track and volume adjustment on the speaker are disabled in Aux mode
- For some computers, you may need to access the audio control panel to manually set the speaker as the default audio device

Controls & LED Indicators

Functions	Instructions
Switch modes	Short-press the mode button
Adjust volume	Short-press volume + / -
Next / Previous track	Press and hold volume + / -
Play / Pause	Short-press multi-function button

LED Indicator	Status
Pairing indicator flashes blue rapidly	Pairing mode
Pairing indicator flashes blue once every second	Connected
Pairing indicator stays blue	Playing music
Aux indicator flashes blue once every second	Aux mode
Aux indicator stays blue	Playing music via Aux
Charging indicator is red	Charging
Charging indicator is green	Fully charged

Product Care & Use

- Keep away from liquids, extreme heat, and strong magnetic fields
- Do not use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss
- Do not repair, disassemble, or modify this product

Warranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US orders: support.us@aukey.com

Amazon EU orders: support.eu@aukey.com

Amazon CA orders: support.ca@aukey.com

Amazon JP orders: support.jp@aukey.com

*Please note, AUKEY can only provide after sales service for products purchased directly from AUKEY. If you have purchased from a different seller, please contact them directly for service or warranty issues.

Notice for US

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

FC C WARN

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna
- Increase the separation between equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio / TV technician for help