



## User's Manual

### ANC Key

Short press: Switch the Transparency mode/ANC mode/ANC off  
When in ANC mode, double press to enter adaptive ANC mode, there is beep sound. (press one more time to exit to ANC off mode)

### ULT key

Short press: Switch between multiple sound effects EQ: Vocal, High pitch, Bass (Note: switch EQ freely only in ANC of mode)  
Quick double press :3D surround sound (Note: switch 3D surround sound freely under any mode)

You can also insert in 3.5mm cable and connect your mobile with the headphone and listen to the music from your mobile or computer.

## 05 Specifications

HYBRID ANC+ENC WITH 5 MICS UP TO 40 DB	
Bluetooth Version	V5.4
Chipset	JL7018
Battery	600 mAh Rechargeable Lithium Battery
Driver Unit	40MM
Play Time	Up to 45 Hours ANC Off
Sensitivity	110+3dB S.P.L at 1KHZ
Impedance	32
Frequency Response	20Hz-20KHz
Play Time	Up to 30h (100% volume ANC ON), up to 45h (100% volume ANC off)
Accessories	USB-C charging cable 50cm length, 100cm AUX cable

## 01 Features

- Metal band metal headphone
- Voice Assistant Compatibility
- Touch Controls on Earcups

## 02 How to use

First-Time Connection:

Search for Electro Sound Core and tap to connect.

## 03 Multi-Point Connection

1. Power on earbuds and they will auto become connectable. Connect them to Device A then turn off Bluetooth on Device A.
2. On Device B, search for Electro Sound Core and tap to connect.
3. On Device A, tap Electro Sound Core to finish Multi-Point Connection.

## 04 Functions

### ⏻ Power key

Short press to play/pause  
Short press to answer/end call  
Quickly double press to activate voice assistant  
Long press to power on/off/reject the call

### + Key

Short press to volume +  
Long press to next song

### - Key

Short press to volume -  
Long press to last song

## 06 LED Indicator

When charging, the red light will be turn on.

When charging fully, the red light will be turn off.

## 07 Prohibit ⚠

1. It is prohibited to disassemble, impact, squeeze the battery, or put it into fire or insert foreign objects to avoid causing battery leakage and overheating Ignite or explode.
2. This device is not a toy and children should use it under adult supervision. The accessories for this device are required.
- 3.If there is severe swelling, it is prohibited to continue using.
4. Do not place in a high-temperature environment and keep away from sources of fire.
5. Do not use the battery after immersion in water or other liquids.

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment