


# Yealink

## DECT Dongle Kit DD10K

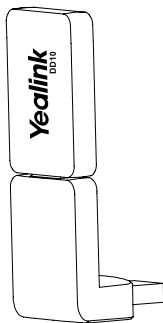

 
### Quick Start Guide(V1.0)

## Introduction

DECT dongle kit DD10K helps you turn the SIP-T41S/T42S IP phone to the DECT desk phone (hereinafter referred to as DD phone). After that, you can use the IP phone as a handset for a base station.

## Packaging Contents

The following items are included in your package. If you find anything missing, contact your system administrator.




DD10K



Quick Start Guide

## Assembling the DD10K

Assembling the DD10K, as shown below:

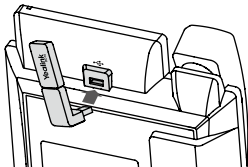

### To assemble the DD10K:

1. Insert the DD10K into the USB port on the back of the phone.

## Getting Started

### DD Phone Mode

Before using a IP phone as a DECT desk phone, you should enable the DD phone mode first.

#### **To enable the DD phone mode when the IP phone is powered off:**

1. Assemble the DD10K.
2. Power on the IP phone.

The DD phone mode is enabled automatically after the IP phone is started up.

#### **To enable the DD phone mode when the IP phone is powered on:**

1. Assemble the DD10K.


The LCD screen prompts "DECT dongle is inserted, reboot and switch to DD Phone mode?"

2. Press the **OK** soft key.


The DD phone mode is enabled automatically after the IP phone is restarted.

### Registration

You can register up to 8 DD phones (for W60B) or 5 DD phones (for W52P) to one base station. Each DD phone can be registered to only one base station.

Before registering the DD phone, make sure the base station is in registration mode (long press  on the base station till the registration LED flashes).

#### **To register the DD phone when the phone screen prompts "Unregistered!", do one of the following:**

- A. Press the **Reg** soft key to register quickly.
- B1. Do one of the following:
- Press the **OK** soft key, and then select **Register Handset**.
  - Press  and then select **Settings->Registration->Register Handset**.

The IP phone begins searching the base station.

B2.Press the **OK** soft key after searching a base station successfully.

B3.Enter the base station PIN (default: 0000), and then press the **OK** soft key to complete registration.



Note:

•If the DD phone is registered to the base station successfully, the phone screen prompts "Subscribed Succeed".

•If the DD phone prompts "Searching for Base", check if your base station is powered on or not.

## Basic Call Features

### Call Mute and Un-mute



- Press  to mute the microphone during a call.
- Press  again to un-mute the call.

### Call Hold and Resume

#### To place a call on hold:

Press the **Hold** soft key during an active call.

#### To resume the call, do one of the following:

- If there is only one call on hold, press the **Resume** soft key.
- If there is more than one call on hold, press  or  to select the desired call, and then press the **Resume** soft key.

### Call Transfer

You can transfer a call in the following ways:


#### Blind Transfer

1. Press the **Transfer** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to.
3. Press the **Transfer** soft key.


#### Semi-Attended Transfer

1. Press the **Transfer** soft key during an active call. The call is

placed on hold.



2. Enter the number you want to transfer to, and then press  .
3. Press the **Transfer** soft key when you hear the ring-back tone.

### Attended Transfer

1. Press the **Transfer** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, and then press  .
3. Press the **Transfer** soft key when the second party answers.

### Call Forward

#### To enable call forward:

1. Press the **Menu** soft key when the phone is idle, and then select **Features->Call Forward**.
2. Select a desired account.
3. Select the desired forward type:  
**Always Forward**----Incoming calls are forwarded unconditionally.  
**Busy Forward**----Incoming calls are forwarded when the phone is busy.  
**No Answer Forward**----Incoming calls are forwarded if not answered after a period of time.
4. Enter the number you want to forward to. For **No Answer Forward**, press  or  to select the desired ring time to wait before forwarding from the **After Ring Time** field.
5. Press the **Save** soft key to accept the change.

### Conference

1. Press the **Conf** soft key during an active call. The call is placed on hold.
2. Enter the number of the second party, and then press the **Send** soft key.
3. Press the **Conf** soft key again when the second party answers. All parties are now joined in the conference.

4. Press the **End Call** soft key to disconnect all parties.

## Speed Dial

### To configure a speed dial key:

1. Press the **Menu** soft key when the phone is idle, and then select **Features->DSS Keys**.
2. Select the desired DSS key, and then press the **Enter** soft key.
3. Select **SpeedDial** from the **Type** field, select the desired line from the **Account ID** field, enter a label in the **Label** field and then enter the number in the **Value** field.
4. Press the **Save** soft key to accept the change.

### To use the speed dial key:

1. Press the speed dial key to dial out the preset number.



## Customizing Your Phone

### Handset Name

#### To rename the handset:

1. Press the **Menu** soft key when the phone is idle, and then select **Settings->Basic Settings->Phone Name**.
2. Edit the value in the **Phone Name** field.
3. Press the **Save** soft key to accept the change.

### Call History



1. Press the **History** soft key when the phone is idle, press  or  to scroll through the list.
2. Select an entry from the list, you can do the following:
  - Press the **Send** soft key to call the entry.
  - Press the **Delete** soft key to delete the entry from the list.
  - Press the **Option** soft key, do the following:
    - Select **Detail** to view detailed information about the entry.
    - Select **Add to Contact** to add the entry to the local directory.
    - Select **Add to Blacklist** to add the entry to the blacklist.
    - Select **Delete All** to delete all entries from the list.

## Contact Directory



### To add a contact:

1. Press the **Directory** soft key when the phone is idle.
2. Press the **Add** soft key to add a contact.
3. Enter a unique contact name in the **Name** field and contact numbers in the corresponding fields.
4. Press the **Add** soft key to accept the change.



### To edit a contact:

1. Press the **Directory** soft key when the phone is idle.
2. Press  or  to select the desired contact, press the **Option** soft key and then select **Detail** from the prompt list.
3. Edit the contact information.
4. Press the **Save** soft key to accept the change.





### To delete a contact:

1. Press the **Directory** soft key when the phone is idle, and then select **All Contacts**.
2. Press  or  to select the desired contact, press the **Option** soft key and then select **Delete** from the prompt list.
3. Press the **OK** soft key when the phone screen prompts "Delete selected item?".

## Volume Adjustment

- Press  during a call to adjust the receiver volume of the handset/speakerphone/headset.
- Press  when the phone is idle or ringing to adjust the ringer volume.

## Ring Tones

1. Press the **Menu** soft key when the phone is idle, and then select **Settings->Basic Settings->Sound->Ring Tones**.
2. Press  or  to select **Common** or the desired account and then press the **Enter** soft key.
3. Press  or  to select the desired ring tone.
4. Press the **Save** soft key to accept the change.

## Part 15 FCC Rules

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device is compliant with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

## IC Rules

"This product meets the applicable Innovation, Science and Economic Development Canada technical specifications. / Ce produit répond à la innovation, des sciences et de Développement économique Canada spécifications techniques applicables."

"The Ringer Equivalence Number (REN) indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five. / Le nombre équivalent des sonneries (REN) indique le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison de dispositifs, à la seule condition que la somme des REN de tous les dispositifs ne dépasse pas cinq."

## Industry Canada Notices and Other Information

This product meets the applicable Industry Canada technical specifications.

## Note

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Privacy of communications may not be ensured when using this product. Some wireless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the wireless telephone should not be placed near, or on top of, a TV or VCR.

This will often reduce, or eliminate, interference.

This Class B digital apparatus complies with Canadian ICES-003.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## CAUTION

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this product.

## RF Exposure Warning

This product complies with IC radiation exposure limits set forth for an uncontrolled environment.

To comply with IC RF exposure requirements, the product must be installed and operated 20 cm (8 inches) or more between the product and all persons body.

This product may not be collocated or operated in conjunction with any other antenna or transmitter.



## **RF Exposure Warning**

**This product complies with FCC radiation exposure limits set forth for an uncontrolled environment.**

**This product may not be collocated or operated in conjunction with any other antenna or transmitter.**

## **About Yealink**

Yealink (Stock Code: 300628) is a global leading unified communication (UC) terminal solution provider that primarily offers video conferencing systems and voice communication solutions. Founded in 2001, Yealink leverages its independent research and development and innovation to pursue its core mission: "Easy collaboration, high productivity." The company's high-quality UC terminal solutions enhance the work efficiency and competitive advantages of its customers in over 100 countries. Yealink is the world's second-largest SIP phone provider and is number one in the China market.

## **Technical Support**

Visit Yealink WIKI (<http://support.yealink.com/>) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



RT30

YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.

Web: [www.yealink.com](http://www.yealink.com)

Addr: 309, 3th Floor, No.16, Yun Ding North Road,  
Huli District, Xiamen City, Fujian, P.R. China

Copyright©2018 YEALINK(XIAMEN) NETWORK  
TECHNOLOGY CO.,LTD.All rights reserved.