

LIMITED WARRANTY

This warranty covers manufacturing defects and product failure for 12 months from the date of purchase. The warranty will not be extended if we repair or replace the product. If the product fails to function properly due to a defect within one year of original purchase, return it (freight prepaid) with proof of purchase and a brief description of the problem to Simolio. Simolio will repair or replace the unit and return it to you free of charge.

This warranty does not cover cosmetic damage, damage due to accidents, misuse, abuse, negligence, commercial use, or modifications. Accessories and perishable items are not covered.

SIMOLIO**Wireless Headphones****JH-737D****User Manual**

Thank you for choosing the SIMOLIO JH-737D wireless TV headphones. Please read this guide carefully and keep it in a safe place for future reference. If you need any further assistance, please contact our customer support team at:

support@simolio.com (US/CA/AU) **support_uk@simolio.com** (UK)

Response Time: 2-24h, excl. Holidays

Welcome to subscribe to our **YouTube** channel and social media for more product information.

www.simolio.com **www.amazon.com/simolio**


Table of Contents

| | |
|--|----|
| Important Safety Instructions | 01 |
| Product Diagram | 02 |
| Package Contents | 03 |
| Buttons and Functions | 03 |
| LED Indication | 05 |
| How to Use | 05 |
| 1. How to Charge the Headphones | 05 |
| 2. How to Connect the Transmitter to Your TV/Audio Source | 06 |
| 2.1 Check Your TV/Audio Source Output Options before the Set up... | 06 |
| 2.2 Power on the Transmitter and Headphones | 07 |
| 2.3 Connect and Set Up Your TV | 08 |
| 2.3.1 Option 1 - Digital Optical Connection | 09 |
| 2.3.2 Option 2 - RCA Connection | 10 |
| 2.3.3 Option 3 - 3.5mm/AUX Connection | 12 |
| 2.3.4 Option 4 - Simultaneous Listening with a Soundbar..... | 14 |
| 2.3.5 Other Options in Special Cases | 15 |
| ① TV/Audio Source Only has Digital Coaxial Audio Out port .. | 15 |
| ② If You Want to Connect to Your AV Receiver..... | 15 |
| ③ TV/Audio Source Only has HDMI (ARC) Port | 16 |
| 3. How to Add More Headphones to the Transmitter | 16 |
| 4. How to Use the Headphone Separately with Your Phone / Tablet | 17 |
| 5. How to Clear Pairing History | 17 |
| Troubleshooting | 18 |
| Technical Specifications | 21 |
| Limited Warranty | 22 |

IMPORTANT SAFETY INSTRUCTIONS

1. Please read this instruction manual carefully and completely before using the products. Keep this manual easily accessible at all times.
2. Always keep the product dry, and do not expose them to extreme temperatures.
3. To take better care of the battery, charge the headphones in a timely manner when headphones say "low battery". Charge the headphones once every 3 months if not using for a long time.
4. The headphones must keep the minimum volume before switching the unit on. High volume may cause hearing damage to persons with normal hearing, especially to children.
5. Keep devices away from liquid. Before cleaning the product and its accessories, disconnect the transmitter from the power source, and use only a slightly damp cloth to clean the devices.
6. Use the products with care and set them up on a stable surface of a clean, dust-free environment.
7. The unit may get hot during use. Ensure the unit has adequate ventilation.
8. Please put the product far away from microwave oven, mobile phones, WiFi router etc. to avoid unnecessary electronic wave interference.
9. Please switch off the transmitter and headphones after use, and unplug the transmitter from power source when not using for a long time.
10. Only qualified person can provide services! Do not attempt to open the unit!
11. Product must not be placed closer than 6" (15cm) to a pacemaker. Consult your doctor or the manufacturer of the medical device before using the product.

PRODUCT DIAGRAM

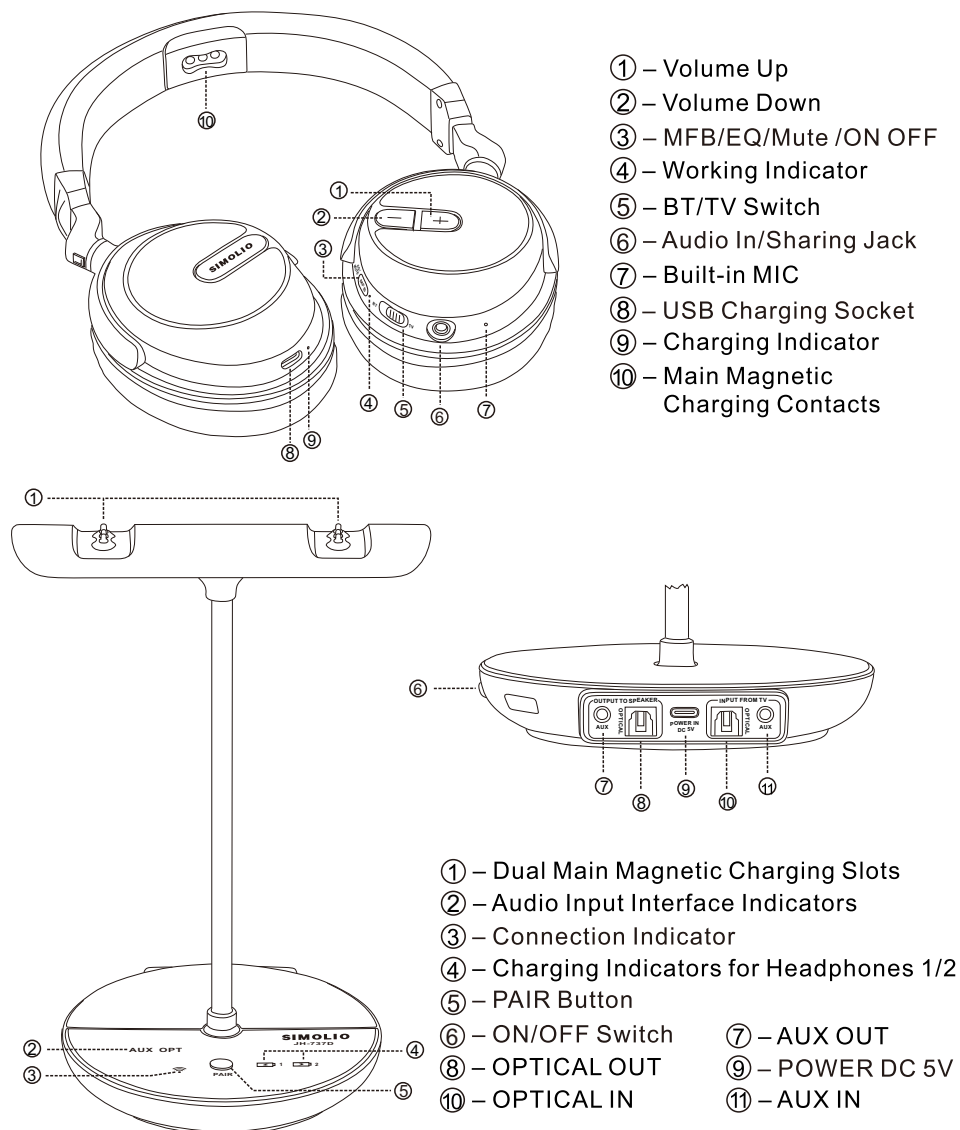

PACKAGE CONTENTS

 









 

| Headphone*2 | | Wireless Transmitter |
|-----------------------------------|--------------------------------------|-------------------------|
| | | |
| Power Adapter for Transmitter | USB Charging Cable for Headphone | Optical Fiber Cable |
| Ø3.5mm-RCA Audio Cable | Ø3.5mm Audio Cable | User Manual |

BUTTONS AND FUNCTIONS

Buttons and functions of the transmitter

| Button | Function | Operation |
|---------------|----------------------|--|
| ON/OFF Switch | Turn on transmitter | Slide the switch to ON |
| | Turn off transmitter | Slide the switch to OFF |
| PAIR | Enter pairing mode | Press and hold the PAIR button for 3 seconds until the GREEN LED flashes quickly |

Buttons and functions of the headphone

| Button | Function | Operation |
|---|---------------------------------------|---|
| MFB | Turn on headphone | Press and hold the MFB button for 3 seconds |
| | Turn off headphone | Press and hold the MFB button for 3 seconds |
| | Enter pairing mode (TV mode) | Slide the switch to the "TV" position, press and hold both the  and  buttons simultaneously for 3 seconds until the GREEN LED flashes |
| | Enter pairing mode (BT mode) | Slide the switch to the "BT" position |
| | Play / Pause music (BT mode) | Press the MFB button once to play / pause audio (when being used with phone / tablet) |
| | Mute / Unmute the headphone (TV mode) | Press the MFB button once to mute / unmute audio from the headphone |
| | EQ setting | Double click the MFB button to switch between Dialog / Cinema / Standard sound modes, you will hear "dialog / cinema / standard" sound |
| | Answer / End a call (BT mode) | Single click the MFB button, with prompt sound "Du" |
| | Reject a call (BT mode) | Single click the MFB button, with prompt sound "Du" |
| BT / TV Switch | Select TV / Bluetooth mode | Switch to "TV" to connect to the transmitter, you will hear "TV mode" |
| | | Switch to "BT" to connect to one's phone / tablet, you will hear "Bluetooth mode" |
|  | Volume Up | Single click  |
| | Next Track (BT mode) | Press and hold  for 3 seconds, then release |
|  | Volume Down | Single click  |
| | Previous Track (BT mode) | Press and hold  for 3 seconds, then release |
|   | Clear pairing | Press and hold the  and  buttons simultaneously for 6 seconds until the RED and GREEN LED flash once with a "Di" prompt sound |

LED INDICATION

LED indicators of the transmitter

| LED Status | Status Indication |
|------------------------------|--|
| Solid GREEN LED | Connected |
| GREEN LED flashes slowly | No audio signal within 10 minutes |
| Stable dark GREEN LED | Standby - No audio signal for more than 10 minutes |
| GREEN LED flashes quickly | Transmitter enter pairing mode |
| Charging indicator solid RED | Headphone charging by the base |
| RED charging indicator off | Charging completed |
| Solid WHITE on OPT/AUX | Transmitter is in OPT/AUX connection |

LED indicators of the headphone

| LED Status | Status Indication |
|---|-------------------------------|
| GREEN LED flashes slowly | In pairing mode/ Disconnected |
| Solid GREEN LED | Connected |
| Solid RED LED with voice prompt "low battery" | Low battery |
| Solid RED LED | Headphone charging |
| RED LED off | Charging completed |

HOW TO USE

1. How to Charge the Headphones

Whenever you hear the voice prompt "Low Battery" or the LED blinks **RED**, it indicates low battery and the headphones shall be recharged.

Charging Method 1: Turn off the headphones and place it onto the magnetic charging stand for recharging, the LED charging indicator on the stand will stay solid red while charging and turn off when charging is complete. (Ref. Fig1-1)