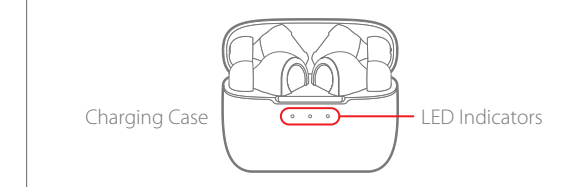 
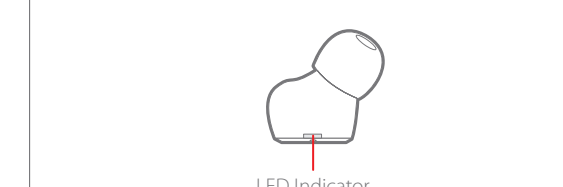 
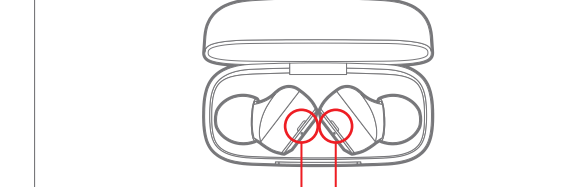 
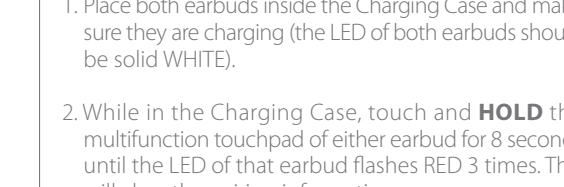 
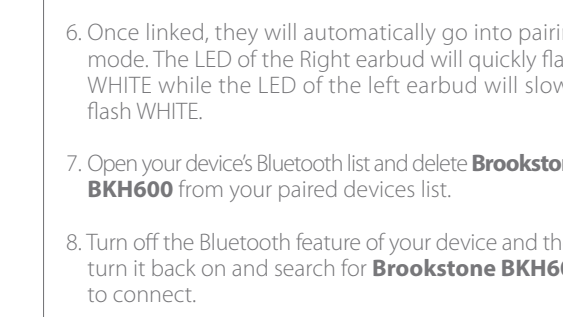 


## 09/06/2019

<h3>TOUCH CONTROL</h3> <p>The earbuds include a multifunction touchpad. Just touch the earbuds to control the audio playback and answer calls.</p> <h4>Multifunction Touchpad Operation</h4> <p><b>Play/Pause:</b> Double-tap the Left earbud.</p> <p><b>Next track:</b> Double-tap the Right earbud.</p> <p><b>Answer/End call:</b> Double-tap the Right or Left earbud during an incoming call to answer, and double-tap again during the call to end it.</p> <p><b>Rejecting a call:</b> Press and <b>HOLD</b> the Right or Left earbud during an incoming call.</p> <p><b>Voice Assistant:</b> Press and <b>HOLD</b> the Right or Left earbud. Press and <b>HOLD</b> once again to cancel the Voice Assistant.</p>	<h3>LED INDICATORS</h3> <p>The earbuds and charging case include LED indicators that are used to explain their different states.</p> <p><b>Charging Case</b> (while charging)</p>  <table border="1"> <thead> <tr> <th>Battery Level</th> <th>LED</th> </tr> </thead> <tbody> <tr> <td>0% – 30%</td> <td>The first LED will slowly flash WHITE. </td> </tr> <tr> <td>30% – 70%</td> <td>The first LED is solid WHITE while the second LED is slowly flashing WHITE. </td> </tr> <tr> <td>More than 70%</td> <td>The first two LEDs are solid WHITE while the third LED is slowly flashing WHITE. </td> </tr> <tr> <td>Fully charged</td> <td>All three LEDs are solid WHITE. </td> </tr> </tbody> </table>	Battery Level	LED	0% – 30%	The first LED will slowly flash WHITE.	30% – 70%	The first LED is solid WHITE while the second LED is slowly flashing WHITE.	More than 70%	The first two LEDs are solid WHITE while the third LED is slowly flashing WHITE.	Fully charged	All three LEDs are solid WHITE.	<p><b>Charging Case</b> (not charging, when the cover is opened or closed)</p>  <table border="1"> <thead> <tr> <th>Battery Level</th> <th>LED</th> </tr> </thead> <tbody> <tr> <td>Less than 5%</td> <td>The first LED will slowly flash WHITE for 5 seconds. </td> </tr> <tr> <td>5% – 30%</td> <td>The first LED is solid WHITE for 5 seconds, then it will turn off. </td> </tr> <tr> <td>30% – 70%</td> <td>The first and second LEDs are solid WHITE for 5 seconds, then they will turn off. </td> </tr> <tr> <td>More than 70%</td> <td>All three LEDs are solid WHITE for 5 seconds, then they will turn off. </td> </tr> </tbody> </table>	Battery Level	LED	Less than 5%	The first LED will slowly flash WHITE for 5 seconds.	5% – 30%	The first LED is solid WHITE for 5 seconds, then it will turn off.	30% – 70%	The first and second LEDs are solid WHITE for 5 seconds, then they will turn off.	More than 70%	All three LEDs are solid WHITE for 5 seconds, then they will turn off.	<p><b>Earbuds</b> (not in the Charging Case)</p>  <table border="1"> <thead> <tr> <th>Earbud Status</th> <th>LED</th> </tr> </thead> <tbody> <tr> <td>Low Battery</td> <td>Quickly flashes RED twice every minute. </td> </tr> <tr> <td>Bluetooth Pairing</td> <td>The Right earbud LED is quickly flashing RED and the Left earbud LED is slowly flashing WHITE. </td> </tr> <tr> <td>Connected</td> <td>The LED indicators of both earbuds are slowly flashing WHITE. </td> </tr> </tbody> </table>	Earbud Status	LED	Low Battery	Quickly flashes RED twice every minute.	Bluetooth Pairing	The Right earbud LED is quickly flashing RED and the Left earbud LED is slowly flashing WHITE.	Connected	The LED indicators of both earbuds are slowly flashing WHITE.	<p><b>Earbuds</b> (in the Charging Case)</p>  <table border="1"> <thead> <tr> <th>Charging Status</th> <th>LED</th> </tr> </thead> <tbody> <tr> <td>Charging</td> <td>Solid WHITE. </td> </tr> <tr> <td>Fully Charged</td> <td>Solid WHITE for 1 minute and then turns off. </td> </tr> </tbody> </table>	Charging Status	LED	Charging	Solid WHITE.	Fully Charged	Solid WHITE for 1 minute and then turns off.	<h3>FACTORY RESET</h3> <p>If the earbuds are not linking with each other, or not working properly, try doing a factory reset by following the steps below.</p> <ol style="list-style-type: none"> <li>Place both earbuds inside the Charging Case and make sure they are charging (the LED of both earbuds should be solid WHITE).</li> <li>While in the Charging Case, touch and <b>HOLD</b> the multifunction touchpad of either earbud for 8 seconds until the LED of that earbud flashes RED 3 times. This will clear the pairing information.</li> </ol> 	<h3>FCC INFORMATION</h3> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>Warning:</b> Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p><b>LITHIUM POLYMER BATTERY WARNINGS</b> This device contains a non-removable Lithium-Polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.</p> <p><b>Note:</b> This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>• Reorient or relocate the receiving antenna.</li> <li>• Increase the separation between the equipment and receiver.</li> <li>• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>• Consult the dealer or an experienced radio/TV technician for help</li> </ul> <p><b>Information Regarding Exposure to Radio Frequency Energy</b> Your device is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications</p>	<h3>FCC INFORMATION</h3> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>Warning:</b> Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p><b>LITHIUM POLYMER BATTERY WARNINGS</b> This device contains a non-removable Lithium-Polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.</p> <p><b>Note:</b> This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>• Reorient or relocate the receiving antenna.</li> <li>• Increase the separation between the equipment and receiver.</li> <li>• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>• Consult the dealer or an experienced radio/TV technician for help</li> </ul> <p><b>Information Regarding Exposure to Radio Frequency Energy</b> Your device is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications</p>	<h3>LIMITED WARRANTY</h3> <p><b>1-Year Limited Warranty</b>      <b>Territory: United States/Canada</b></p> <p><b>LIMITED WARRANTY TO ORIGINAL CONSUMER</b> This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:</p> <p><b>To obtain warranty service:</b></p> <ul style="list-style-type: none"> <li>• Visit our website at <a href="http://www.southern telecom.com">www.southern telecom.com</a></li> <li>• Click on Product Support</li> <li>• Select the Brand of your device</li> <li>• Select Service Request and fill out the form to begin your inquiry</li> </ul> <p>Or call the Customer Support number below:</p> <p><b>1-877-668-4839 (Toll Free) Monday - Friday: 8AM - 10PM (EST)</b></p> <p>Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.</p> <p><b>Warranty service not provided</b> This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.</p> <p>NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR</p>	<p>FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER, IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.</p> <p>Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.</p> <p>The BROOKSTONE® trademarks, names and logos are owned by BKST Brand Holdings LLC. ©2019 All rights reserved. <a href="http://www.brookstone.com">www.brookstone.com</a></p> <p>Manufactured, marketed and distributed by Southern Telecom Inc. under license.</p> <p>Airphones is a registered trademark of Southern Telecom, Inc.</p> <p>The "Qi" symbol is a trademark of the Wireless Power Consortium.</p> <p>The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.</p> <p>All other trademarks and trade names are those of their respective owners.</p> <p>In China      v1.0 08-2019</p>	<h3>TOUCH CONTROL</h3> <p>The earbuds include a multifunction touchpad. Just touch the earbuds to control the audio playback and answer calls.</p> <h4>Multifunction Touchpad Operation</h4> <p><b>Play/Pause:</b> Double-tap the Left earbud.</p> <p><b>Next track:</b> Double-tap the Right earbud.</p> <p><b>Answer/End call:</b> Double-tap the Right or Left earbud during an incoming call to answer, and double-tap again during the call to end it.</p> <p><b>Rejecting a call:</b> Press and <b>HOLD</b> the Right or Left earbud during an incoming call.</p> <p><b>Voice Assistant:</b> Press and <b>HOLD</b> the Right or Left earbud. Press and <b>HOLD</b> once again to cancel the Voice Assistant.</p>
Battery Level	LED																																											
0% – 30%	The first LED will slowly flash WHITE.																																											
30% – 70%	The first LED is solid WHITE while the second LED is slowly flashing WHITE.																																											
More than 70%	The first two LEDs are solid WHITE while the third LED is slowly flashing WHITE.																																											
Fully charged	All three LEDs are solid WHITE.																																											
Battery Level	LED																																											
Less than 5%	The first LED will slowly flash WHITE for 5 seconds.																																											
5% – 30%	The first LED is solid WHITE for 5 seconds, then it will turn off.																																											
30% – 70%	The first and second LEDs are solid WHITE for 5 seconds, then they will turn off.																																											
More than 70%	All three LEDs are solid WHITE for 5 seconds, then they will turn off.																																											
Earbud Status	LED																																											
Low Battery	Quickly flashes RED twice every minute.																																											
Bluetooth Pairing	The Right earbud LED is quickly flashing RED and the Left earbud LED is slowly flashing WHITE.																																											
Connected	The LED indicators of both earbuds are slowly flashing WHITE.																																											
Charging Status	LED																																											
Charging	Solid WHITE.																																											
Fully Charged	Solid WHITE for 1 minute and then turns off.																																											
11	12	13	14	15	16	17	18	19																																				