
Wireless Charging Pad

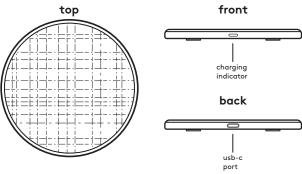

quick tips

- Alignment matters centering the device on the charging surface ensures the fastest and most efficient charge
- Thick phone cases as well as some materials can interfere with the ability to charge
- This is a high speed wireless charger. Make the most of the charger by using the USB-C cable and Quick Charge 3.0 wall plug that were packaged with it. Using a different power source may charge your device at a slower speed

included

- Wireless charger
- USB-C charging cable
- Quick Charge 3.0 wall plug

indicators

- Solid Red Charging your device
- o Solid White Fully charged
- * Flashing Red Foreign object detection, pieces of metal or other materials may cause overheating and damage your charger or phone. Remove the immediately

charaina

- Place the charger on a sturdy flat surface
- Plug the USB-C cable into the wireless charger and quick charge 3.0 wall plug, then plug the Quick Charge 3.0 wall plug into an outlet
- If you need to use a different power source make sure it is a USB power supply of DC 9V 2A minimum warning: please use UL compliant power supply
- Place your Qi-enabled device onto the wireless charger and align the device with the center of the charging surface or the device will not charge
- Remove credit cards or any card with a magnetic strip to prevent damage to the cards before charging
- Charge time will vary by device

4 in

troubleshooting

• If you're having issues charging use the tips below to help:



When properly aligned the light on the charger will turn red



Does not charge Apple Watch®

- Double check that the USB-C cable and Quick Charge 3.0 wall plug are plugged in
- Certain phone cases may interfere with wireless charging. Remove the phone case
- Double check the placement of the device on the wireless charger. For best results, the center of the device should be on the center of the wireless charger
- Wireless charging is compatible with iPhone 8 and newer as well as other Qi-enabled devices. Please consult your devices user manual if you are unsure if your device is compatible

need some help?

Can't get it to charge? Just have a question?



will flash red

call us at: 877-698-4883 or: 877-MyTgtTech

e-mail us at: TargetTechSupport.com

- Remove credit cards and other cards with magnetic strips to prevent damage to the cards
- Keep the charger away from heat and direct sunlight
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth
- Immediately unplug it from its power source if it gets wet
- Remove the protective film on the Quick Charge 3.0 wall plug before using

heyday 🏋

FCC ID: 2AO23-QIS3 Model: QIC33 Input: DCSV/2A 9V/2A 12V/1.67A Output: 15W Max Mode in Vietnam This device compiles with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

use uses a outnority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This
equipment generates, uses and can radiate radia frequency energy and, if not installed and used in accordance with the instructions,
may cause harmful interference to radia communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Connect the equipment into an outset on a circuit aimerent room that to which he receives a connected.
 Consult the decile or on experienced radio! / It behalf into fine help.
 This sequipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and a percented with minimum distance 20m between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Target Corp. Mpls. MN. 55403 Phone: 612-304-6073

front back

5.6 in