

## WHAT'S INCLUDED

**User manual**

**Charging case**

**Battery Level LED**

**Type-C charging port**

\* Medium size ear tips are pre-mounted on the earbuds.

\* 3 sizes ear tips\*

---

### 2. Wear Earbuds

Both earbuds are marked with a L or R to indicate the appropriate ear side; earbuds are differently angled to fit either the left or the right ear. The proper fit will ensure the best sound quality. Insert the eartips into your ear and rotate slightly clockwise (as shown in image below) adjust for comfort.

---

### C. Turn on Bluetooth on your device

a. Go to Settings > Bluetooth.

iOS

Android

b. Turn on Bluetooth.

c. Scan for and select "MIUNO T1".

d. Wait for successful pairing

---

3. You can skip tracks by double pressing the button of the earbuds. The Right earbud will skip to the next track and the Left earbud will skip to the previous track.

Press x2

---

4. To activate Siri with the T1, triple press the bottom area of either the Right or Left earbud.

Note: Availability of Google Assistant voice controls may vary by different Android Phone models.  
Button area is located directly on the center of the earbud.

---

### 3. Checking the Battery Level

A. Earbuds

- Earbud LEDs will indicate charge status while being charged in the case
- When fully charged, earbud LEDs will be turned off

B. Charging case

- LED will indicate the Battery level of the case whenever connected to a charger
- All LEDs will be lit when charging is complete
- LED will display the battery level of the case for 4 seconds when the earbuds are placed back in the case

Battery Level LED

---

## POWER ON/OFF

### 1. Power On the Earbuds

The earbuds will automatically power on and connect to the previously paired device whenever taken out of the charging case.

2 Connected

2 Connected

To power on the earbuds without the charging case, hold the Press area of both earbuds for 2 seconds until a "Power on" prompt is heard.

Power on 2s

---

### (X) TROUBLESHOOTING

Place both earbuds into the charging case and leave the lid closed; take earbuds out of charging case after 15 seconds.

This simple trick will resolve most problems which include but isn't limited to L/R channel disconnection or pairing/connectivity issues with devices.

Close for 15 seconds

---



NOTE: The manufacturer cannot be held responsible for any damage to the device if a third party modifies or tampered with the product. Please do not attempt to modify or tamper with the product. The manufacturer shall not be liable for any damage caused by the user's misuse of the product.

Warranty: This product is covered by a 1-year warranty. If there is a problem with the product within the warranty period, please contact the retailer or the manufacturer for replacement or repair. The warranty does not cover the product if it has been damaged due to accident, fire, flood, or other external factors.

Usage: Use the product in accordance with the instructions provided. Do not use the product near water or other liquids. Do not use the product while driving or operating machinery. The product is not intended for use by children under the age of 16.

Recycling: This product is made from recyclable materials. Please recycle the product at the end of its useful life. Do not dispose of the product in the general waste.

Copyright © 2023 Miuno Electronics Co., Ltd. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission from the publisher.

Printed in China

THE QUALITY OF THE PRODUCT IS GUARANTEED BY THE MANUFACTURER.

Miuno Electronics Co., Ltd.