
 
 
 








 
 
 

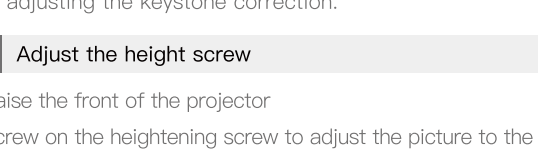 

 
 
 
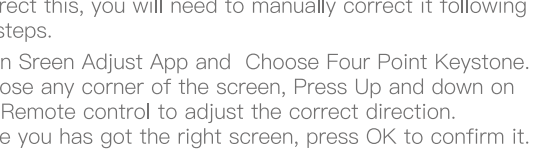 
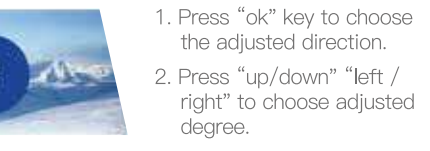 







尺寸: 140X93mm
材质: 128g双铜纸
工艺: 折页, 双面4C印刷

<h3>Home Theater Projector</h3> <p>INSTRUCTION MANUAL</p>  <p>PLEASE READ BEFORE OPERATING THIS EQUIPMENT</p> <p>Ideal for dark viewing environments for optimal performance. Please note: Projector brightness is measured in ANSI lumens. Your viewing environment is the deciding factor on how many lumens your projector needs.</p>	<h3>Important safety instructions</h3> <p>Your projector is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that you follow the instructions mentioned in this manual and marked on the product.</p>  <p>To ensure the performance and stability of the projector, please place it horizontally and leave a space of about 30cm between the projector and the wall.</p>  <p>Do not install in places with poor ventilation</p>  <p>Do not block the vents</p>	<h3>Important safety instructions</h3> <p>Before read this manual please you operate your projector, save it for future reference.</p>  <p>Do not look straight at the projector lens during operation. The intense light beam may damage your eyes.</p>  <p>The lamp becomes extremely hot during operation. Allow the projector to cool for approximately 45 minutes prior to removing the lamp assembly for replacement.</p>  <p>Do not block the projection lens with any objects when the projector is under operation as this could cause the objects to become heated and deformed or even cause a fire. To temporarily turn off the lamp, use the blank function.</p>	<h3>Specifications</h3> <table border="1"> <thead> <tr> <th>Item</th><th>Specification</th></tr> </thead> <tbody> <tr> <td>Product</td><td>M8</td></tr> <tr> <td>Lumen</td><td>350 Ansi</td></tr> <tr> <td>Native Resolution</td><td>1920x1080</td></tr> <tr> <td>Video</td><td>Support 8K/4K Decoding</td></tr> <tr> <td>Audio</td><td>Support Dolby Decoding</td></tr> <tr> <td>System</td><td>Android 9.0 OS, OTA Upgrade Support</td></tr> <tr> <td>CPU+GPU</td><td>Amlogic T972 + ARM Mali-G31 MP2</td></tr> <tr> <td>DDR+Flash</td><td>2GB RAM+16GB ROM</td></tr> <tr> <td>WiFi</td><td>Dual band WiFi 2.4/5GHz</td></tr> <tr> <td>BT</td><td>BT 5.0</td></tr> <tr> <td>HD</td><td>HD v2.0</td></tr> <tr> <td>USB</td><td>USB 2.0</td></tr> <tr> <td>Interface</td><td>Earphone 3.5mm Earphone AV IN</td></tr> <tr> <td>Environment</td><td></td></tr> <tr> <td>Rated Power Input</td><td>AC 110~240V 50-60HZ</td></tr> <tr> <td>Operating Temperature</td><td>0 ~ 40°C</td></tr> <tr> <td>Storage Temperature</td><td>-20 ~ 65°C</td></tr> <tr> <td>Operating Humidity</td><td>0 ~ 80% Non-Condensing</td></tr> </tbody> </table> <h4>1 Package contents</h4>     	Item	Specification	Product	M8	Lumen	350 Ansi	Native Resolution	1920x1080	Video	Support 8K/4K Decoding	Audio	Support Dolby Decoding	System	Android 9.0 OS, OTA Upgrade Support	CPU+GPU	Amlogic T972 + ARM Mali-G31 MP2	DDR+Flash	2GB RAM+16GB ROM	WiFi	Dual band WiFi 2.4/5GHz	BT	BT 5.0	HD	HD v2.0	USB	USB 2.0	Interface	Earphone 3.5mm Earphone AV IN	Environment		Rated Power Input	AC 110~240V 50-60HZ	Operating Temperature	0 ~ 40°C	Storage Temperature	-20 ~ 65°C	Operating Humidity	0 ~ 80% Non-Condensing	<h3>Projector Exterior view Introduction</h3>  	<h3>Bluetooth remote control</h3>  <p>Remote control shall be working within 5m distance from projector.</p> <p>Pairing method(Bluetooth connection)</p> <ol style="list-style-type: none"> Press and hold the left & right direction buttons at the same time for 3-5 seconds until the red light flashes. Open "Settings"-->"Bluetooth & Remotes", click the name of the remote to connect. 	<h3>Installation</h3> <h4>1 Proposed Installation Way</h4> <p>Before choosing an installation location for your projector, take the following factors into consideration:</p> <ol style="list-style-type: none"> Size and position of your screen. Electrical outlet location. Location and distance between the screen and projector. <p>We suggest four ways for you to make this installation.</p>  <h4>2 Projection Size/Distance Reference</h4> <p>Our projector can support to the screen size from 40" to 200". Following show the Size and Distance reference for you to choose. The most best location shall be 80" (6.2feet).</p> <table border="1"> <thead> <tr> <th colspan="3">Screen size</th> <th colspan="2">Projection distance (cm)</th> <th colspan="2">Minimum zoom size</th> </tr> <tr> <th>Diagonal (inch)</th> <th>H (cm)</th> <th>W (cm)</th> <th>Min (cm)</th> <th>Max (cm)</th> <th>Min (inch)</th> <th>Max (inch)</th> </tr> </thead> <tbody> <tr><td>40</td><td>89</td><td>50</td><td>138</td><td>53</td><td>30</td><td>30</td></tr> <tr><td>50</td><td>111</td><td>63</td><td>160</td><td>68</td><td>37</td><td>37</td></tr> <tr><td>60</td><td>133</td><td>75</td><td>178</td><td>79</td><td>40</td><td>40</td></tr> <tr><td>70</td><td>155</td><td>87</td><td>205</td><td>92</td><td>45</td><td>45</td></tr> <tr><td>80</td><td>177</td><td>100</td><td>234</td><td>105</td><td>50</td><td>50</td></tr> <tr><td>90</td><td>198</td><td>115</td><td>261</td><td>118</td><td>56</td><td>56</td></tr> <tr><td>100</td><td>218</td><td>130</td><td>288</td><td>130</td><td>62</td><td>62</td></tr> <tr><td>110</td><td>240</td><td>143</td><td>340</td><td>143</td><td>74</td><td>74</td></tr> <tr><td>120</td><td>262</td><td>153</td><td>365</td><td>156</td><td>91</td><td>91</td></tr> <tr><td>130</td><td>285</td><td>166</td><td>391</td><td>168</td><td>96</td><td>96</td></tr> <tr><td>140</td><td>308</td><td>177</td><td>415</td><td>180</td><td>105</td><td>105</td></tr> <tr><td>150</td><td>331</td><td>189</td><td>441</td><td>197</td><td>112</td><td>112</td></tr> <tr><td>160</td><td>354</td><td>201</td><td>467</td><td>211</td><td>120</td><td>120</td></tr> <tr><td>170</td><td>377</td><td>213</td><td>491</td><td>224</td><td>127</td><td>127</td></tr> <tr><td>180</td><td>400</td><td>225</td><td>516</td><td>238</td><td>134</td><td>134</td></tr> <tr><td>190</td><td>423</td><td>237</td><td>541</td><td>253</td><td>141</td><td>141</td></tr> <tr><td>200</td><td>442</td><td>248</td><td>560</td><td>263</td><td>147</td><td>147</td></tr> </tbody> </table>	Screen size			Projection distance (cm)		Minimum zoom size		Diagonal (inch)	H (cm)	W (cm)	Min (cm)	Max (cm)	Min (inch)	Max (inch)	40	89	50	138	53	30	30	50	111	63	160	68	37	37	60	133	75	178	79	40	40	70	155	87	205	92	45	45	80	177	100	234	105	50	50	90	198	115	261	118	56	56	100	218	130	288	130	62	62	110	240	143	340	143	74	74	120	262	153	365	156	91	91	130	285	166	391	168	96	96	140	308	177	415	180	105	105	150	331	189	441	197	112	112	160	354	201	467	211	120	120	170	377	213	491	224	127	127	180	400	225	516	238	134	134	190	423	237	541	253	141	141	200	442	248	560	263	147	147	<h3>Installation</h3> <h4>3 Projection Methods</h4> <p>Depending on the installation method, select the appropriate option in the settings.</p>     	<h3>Power-On / Off Operation</h3> <h4>1 Power connection</h4>  <p>Connect the power cord with projector.</p> <h4>2 Power -ON / OFF</h4> <p>Press the power button to boot up the projector</p>  <p>Way1: Power on/off by the button on projector</p> <p>Aim the remote control at the Remote sensor part of the projector</p>  <p>Way2: Power on/off by remote control</p>	<h3>Screen Adjustment</h3> <h4>3 Correct keystone</h4> <p>Keystoning refers to the situation where the projected image becomes a trapezoid due to angled projection. To correct this, you will need to manually correct it following these steps:</p> <ol style="list-style-type: none"> Open Screen Adjust App and Choose Four Point Keystone. Choose any corner of the screen, Press Up and down on the Remote control to adjust the correct direction. Once you has got the right screen, press OK to confirm it. 	<h3>Screen Adjustment</h3> <h4>4 Adjust the Electronic Zoom</h4> <p>No more space constraints, no need to change the projector distance, just move the projector to fit the screen size, you can customize your projection screen size from 35% to 100%.</p>  <p>Electronic Zoom Range: 100%====>35%</p>
Item	Specification																																																																																																																																																																																				
Product	M8																																																																																																																																																																																				
Lumen	350 Ansi																																																																																																																																																																																				
Native Resolution	1920x1080																																																																																																																																																																																				
Video	Support 8K/4K Decoding																																																																																																																																																																																				
Audio	Support Dolby Decoding																																																																																																																																																																																				
System	Android 9.0 OS, OTA Upgrade Support																																																																																																																																																																																				
CPU+GPU	Amlogic T972 + ARM Mali-G31 MP2																																																																																																																																																																																				
DDR+Flash	2GB RAM+16GB ROM																																																																																																																																																																																				
WiFi	Dual band WiFi 2.4/5GHz																																																																																																																																																																																				
BT	BT 5.0																																																																																																																																																																																				
HD	HD v2.0																																																																																																																																																																																				
USB	USB 2.0																																																																																																																																																																																				
Interface	Earphone 3.5mm Earphone AV IN																																																																																																																																																																																				
Environment																																																																																																																																																																																					
Rated Power Input	AC 110~240V 50-60HZ																																																																																																																																																																																				
Operating Temperature	0 ~ 40°C																																																																																																																																																																																				
Storage Temperature	-20 ~ 65°C																																																																																																																																																																																				
Operating Humidity	0 ~ 80% Non-Condensing																																																																																																																																																																																				
Screen size			Projection distance (cm)		Minimum zoom size																																																																																																																																																																																
Diagonal (inch)	H (cm)	W (cm)	Min (cm)	Max (cm)	Min (inch)	Max (inch)																																																																																																																																																																															
40	89	50	138	53	30	30																																																																																																																																																																															
50	111	63	160	68	37	37																																																																																																																																																																															
60	133	75	178	79	40	40																																																																																																																																																																															
70	155	87	205	92	45	45																																																																																																																																																																															
80	177	100	234	105	50	50																																																																																																																																																																															
90	198	115	261	118	56	56																																																																																																																																																																															
100	218	130	288	130	62	62																																																																																																																																																																															
110	240	143	340	143	74	74																																																																																																																																																																															
120	262	153	365	156	91	91																																																																																																																																																																															
130	285	166	391	168	96	96																																																																																																																																																																															
140	308	177	415	180	105	105																																																																																																																																																																															
150	331	189	441	197	112	112																																																																																																																																																																															
160	354	201	467	211	120	120																																																																																																																																																																															
170	377	213	491	224	127	127																																																																																																																																																																															
180	400	225	516	238	134	134																																																																																																																																																																															
190	423	237	541	253	141	141																																																																																																																																																																															
200	442	248	560	263	147	147																																																																																																																																																																															
<h3>Important safety instructions</h3> <p>Do not install in places with poor ventilation</p>  <p>Do not install in high temperature or humid places</p>  <p>Do not block the vents</p> <p>Do not install in dust or smoky places</p>	<h3>Important safety instructions</h3> <p>Do not look straight at the projector lens during operation. The intense light beam may damage your eyes.</p>																																																																																																																																																																																				

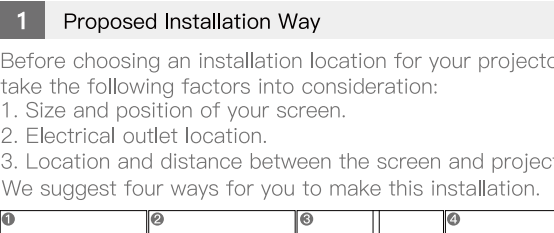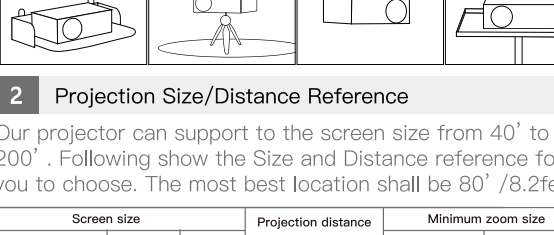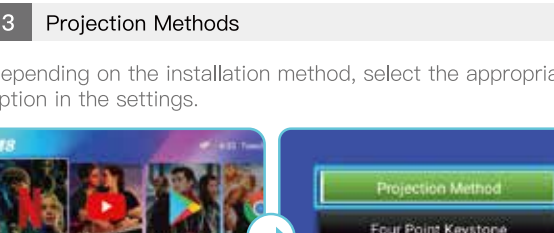 
正面

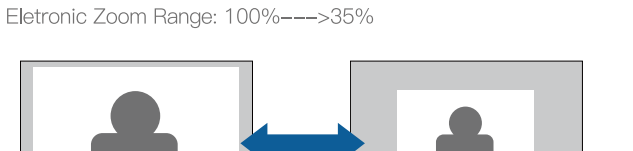
Screen Adjustment

Adjust the Brightness


When playing a video, you can set the picture mode. The brightness in each mode is different. You can choose different picture modes according to your personal habits.

1. Set picture mode:

 
When playing the video, press the setting button  to enter the setting interface, click "picture"~"picture mode", to select the picture mode you want.

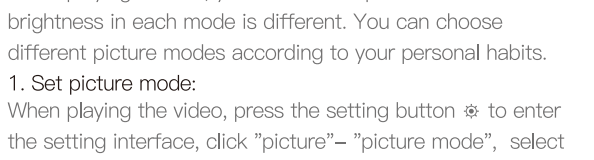

2. Custom picture mode:


Click "Settings"~"Picture"~"Picture Mode", select a picture mode, then press the remote key , click "Custom Settings", adjust the parameters in this mode as needed.


Remember to take pictures and record the original values before adjusting. It is convenient to compare the parameters before and after.

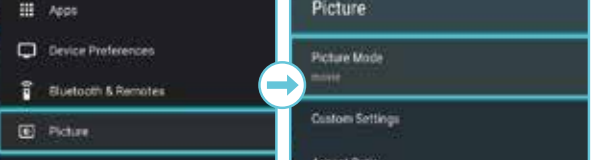

System Initial Setup


Language Selection

Press the "Set"  key on the remote control to enter the set menu -- "Device Preference" -- "Language" -- Choose your preferred language.

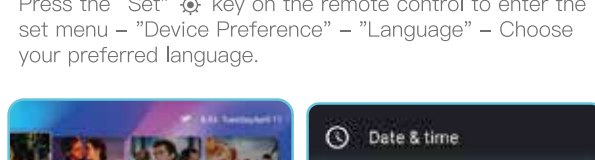


Wifi connection

- Open Settings -- Network & Wifi to enter the Wifi settings page.
- Choose the Wifi option and enter passwords to connect.

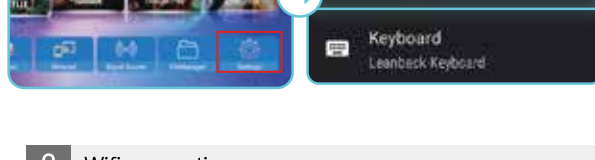


System Initial Setup

Bluetooth connection

Press the "Set"  key on the remote control to enter the set menu -- "Bluetooth & Remotes" -- "Add accessory" -- Follow the prompts to pair your Bluetooth device


△Bluetooth function is only working for connecting with Bluetooth devices like bluetooth speaker. It cannot use as a speaker to play any video or Music.

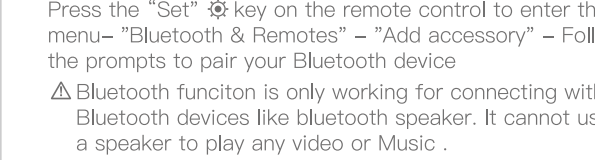

FOTA Update online

We will update our system if we have new functions. If you also meet any problem that you can not solve it, you can also use our FOTA Update function to Reboot the system as following steps.

Open "Update" -- "Check Version", Click and check for updates.

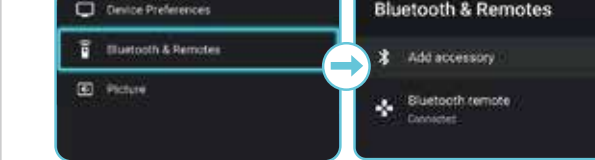

System Initial Setup

Application management

We has installed some basic application for you to using, like Netflix, Youtube, Chrome, Prime, WPS office, etc.


✦ When open Netflix APP, there is notice pop up reminding customer to update, please click "CANCEL", do NOT update.

The Netflix already installed in this projector is version:5.16.2 which is specially selected, and we've run a lot of testing and debugging for stable and smooth streaming experience. We strongly suggest to use this version of Netflix, do NOT make any updates.


1. Install other Android Apps


A: Play Store: Almost android apps can be installed to M8 projector via Play Store.

B: If you wanna install the application that can not find in google store, you can install the apk with Appininstaller as following steps

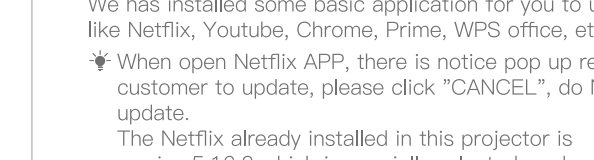


2. Uninstall App

Press "Settings"  button on remote, "Apps"~"See all Apps"~ Select the application to be uninstalled, and click "Uninstall"

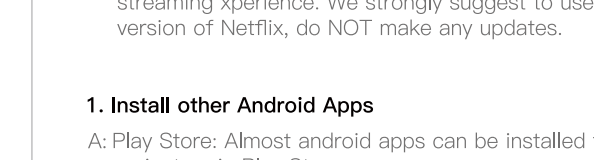


Select the Input Source

1 HD/AV Connection

Open the "SignalSource" app on Homepage or press the "Switch"  button of remote. Select the source channel you need in the list on the right side of the Homepage.

- This device supports connections with various HDMI playback devices such as streaming media player, TV stick, TV box, DVD player, set-top box (STB), game machine or other devices(HD cable provided).
- AV connected devices are also supported.

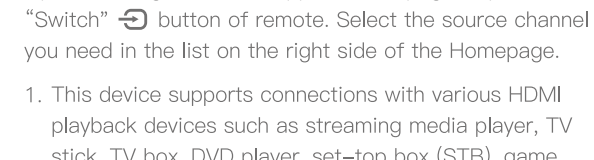


2 USB Connection


- Connect U disk or hard disk
- Open "FileBrowser", enter USB Storage Device, select the movie, photo you want to play.


✦ When playing the video in the external storage, find the video file you want to play, long press the "OK" key to enter the menu page, click "Open with...", and then select "MoviePlayer" to open the video file.

MoviePlayer's video decoding capability is stronger.

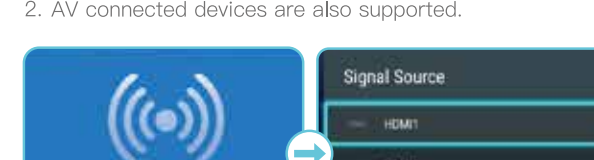



2 Uninstall App

Press "Settings"  button on remote, "Apps"~"See all Apps"~ Select the application to be uninstalled, and click "Uninstall"

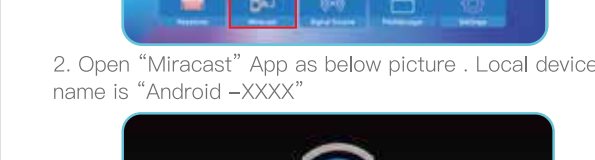

Screen Mirroring

For Android device

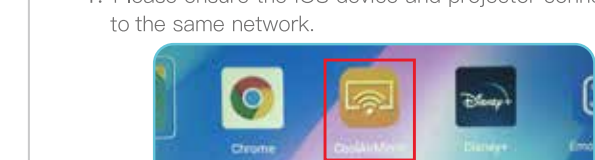
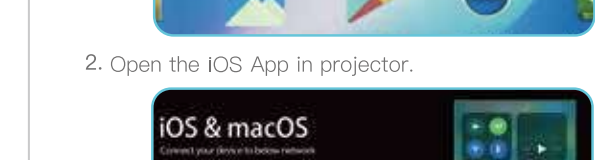
- Choose "Miracast" icon as below picture (support Android 5.3 and above)
- Open "Miracast" App as below picture - Local device name is "Android-XXXX"
- Open the Wireless Cast on Android phone to search available devices, click the "Android-XXXX" option to connect.
- Click on the prompt box to accept the screen cast connection. If the screen is synchronized, means screen cast completed.

✦ DLNA

This M8 projector supports DLNA. When the projector connected to WIFI, smart devices in same network could play vedios on the project which requires smart device APP supports DLNA.

Screen Mirroring

For iOS device

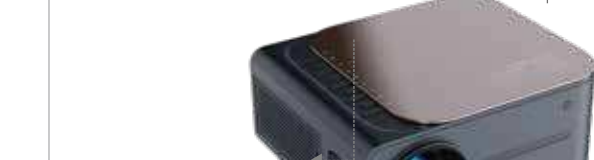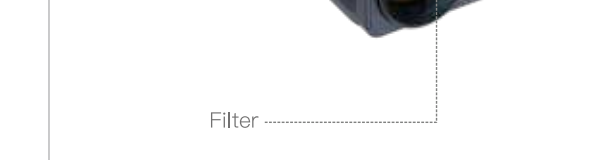- Please ensure the iOS device and projector connected to the same network.
- Open the iOS App in projector.
- Open the Screen Mirroring from the control center on iPhone.
- Search for available devices.
- Connect to "Bytefly-XXXXXX" option to start mirroring screen.


△ Once you used mirror cast function to play your application from your mobile . Then it will support all the videos that you play on mobile, but it may has some delay compare to your mobile . Do not worry , it is normal according to the video sources resolution.

Maintenance Suggestion

Notice

To make this projector work longer, we recommend you to follow the ideas.

- Before cleaning the projector, turn off the projector, then turn off the main power and unplug it from the outlet.
- Clean the filter regularly every month to prevent clogging.
- Make sure to close the projector off once you finished using it.
- Make sure not to use it continuously for more than 6 hours.

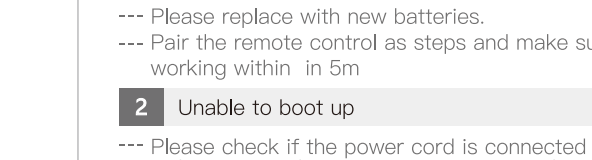

FAQ

Remote control is insensitive or unresponsive

- Please check if the batteries installed properly.
- Please replace with new batteries.
- Fail the remote control at steps and make sure it is working within 5m in 5m

Unable to boot up

- Please check if the power cord is connected properly, and if the power light is on. Try to unplug and plug the power if the projector still cannot boot up.

Black screen or abnormal picture after booting for a while

- Please check if the vents are blocked.
- Please check if the cooling fan is working properly. If abnormal, please return for repair.
- Please try to reboot the projector.

No network connection

- Please check if WIFI connected properly, and if the WIFI signal is good.
- Please connect hotspot of smart phone to verify if router is working properly.

Blurry display

- Please check if the lens are clean.
- Please use the focusing ring to adjust the sharpness.
- Please check if the environment too bright.

Screen freeze

- Please reboot the projector to test again. If the screen still freeze, please turn off for 10 minutes and turn on again.

✦ If you have any other problem, please contact our online services to help you immediately.

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description _____

(For quick repair, please describe the problem in details.)

Warranty Card

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

背面