

**NEED FINAL  
NAME AND  
PHOTO FROM  
PACKAGE**

**Brookstone®**

**SPEAK OUT™**

XXXXXXXX



917703\_917725 INS Speak Out  
Size:80mmWx80mmH\_Output:100%\_Prints:1/1\_Blk

## TABLE OF CONTENTS

Warnings and Cautions .....	1
FCC Information.....	5
Location of Parts and Controls .....	7
Setting Up the Speaker .....	8
Using the Nigh Light.....	8
Pairing Your Device .....	9
Listening to Audio .....	11
Using Pair2 for Stereo or Left/Right Sound.....	12
Care and Maintenance .....	15
Specifications .....	17
Troubleshooting.....	18
Warranty .....	20

## CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER.  
THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

## IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

## SAFETY AND HANDLING INFORMATION

For maximum product life, do not drop, throw, or crush the speaker. Do not expose it to humidity, dust, or operating temperatures outside 25°F to 120°F (-4°C to 49°C).

### SAVE THESE INSTRUCTIONS

#### DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for a unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

#### WARNING

1. Close supervision is necessary when this appliance/ product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.

8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload the electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by its cord or use the cord as a handle.
11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when the unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the outlet by pulling the power cord.

## FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.


Modifications not authorized by the manufacturer may void the user's authority to operate this device.

FCC ID: HBOSPEAKOUT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## LOCATION OF PARTS AND CONTROLS

1. Power/Pairing Button
2. Pair2™ Button
3. Night Light Button
4. Volume + Button
5. Volume - Button
6. AC Plug Cover
7. AC Plug Bypass
8. Night Light
9. Rotating AC Plug
10. Pair2™ LED Indicator
11. Power/Pairing LED Indicator

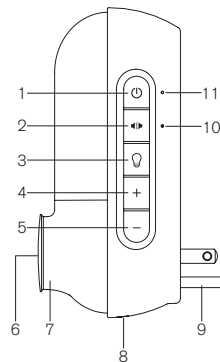

## SETTING UP THE SPEAKER

1. Plug the speaker into an electrical wall outlet and rotate speaker to desired position.
2. Remove the AC PLUG COVER to use the AC PLUG BYPASS.

## USING THE NIGHT LIGHT

1. Press the NIGHT LIGHT BUTTON to turn the Night Light on.
2. Press the NIGHT LIGHT BUTTON to turn the Night Light off.

Note: The Night Light can used when the speaker is powered on and when the speaker is powered off.

## PAIRING YOUR DEVICE

1. Prepare your device to pair using Bluetooth®, making sure the device is within 33 feet of the speaker. Refer to your device's owners manual for details if necessary.
2. Press the POWER/PAIRING BUTTON. The POWER/PAIRING LED INDICATOR will turn on and the power on tone will sound.
3. Press and hold the POWER/PAIRING BUTTON until the POWER/PAIRING LED INDICATOR starts flashing to put the speaker in pairing mode.
4. Select "Speak Out" on your device. If prompted, use 0000 as a PIN for the pairing code. The speaker will wait for a connection in pairing mode for up to 2 minutes.
5. When "Speak Out" is selected, the POWER/PAIRING LED INDICATOR will be solid blue and the pairing successful tone will sound to confirm pairing is complete.

### Notes:

- To cancel the pairing mode, either press the POWER/PAIRING BUTTON, a tone will sound and the speaker will turn off, or wait 2 minutes for the speaker to cancel pairing

automatically. The POWER/PAIRING LED INDICATOR will return to solid blue and the unit will remain on.

- The POWER/PAIRING LED INDICATOR will turn off 5 seconds after pairing. Pressing any button will activate POWER/PAIRING LED INDICATOR for 5 seconds.

## LISTENING TO AUDIO

1. Press the POWER/PAIRING BUTTON. The POWER/PAIRING LED INDICATOR will turn on and the power on tone will sound.
2. The speaker will automatically remember the last paired device. Depending on your device, "Speak Out" may need to be selected in your device's menu.
3. Press the VOLUME + BUTTON to increase audio volume.
4. Press the VOLUME - BUTTON to decrease audio volume.
5. To turn the speaker off, press the POWER/PAIRING BUTTON. The power off tone will sound.

**Note:** The POWER/PAIRING LED INDICATOR will turn off 5 seconds after powering on. Pressing any button will activate POWER/PAIRING LED INDICATOR for 5 seconds.

## USING Pair2™ FOR STEREO OR LEFT/RIGHT SOUND

Two **Speak Out™** speakers can be paired for stereo or left/right sound. Identify which speaker will be the **Main speaker** and which speaker will be the **Auxiliary speaker** as your device only needs to pair with the **Main speaker**.

1. Pair your device (see page 9) with the **Main speaker**.
2. Press the POWER/PAIRING BUTTON on the **Auxiliary speaker** until the POWER/PAIRING LED INDICATOR turns on and the power on tone sounds.

**Note:** Do not put the **Auxiliary speaker** into device pairing mode.

3. Press the Pair2 BUTTON on the **Main speaker** (the speaker that is paired with your device). The PAIR2 LED INDICATOR will start flashing and audio will pause on the **Main speaker**. The **Main speaker** will wait for a Pair2 connection for up to 2 minutes.
4. Press and hold the Pair2 BUTTON on the **Auxiliary speaker** until the PAIR2 LED INDICATOR starts flashing on the **Auxiliary speaker**.
5. Release the Pair2 BUTTON on the **Auxiliary speaker**.

6. After a few seconds, the PAIR2 LED INDICATORS on both the **Main Speaker** and the **Auxiliary speaker** will be solid, the Pair2 stereo tone will sound on each speaker, and the speakers will be in stereo mode.
7. Resume audio from your device.
8. To put the speakers in left/right mode, press and hold the Pair2 BUTTON on the **Main speaker** or the **Auxiliary speaker** until the Pair2 left and right tones sound on each speaker. To put the speakers back into stereo mode, press and hold the Pair2 BUTTON on the **Main speaker** or the **Auxiliary speaker** until the Pair2 stereo tones sound on each speaker.
9. To exit out of Pair2 stereo or left/right modes, power either speaker off by pressing the POWER/PAIRING BUTTON.

### Notes:

- To cancel PAIR2 mode, either press the POWER/PAIRING BUTTON on the **Main Speaker**, a tone will sound and the speaker will turn off, or wait 2 minutes for the speaker to cancel pairing automatically.
- The POWER/PAIRING LED INDICATOR and the



PAIR2 LED INDICATOR will turn off 5 seconds after pairing. Pressing any button will activate POWER/PAIRING LED INDICATOR and the PAIR2 LED INDICATOR for 5 seconds.

## CARE AND MAINTENANCE

To clean, wipe the speaker with a soft, dry cloth.

## NOTES

## SPECIFICATIONS

Power Input .....	100-240V~50/60Hz 10A
Power Output .....	100-240V~50/60Hz 10A
Range .....	Class 2, up to 33 ft (10 m)
Speaker .....	1.5" Full Range (1)
Frequency Response .....	100Hz~20KHz
Compatibility .....	Bluetooth 2.0 or above with A2DP/AVRCP
Weight .....	Approx. 242 grams
Dimensions .....	5.1" x 2.4" x 3.1"

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Brookstone is under license.

© Brookstone 2015

## TROUBLESHOOTING

ISSUE	SOLUTION
Bluetooth® disconnection.	Ensure your device is within 33 feet of the speaker and reconnect your device to "Speak Out."
Audio is not clear.	Power the speaker off and then back on. Adjust your device's equalizer. Check the speaker or your device's volume level.
Speaker does not play audio.	Power the speaker off and then back on. Confirm device is paired to speaker, see page 9 for pairing instructions.

## TROUBLESHOOTING (CONTINUED)

ISSUE	SOLUTION
Can not put speakers into Pair2 mode.	Confirm your device is paired to the Main speaker. Please refer to page 9 for pairing instructions. Confirm there is not a previous device paired to the Auxiliary speaker. Confirm both the Main and Auxiliary speaker are in Pair2 connection mode. Please refer to page 12 for Pair2 connection instructions.
Can not switch speakers between stereo or left/right in Pair2 mode.	Confirm you are pressing and holding the Pair2 BUTTON on the <b>Main speaker</b> or the <b>Auxiliary speaker</b> until the Pair2 stereo or left and right tones sound on each speaker.

## ONE (1) YEAR LIMITED WARRANTY

Big Blue Audio LLC warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Big Blue Audio will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Big Blue Audio, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Big Blue Audio's property. When a store credit is given, the original product must be returned to Big Blue Audio and becomes Big Blue Audio's property.

**Obtaining Service:** To obtain warranty service, call Big Blue Audio Limited Warranty Service at 866-577-8955. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Big Blue Audio that can be identified by the "Big Blue Audio" trademark, trade name, or logo affixed to them or their packaging. The Limited

Warranty does not apply to any non-Big Blue Audio products. Manufacturers or suppliers other than Big Blue Audio may provide their own warranties to the purchaser, but Big Blue Audio, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Big Blue Audio; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

**BIG BLUE AUDIO SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BIG BLUE AUDIO DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BIG BLUE AUDIO CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Find thousands more  
great ideas online

**Brookstone®**

917703 917725

Merrimack, New Hampshire, USA 03054 • 800-846-3000 • [Brookstone.com](http://Brookstone.com)

917703\_917725 INS Speak Out  
Size: 80mm W x 80mm H Output: 100% Prints: 1/1, Blk