

CREATIVE® DESKTOP

Wireless 9000 Pro



Quick Start

Product Registration

Enjoy a host of benefits by registering your product during installation, or at www.creative.com/register. Benefits include:

- Service and product support from Creative
 - Exclusive updates on promotions and events
- Please note that your warranty rights are not dependent on product registration.

Customer Support Services & Warranty

Creative Knowledge Base

Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. Go to www.creative.com and select your region.


Customer Support Services	d:\support<region>\<language>\support.chm
Warranty	d:\warranty<region>\<language>\warranty.chm Please keep your Proof of Purchase for the duration of the warranty period.
User's Guide	d:\manual<language>\manual.pdf

(replace **d:** with the drive letter of your CD-ROM/DVD-ROM drive, <**region**> with the region that you are in, and <**language**> with the language that your document is in).



Keep this document for future reference.

CREATIVE® Desktop Wireless 9000 Pro Quick Start



Overview

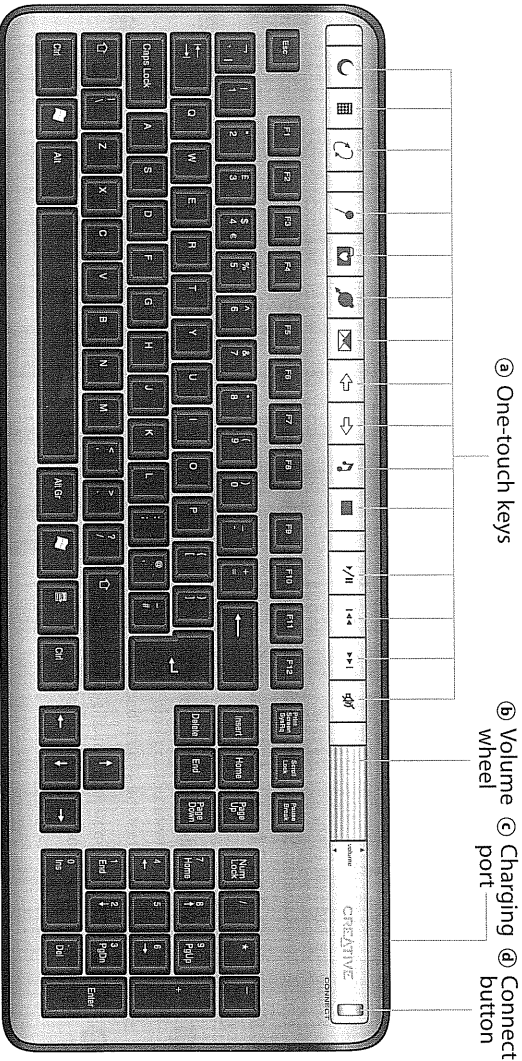

⑤ Charging port ⑥ USB connector

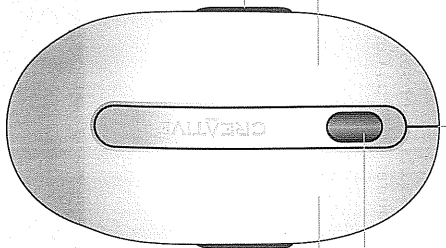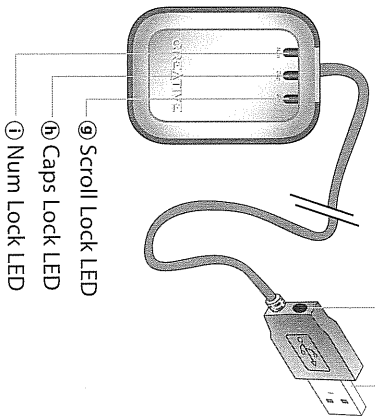

1. Inserting Batteries

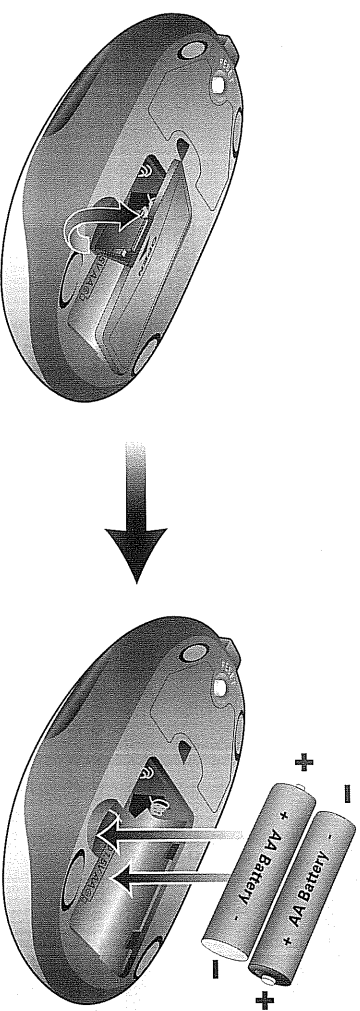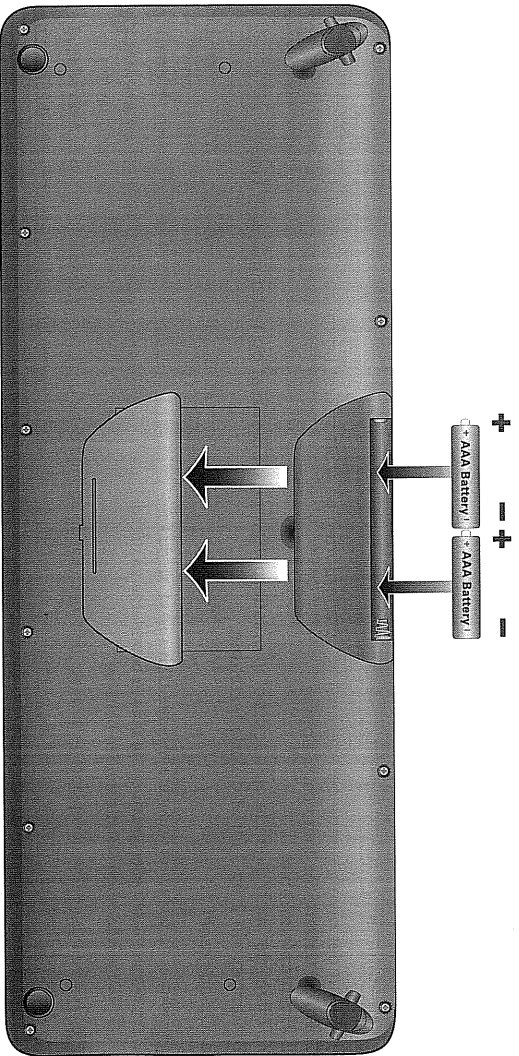

Your Creative Desktop Wireless 9000 Pro is supplied with two rechargeable AA batteries and two rechargeable AAA batteries. **DO NOT** mix batteries of different brands or capacities.

2. Installing Software

It is recommended that you uninstall any previously installed mouse and keyboard software, before

- Creative Product
- Product Creative
- Prodotto Creative
- Creative-Product
- Producto Creative
- Creative Product
- Creative tuote
- Creative Produkt
- Creative produkt
- Creative produkt
- Vyrobek firmy Creative
- Produto Creative
- Creative npolytr

- Dealer Stamp
- Cachet revendeur
- Timbro del rivenditore
- Händlerstempel
- Sello distribuidor
- Dealer stempel
- Forhandler stempel
- Jälleenmyyjä leima
- Återförsäljare stämpel
- Forhandler stempel
- Piezātkā dliera
- Razliko prodajce
- Carimbo do Agente
- Tivchar's dinnapa

Date	Time	Location	Weather	Wind	Sea
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	1998	1998	1998	1998
1998	1998	19			

- Purchase Date
- Date d'achat
- Data di acquisto
- Kaupdatum
- Fecha de compra
- Aankoopdatum
- Kjøpsdato
- Ostöpäivä
- Inköpsdatum
- Købsdato
- Data zakupu
- Datum koupy
- Data de compra
- Покупное число

- Name and Address of Customer
- Nom et adresse du client
- Nome e indirizzo del cliente
- Name & Anschrift des Käufers
- Nombre & dirección del cliente
- Naam & adres van de klant
- Kunders navn & adresse
- Asiakkaan nimi & osoite
- Kunders navn & adresse
- Kunders navn & adresse
- Imię, nazwisko i adres klienta
- Meno a adresa zákazníka
- Nome e morada do comprador
- Фамилия и адрес покупателя

[illegible]

1. Insert the Creative Desktop Wireless 9000 Pro installation CD into the CDROM drive. Your CD should start automatically. If it does not, follow the steps below:
 - i. Start Windows Explorer.
 - ii. On the left pane, click the **My Computer** icon.
 - iii. Right-click the CD-ROM/DVD-ROM drive icon, and then click **Autoplay**.
2. Select the applications to install, and then click the **OK** button.
3. Follow the instructions on the screen to install your Creative Desktop Wireless 9000 Pro.
4. When prompted, restart your computer to complete the installation.

FR

- a. Touches d'accès rapide
- b. Molette du volume
- c. Port de charge
- d. Bouton de connexion
- e. Port de charge
- f. Connecteur USB
- g. Voyant Défilement
- h. Voyant Verr. Maj
- i. Voyant Verr. Num
- j. Bouton Précédent
- k. Bouton gauche
- l. Port de charge
- m. Roulette de défilement
- n. Bouton droit
- o. Bouton Suivant

1. Insertion des batteries

-  Creative Desktop Wireless 9000 Pro est fourni avec deux batteries AA rechargeables et deux batteries AAA rechargeables. NE MELANGEZ PAS des batteries de différentes marques ou capacités.

2. Installation du logiciel

-  Nous vous recommandons de désinstaller tout logiciel pour le souris ou le clavier précédemment installé avant d'installer le logiciel Creative Desktop Wireless 9000 Pro.
1. Insérez le CD d'installation de Creative Desktop Wireless 9000 Pro dans votre lecteur de CD-ROM. Le CD devrait démarrer automatiquement. Si ce n'est pas le cas, effectuez les opérations suivantes :
 - i. Lancez l'explorateur Windows.
 - ii. Dans le volet de gauche, cliquez sur l'icône **Poste de travail**.
 - iii. Cliquez avec le bouton droit sur l'icône du lecteur de CD/DVD-ROM, puis sur **Lecture automatique**.
 2. Sélectionnez les applications à installer, puis cliquez sur le bouton **OK**.
 3. Suivez les instructions qui s'affichent à l'écran pour installer Creative Desktop Wireless 9000 Pro.
 4. À l'invite, redémarrez votre ordinateur pour terminer l'installation.

Démarrage rapide

Enregistrement du produit

Le fait d'enregistrer votre produit pendant l'installation ou ultérieurement à l'adresse www.creative.com/register vous donne droit à toute une série d'avantages. Avantages :

- Assistance service et produit de Creative
- Mises à jour exclusives sur les promotions et événements

Notez que vos droits à la garantie ne sont pas soumis à l'enregistrement du produit.

Garantie et Services d'assistance clients

Base de connaissances Creative

La Base de connaissances Creative, accessible 24 heures sur 24, vous permet de dépister et résoudre vous-même de nombreux problèmes techniques. Accédez à www.creative.com et sélectionnez votre région. Des informations relatives à l'assistance technique et à la garantie, entre autres, sont disponibles sur le CD d'installation

Client Services d'assistance	d:\support< région>\<langue> \support.chm
Garantie	d:\warranty< régions>\<langue>\warranty.chm Conservez votre preuve d'achat pendant toute la durée de la garantie.
Guide de l'utilisateur	d:\manual<langue>\ manual.pdf


(remplacez d:\ par la lettre de votre lecteur de CD/DVD-ROM, **<région>** par la région où vous trouvez et **<langue>** par la langue du document).

Conservez ce document pour consultation ultérieure.


Copyright © 2005 Creative Technology Ltd. Tous droits réservés. Le logo Creative est une marque déposée de Creative Technology Limited. Windows est une marque déposée de Microsoft Corporation. Tous droits réservés. Tous les autres logos, marques ou noms de produits sont des marques ou noms de produits déposés ou non de leurs détenteurs respectifs et sont reconnus en tant que tels. Toutes ces spécifications peuvent faire l'objet de modifications sans préavis. Le contenu réel peut différer légèrement de celui qui est illustré.

3. Connecting the RF Receiver

a. i
Vo Na
wc
Vo
Mc
ge
Mc
coi
c:\

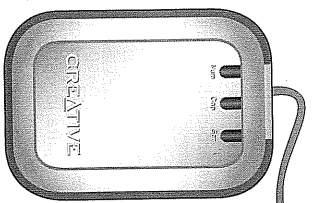

a. Connect the USB connector on the RF receiver to the USB port on your computer.

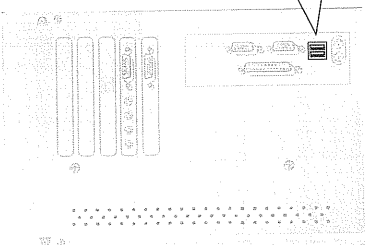

4.
1. i
2. i
3. i
4. i
5. i
a. i

For Windows® XP/2000/Me
After you have connected the USB device, Windows will detect the USB device and install the required drivers automatically.


For Windows 98 SE

Users may be prompted by an **Add New Hardware Wizard** dialog box when Windows detects the USB device. Make sure the original mouse is connected and follow the instructions on the screen. You may need to insert the Windows Installation CD into the CD-ROM drive. Some computers may be supplied without the Windows CD, but have the necessary files stored in `c:\windows\options\cabs` (replace `c:\` with the drive letter your Windows has been installed on).

4. Charging Batteries

5. i

1. Connect the supplied charging cable to the charging ports on your USB connector and mouse as shown.
2. Charge the batteries for about eight hours.
3. Disconnect the charging cable.
4. Connect the charging cable to the charging ports on your USB connector and keyboard as shown.
5. Repeat steps 2 to 3 to charge the keyboard.

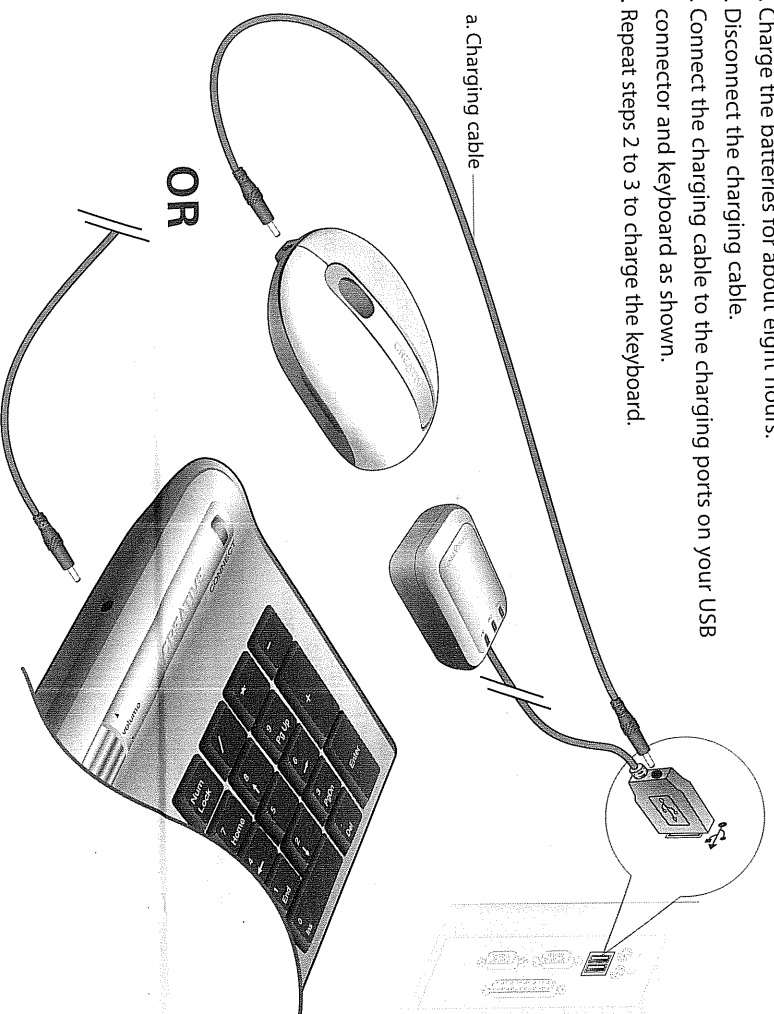

OR


a. i
Vo Na
wc
Vo
Mc
ge
Mc
coi
c:\

- Keep your mouse or keyboard connected to the USB connector to:
- Use your mouse or keyboard and charge the batteries at the same time.
- Use your mouse or keyboard without batteries.

If you use non-rechargeable alkaline batteries, skip this step and proceed to **Step 5 Activating Your Creative Desktop Wireless 9000 Pro. DO NOT** attempt to charge non-rechargeable alkaline batteries. The batteries may leak and damage your mouse or keyboard.

5. Activating Your Creative Desktop Wireless 9000 Pro

4.
1. i
2. i
3. i
4. i
5. i
a. i


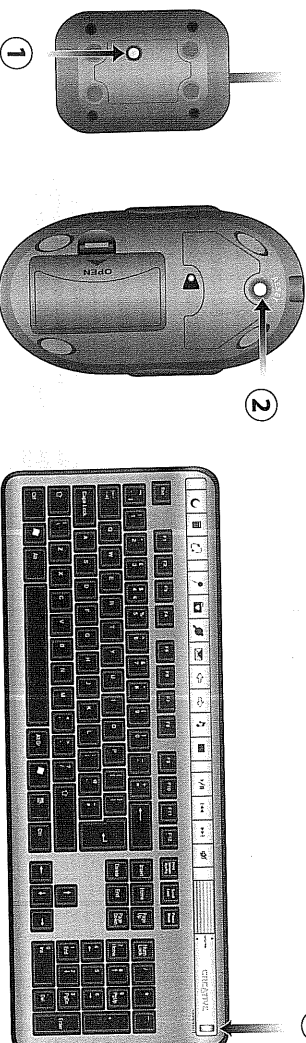


1. Press the **RESET** button on the RF receiver, then press the **RESET** button on your mouse.
2. Press the **RESET** button on the RF receiver again, then press the **Connect** button on your keyboard.
3. Test your mouse and keyboard. If they do not respond, do one or more of the following, and then repeat steps 1, 2 and 3 again.
 - Make sure that the RF receiver is connected correctly to your computer.
 - Make sure that the batteries are not discharged.
 - Make sure that the batteries have been inserted properly and according to the directions shown in the battery compartment.

Frequently Asked Questions

My mouse seems to be experiencing interference. Is there anything I can do?
You can reset your mouse. Press the **RESET** button on your mouse.

My keyboard seems to be experiencing interference. Is there anything I can do?
You can reset your keyboard. Press the **Connect** button on your keyboard.

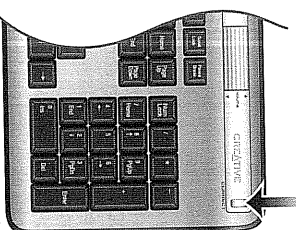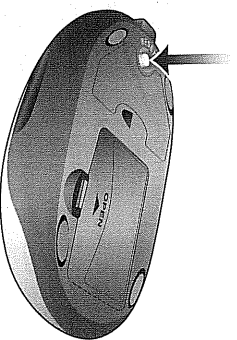

FEDERAL COMMUNICATIONS COMMISSION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.