


尺寸：100*100mm
材质：100克双胶纸
双面印刷

MCHOSE

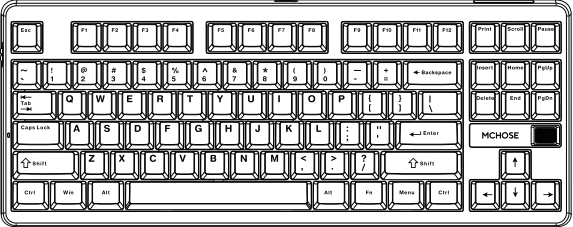

— G87 User Manual —

TRI MODE MECHANICAL KEYBOARD

Mode Switch:
1. The top position [2.4G] indicates 2.4G mode.
2. The middle position [B] indicates wireless mode.
3. The bottom position [OFF] indicates USB wired mode.

Type-C Port

USB Dongle

Multimedia Knob
Turn right for volume +;
turn left for volume -;
press to mute

CAPS Lock Indicator

1. Indicator Lights:
· CAPS Indicator: The CAPS lock indicator shows the status of uppercase letters. It remains on when Caps Lock is active.
· WIN Indicator: The WIN key indicator shows the status of the WIN key lock. It remains on when the WIN key is locked, and the WIN key will be disabled during this time.

2. Win/Mac Mode:
· FN+W = Windows Mode
· FN+E = Mac Mode, ALT key acts as the Command key, FN+F1-F12 functions as the standard F1-F12 keys.
· In Windows mode, switching to Mac mode will swap the Win key and left Alt key, and F1-F12 will function as multimedia keys.

• 2.4GHz WIRELESS CONNECTION

① Set the switch mode to [2.4G] .

② Take out the dongle from the storage slot.

③ Insert the dongle into the USB port of your computer.

Manual pairing (pre-paired at the factory): Press and hold [FN+~] for 3 seconds until the indicator light flashes rapidly, then insert the dongle into the computer's USB port. The indicator will stay on for 2 seconds once the connection is successful.

• WIRELESS CONNECTION

① Set the switch mode to [B] .

② Press and hold [FN+!] to start pairing. The indicator light will flash rapidly during pairing.

③ Search for the wireless device name [MCHOSE G87 3.0] or [MCHOSE G87 5.0] on your device, and then click to connect.

Press [FN+!], [FN+2@], or [FN+3#] to switch between devices.

• WIRED CONNECTION

Set the switch mode to [OFF] , Insert the Type-C end of the USB cable into the corresponding port on the keyboard. Insert the USB end of the cable into the corresponding port on your computer to start using.

Web Driver:
Note: Open the <http://www.mchose.io> in a browser, click [Initialize Device] , then [Allow Browser Access] , and select the corresponding product model to connect.

Desktop Driver:
Visit MCHOSE Official Store: www.mchose.store
Click [Drivers & Firmwares] . Select the corresponding product model, then click the driver to download and install.
Note: The desktop driver is only compatible with Windows systems.

• LIGHTING FUNCTIONS

ESC

INS

DEL

↑

↓

←

→

B

Press and hold for 3 seconds to restore default settings

Switch lighting modes

Switch lighting colors

Lighting brightness+

Lighting brightness-

Lighting speed-

Lighting speed+

Check keyboard battery level

• WINDOWS SYSTEM

Key	F1	F2	F3	F4	F5	F6
Press the single key	F1	F2	F3	F4	F5	F6
Press with FN combination key	Homepage	Mail	Switch Window	File Explorer	Lighting Brightness-	Lighting Brightness+

• MAC SYSTEM

Key	F7	F8	F9	F10	F11	F12
Press the single key	F7	F8	F9	F10	F11	F12
Press with FN combination key	Previous song	Play / Pause	Next Song	Mute	Volume-	Volume+

• BATTERY MANAGEMENT

1. BATTERY STATUS

In 2.4G/Wireless mode (when USB is not connected), press FN+B to display the keyboard's battery level. All other backlighting will turn off, and releasing FN+B will restore the lighting effects. When fully charged, the number keys [! - 0] will all light up green. As the battery drains, the green light will gradually decrease, and when the number keys [! - 3#] turn red, it indicates low battery.


2. CHARGING METHOD

In any mode, connect the keyboard to your computer with the provided cable to charge the keyboard. When the battery is low, the [Esc] key will flash red. While charging, the [Esc] key will stay red. Once fully charged, the [Esc] key will return to its normal lighting effect.

3. SLEEP FUNCTION

By default, the keyboard will enter sleep mode after one minute of inactivity. Press any key to wake up the keyboard.

Status indicator

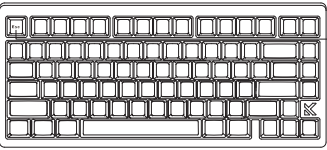

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

⚠ CHARGING INSTRUCTION ⚡

1. It is recommended to charge the keyboard using the computer's USB port only.
2. Do not use fast-charging phone chargers to charge the keyboard.
3. Do not use low-quality, non-standard power adapters to charge the keyboard.
4. Do not use over-voltage or over-current power adapters to charge the keyboard.
5. Keep the keyboard away from high-temperature devices while charging.
6. Turn off the power switch if the device will not be used for an extended period.

The above charging instructions also apply to other rechargeable devices (keyboard, mouse, headphones, speakers, etc.).

WARRANTY CARD

Thank you for purchasing our product. Please contact us if there are any quality issues within the warranty period. Please provide this warranty card so we can provide comprehensive after-sales service.

Product Items: _____ Customer Name: _____

Serial NO. : _____ Contact Address: _____

Purchase Date: _____ TEL / E-mail: _____

Purchase Channel: _____ Postal Code: _____

CERTIFICATE OF CONFORMITY

Name: Mechanical Keyboard

Model: QC

Inspector: 11

PASS

FACTORY DATE: 2024/11/23 15:59:10

EXECUTIVE STANDARD: GB4943.1-2022

PDF
Adobe