

USER MANUAL

NUTEK CORPORATION

Model:NE07

FCC ID:ELVATRFD

Remote Control Transmitters

TRANSMITTER PROGRAMMING :

If the need arises for programming of additional or replacement transmitters,

simply follow the 4 steps outlined below:

1. Turn the ignition to the ON position
2. Press and release the programming button 3 times
3. Press and hold, for 3 seconds, the button of the transmitter you wish to add until the parking light flashes indicating the transmitter has been learned

NOTE: Do not allow more than 5 seconds the lapse between steps or the program mode will be automatically exited and you will have to start over.

NOTE : The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC Caution :To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.