
 



U101

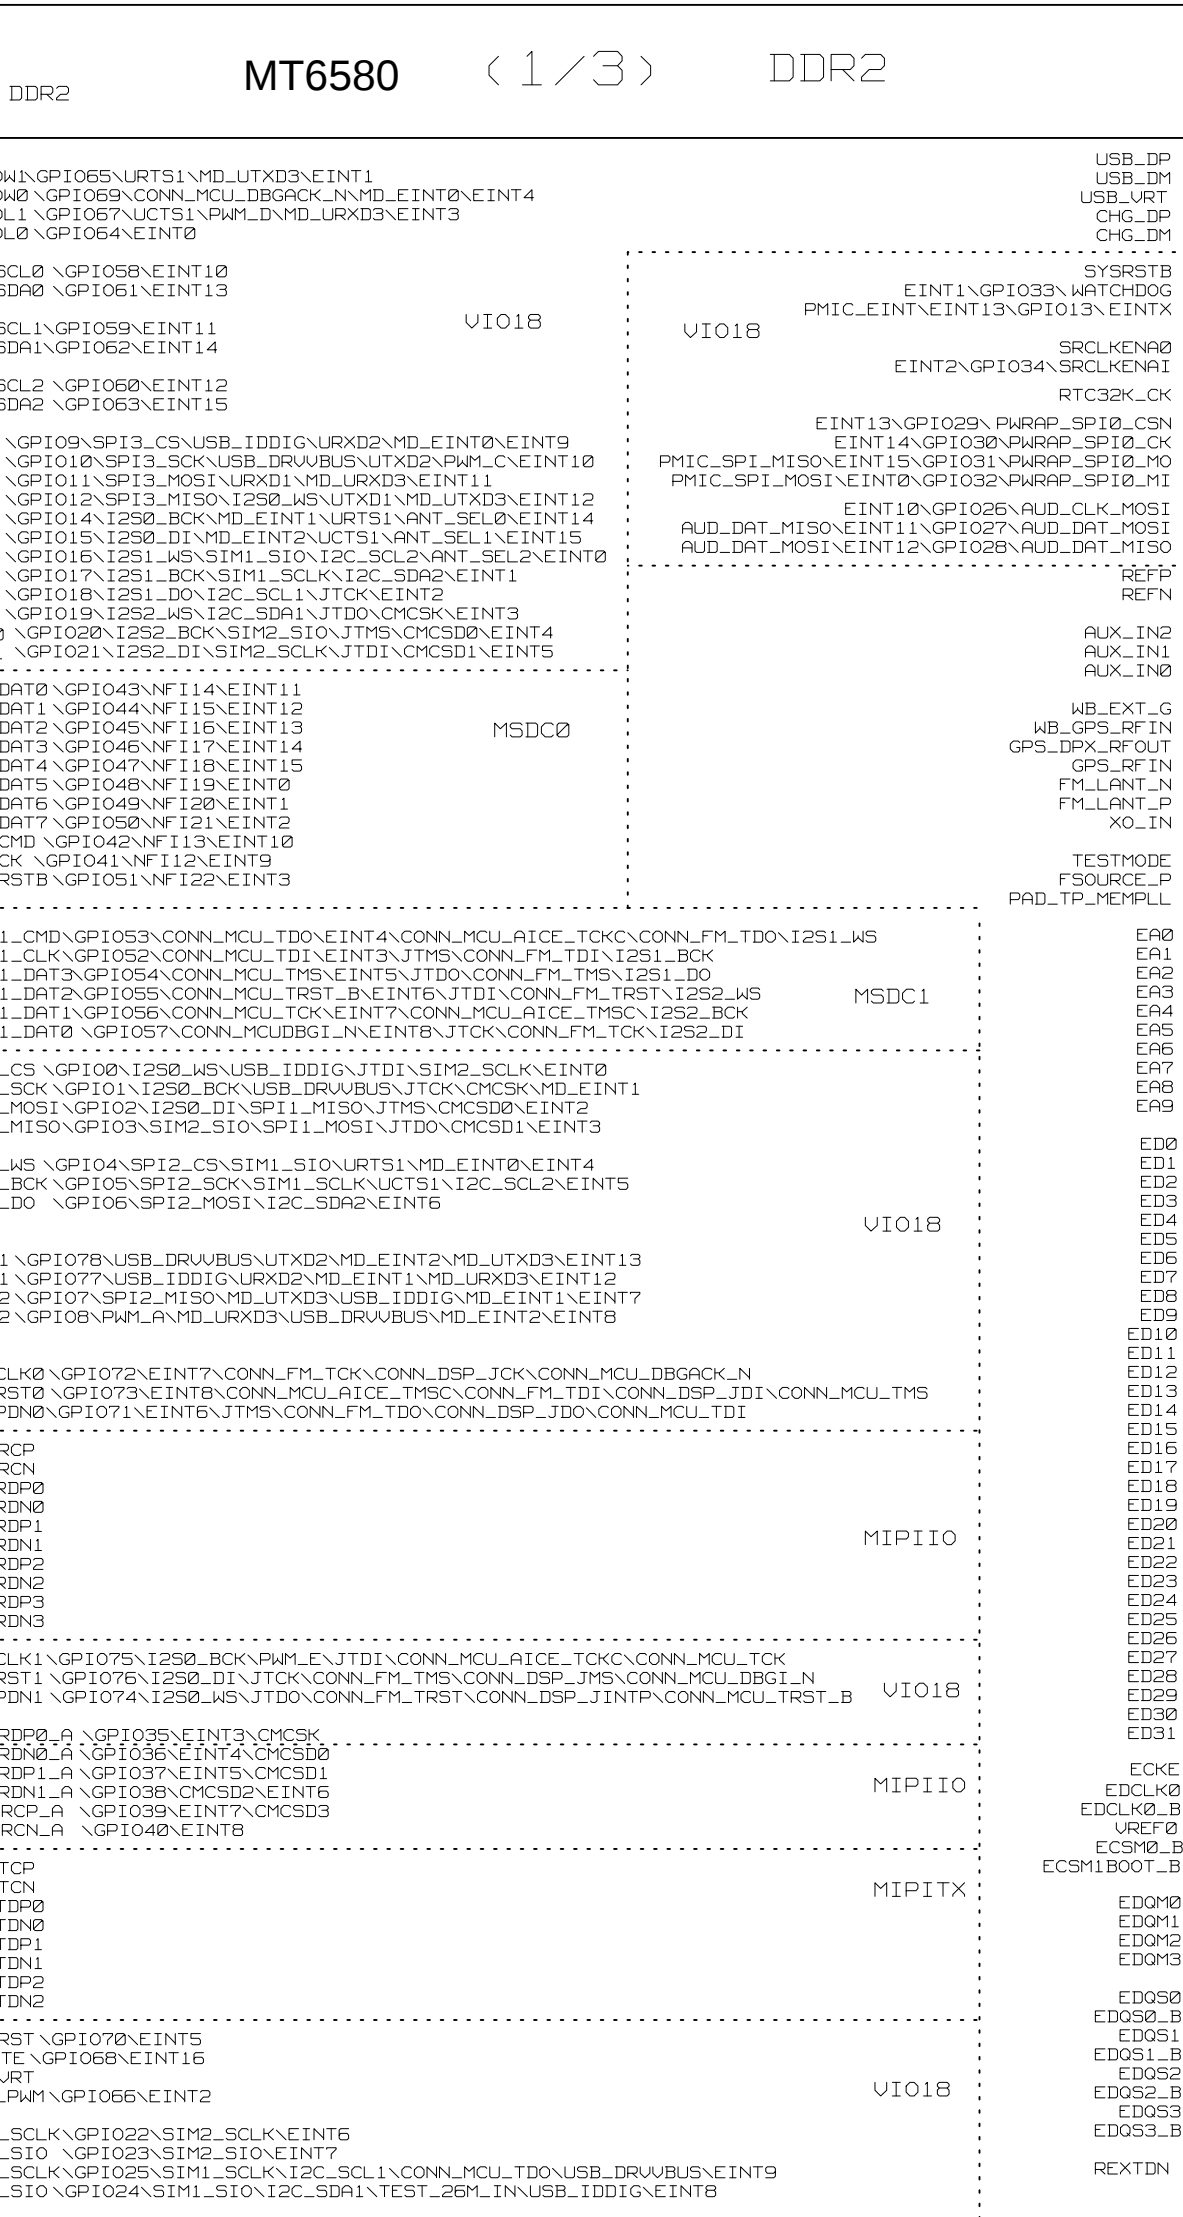




4000144020R4300001

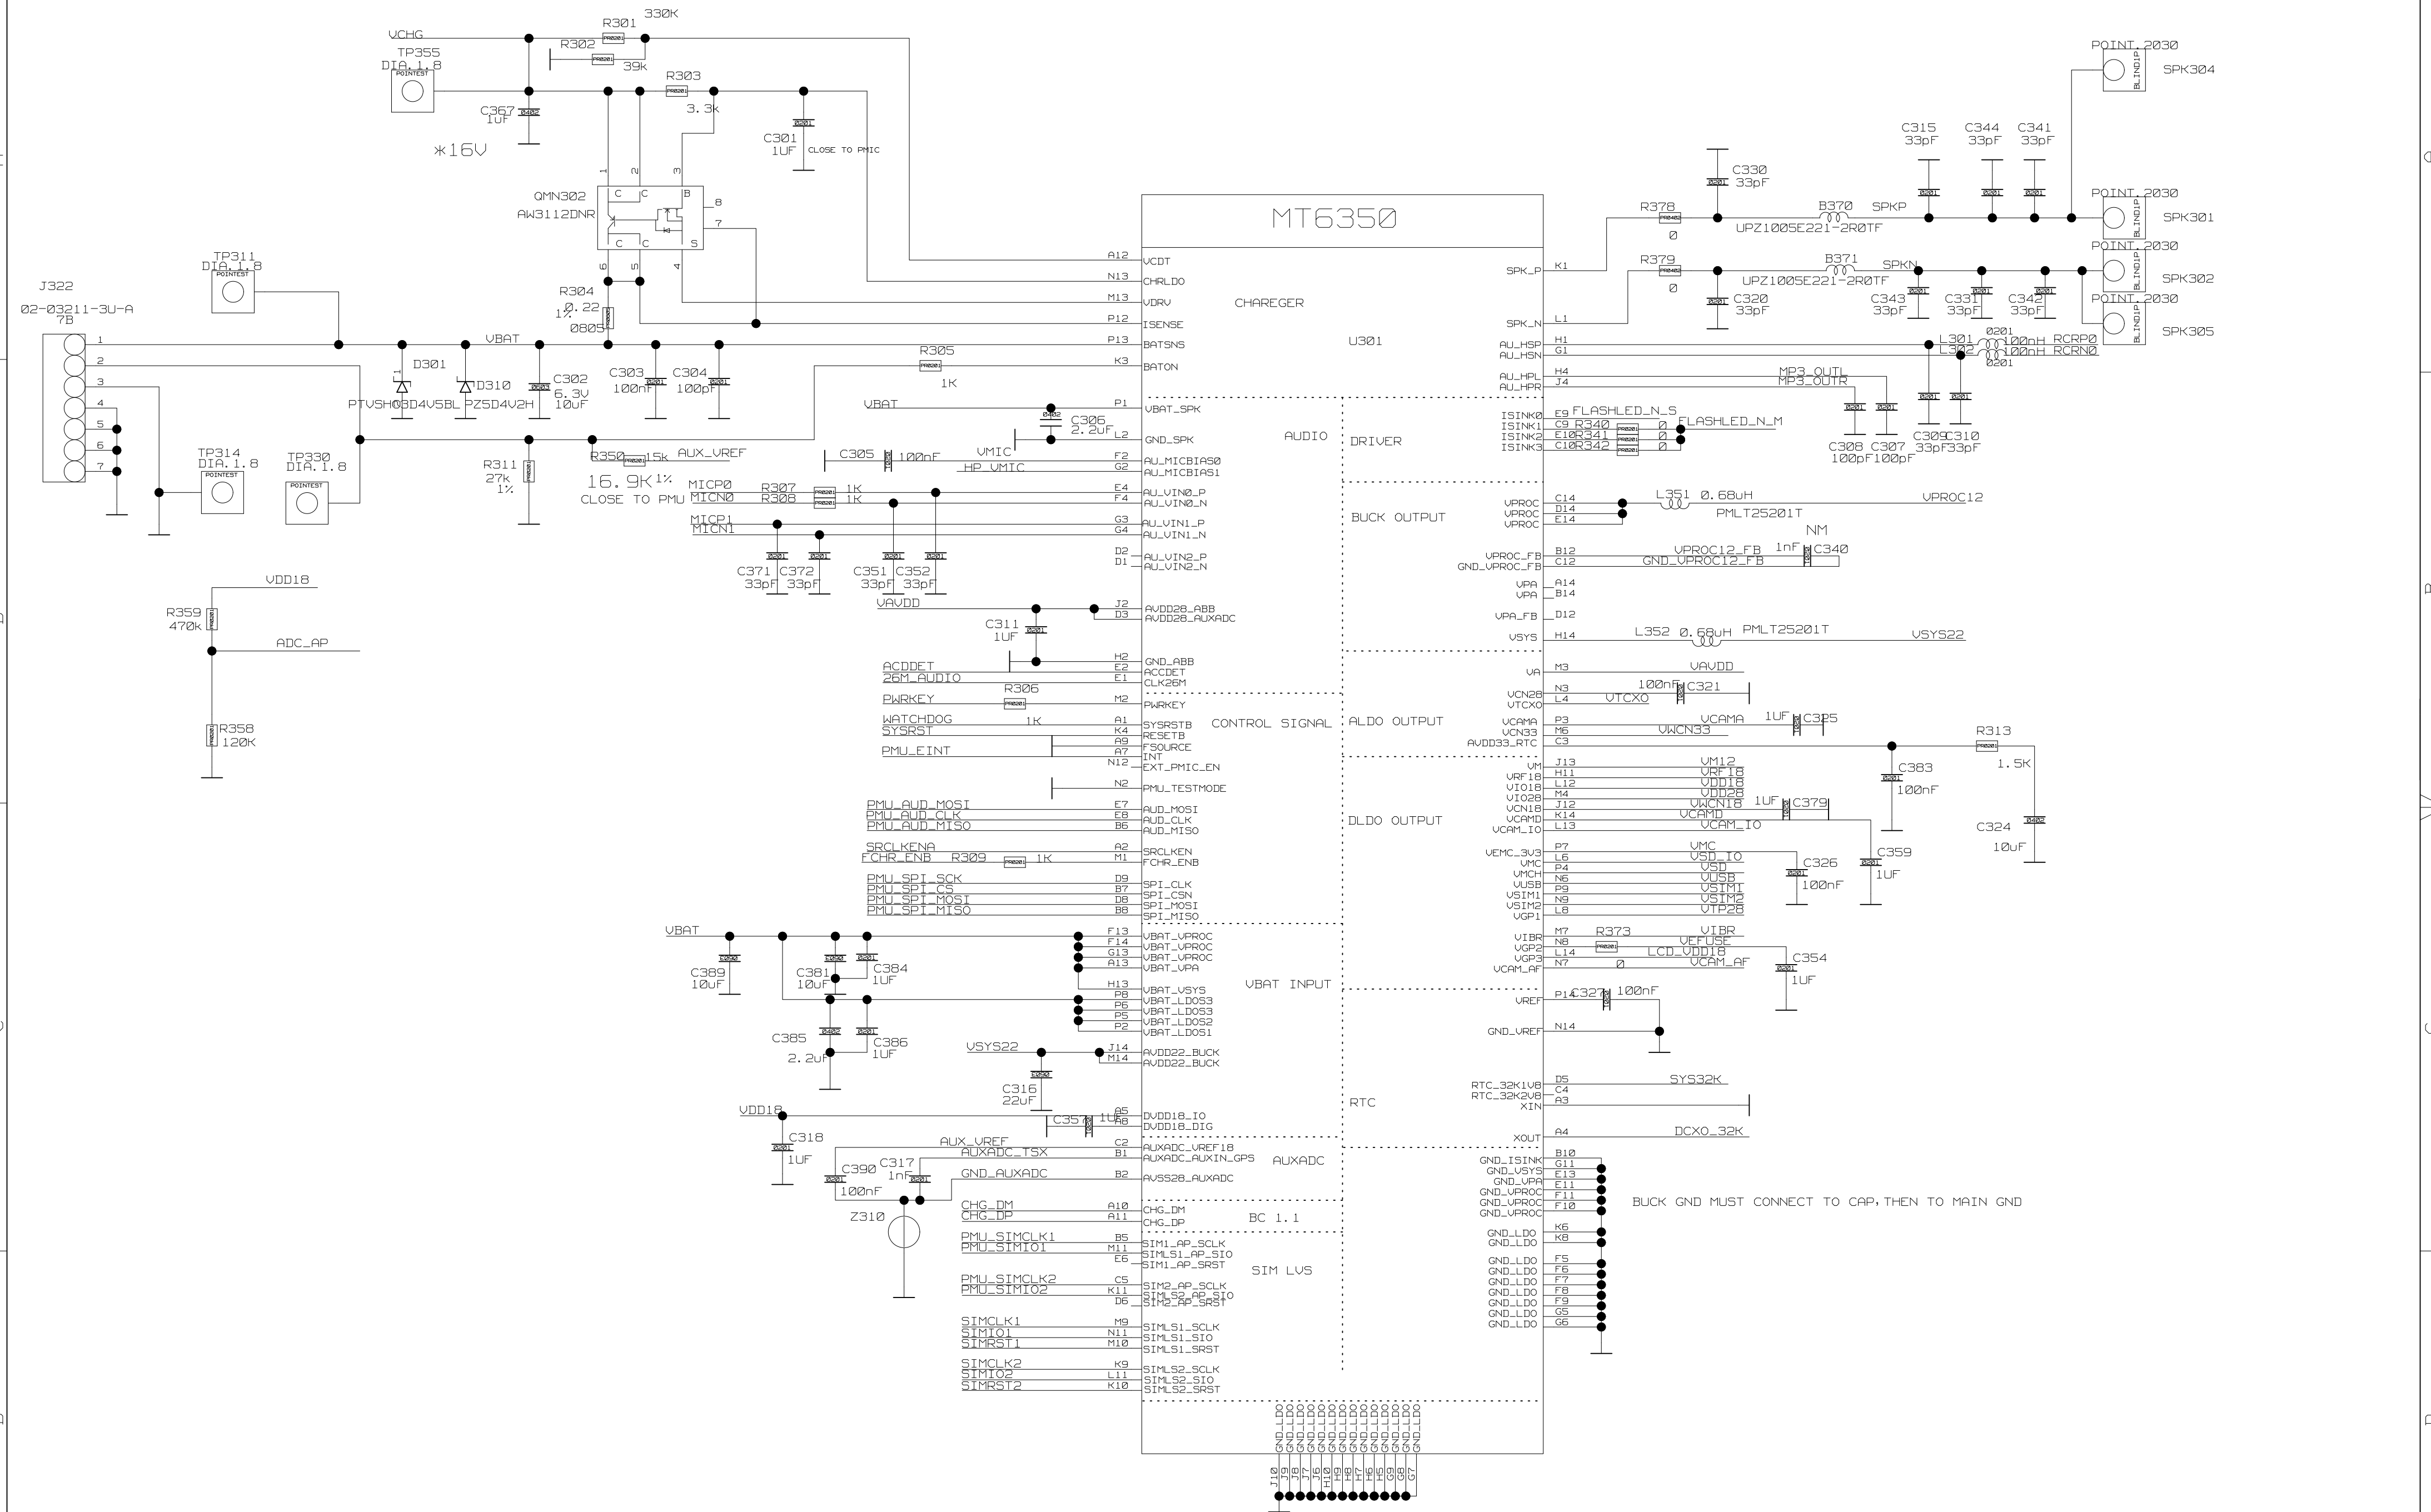

BUCK GND MUST CONNECT TO CAP, THEN TO MAIN GND

4000144020R4300001

T-Flash&SIM 3 IN 1

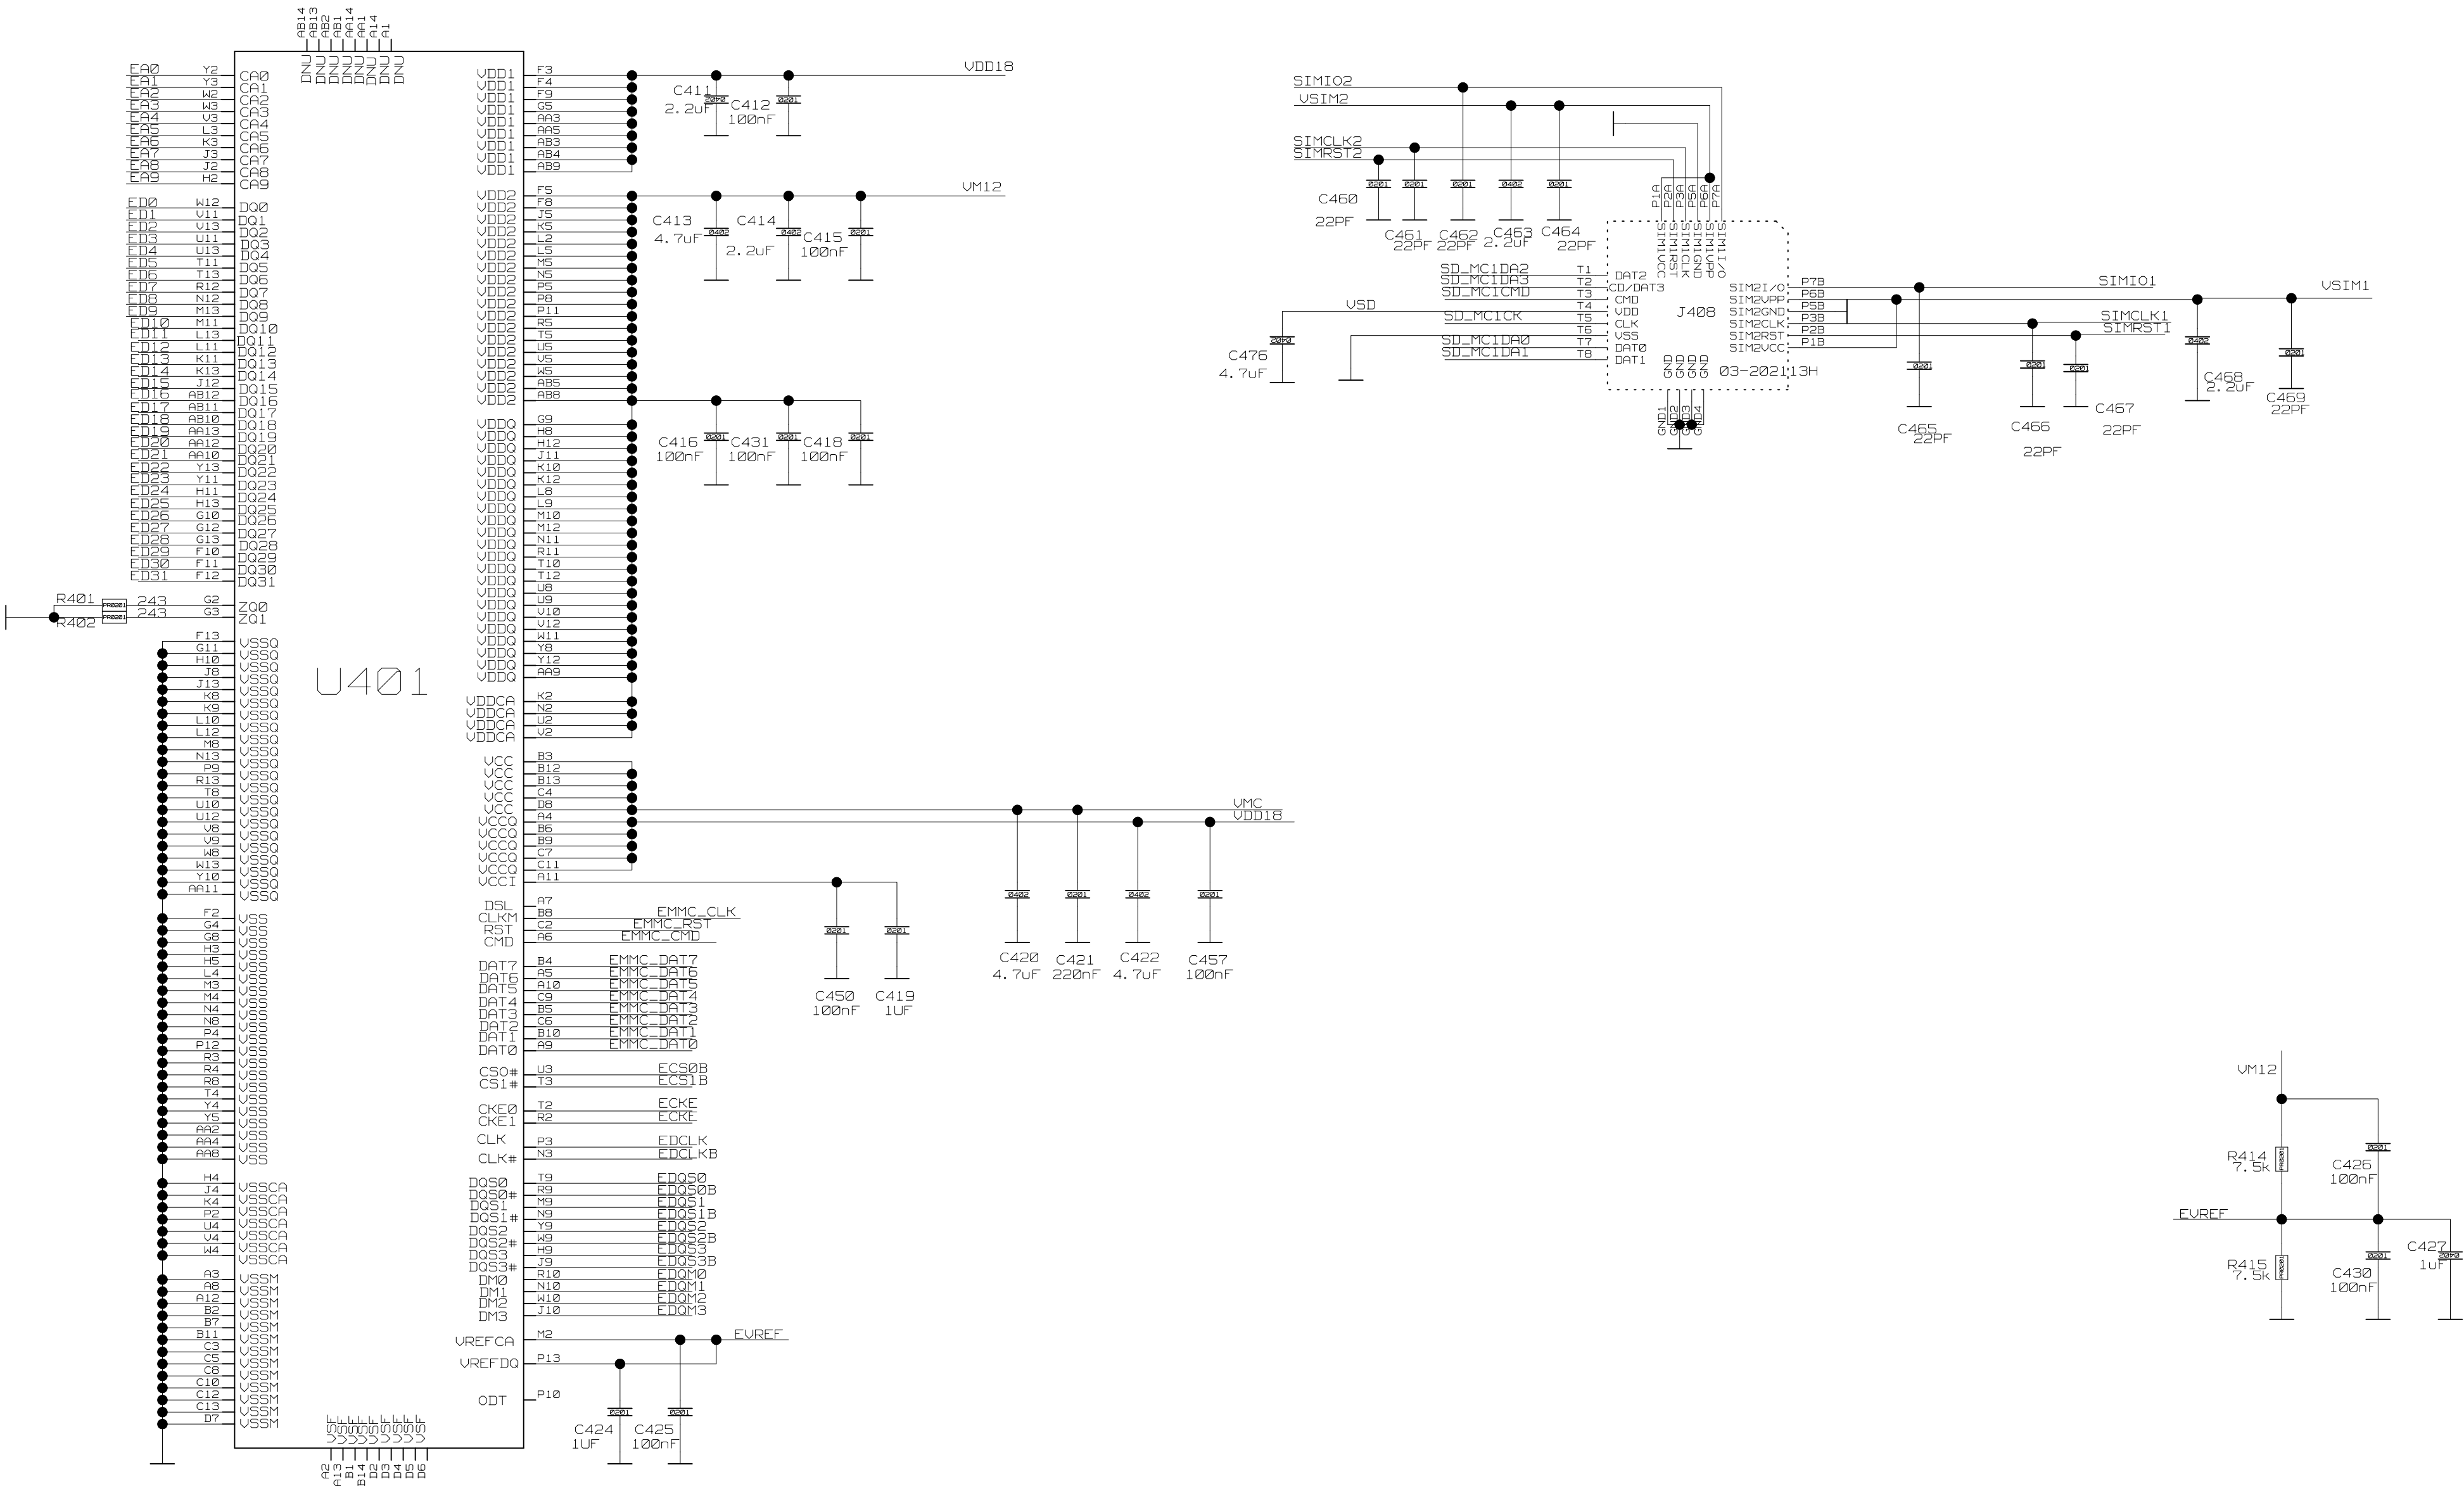







HEADSET AND DIGITAL AUDIO




RE

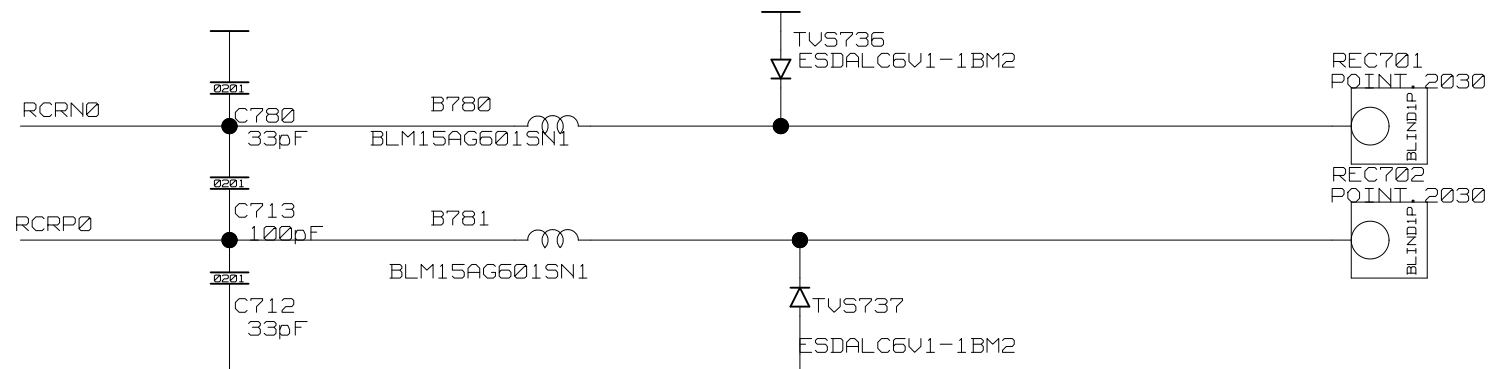


HEADSET

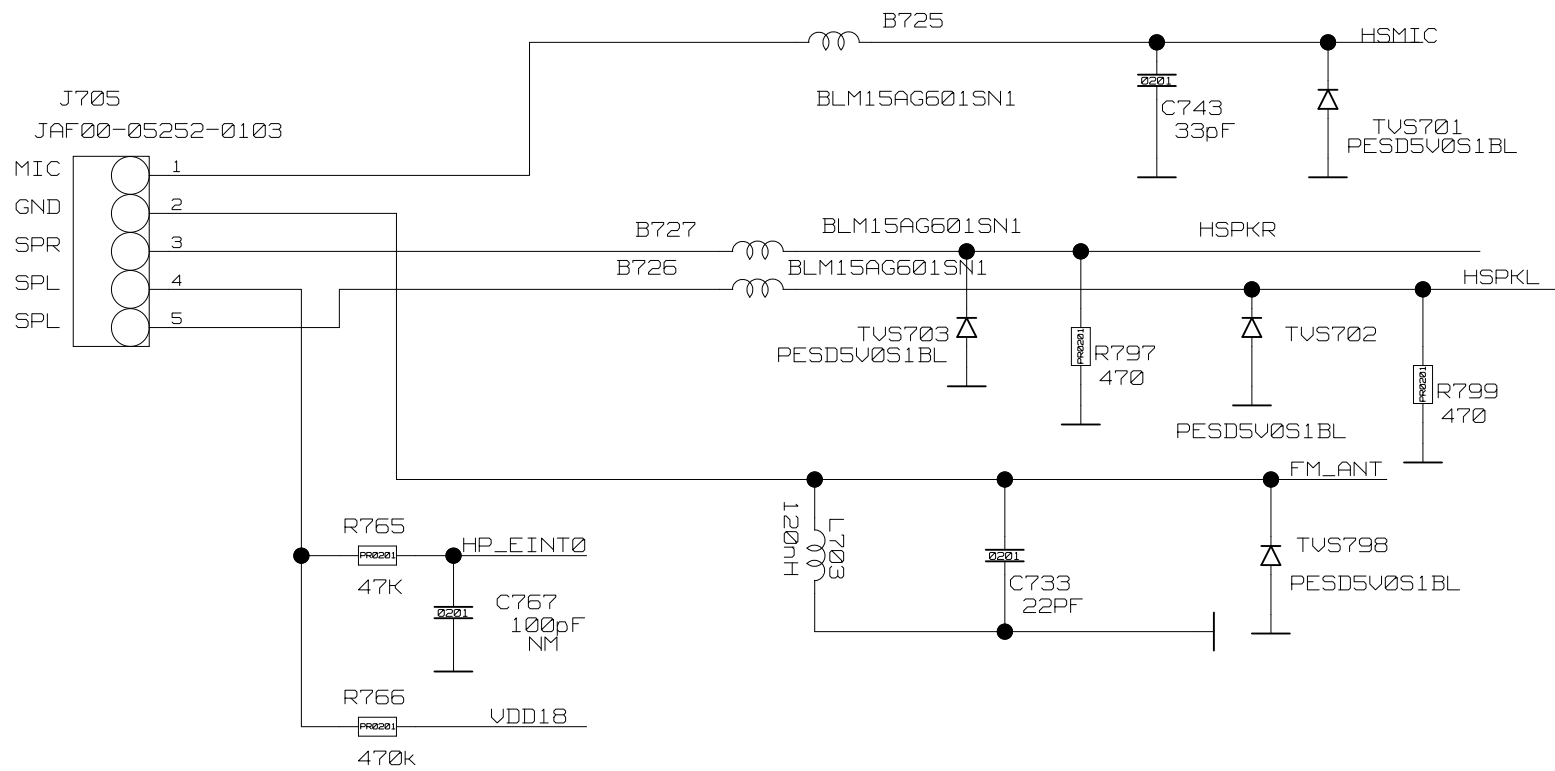


SUB FPC


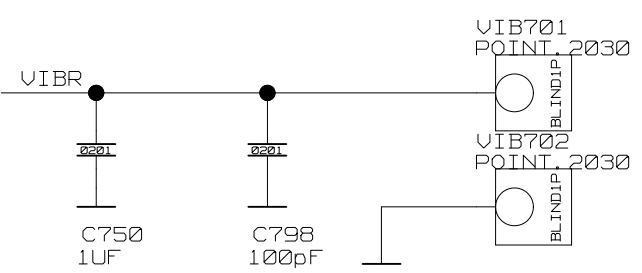





MICPHONE CIRCUIT

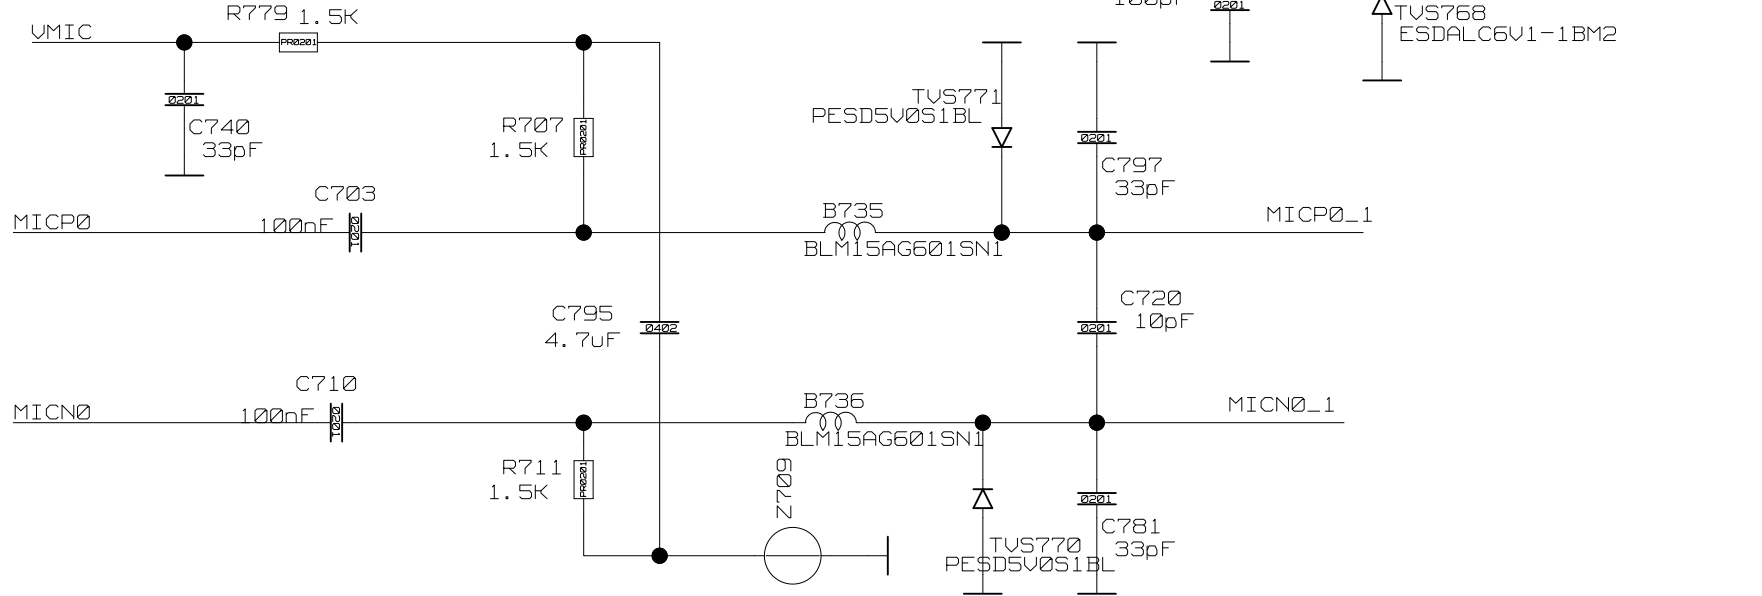



MINI USB 5 PIN

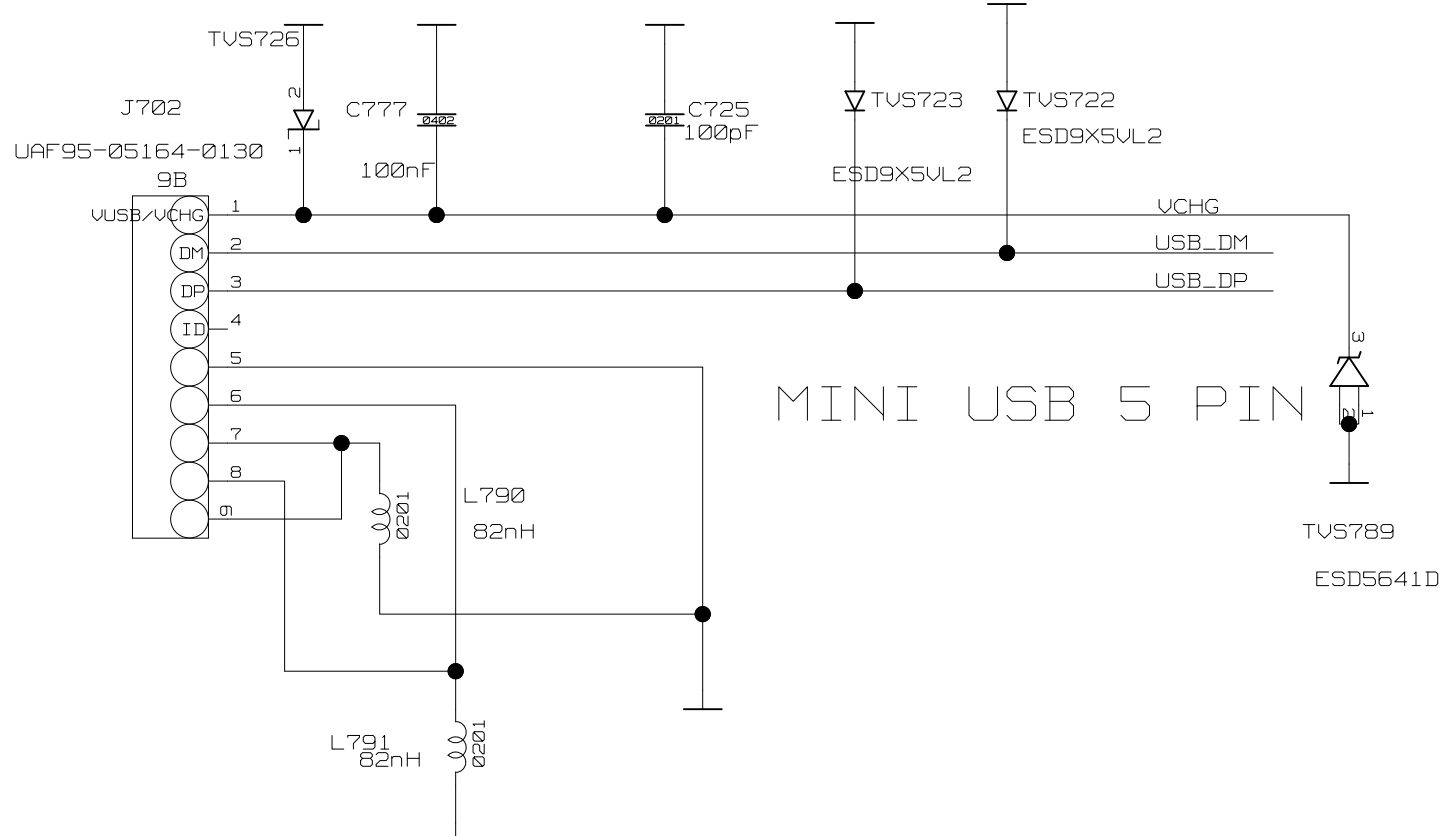

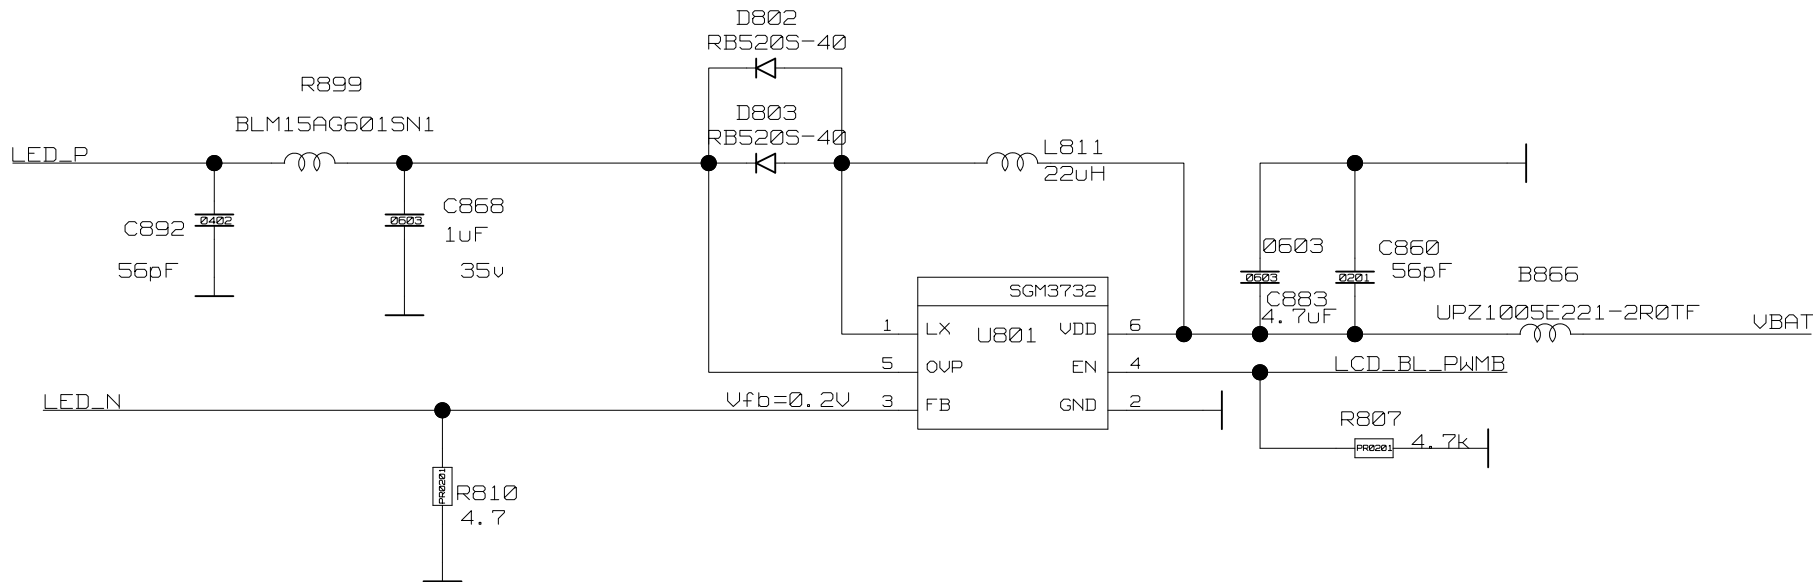
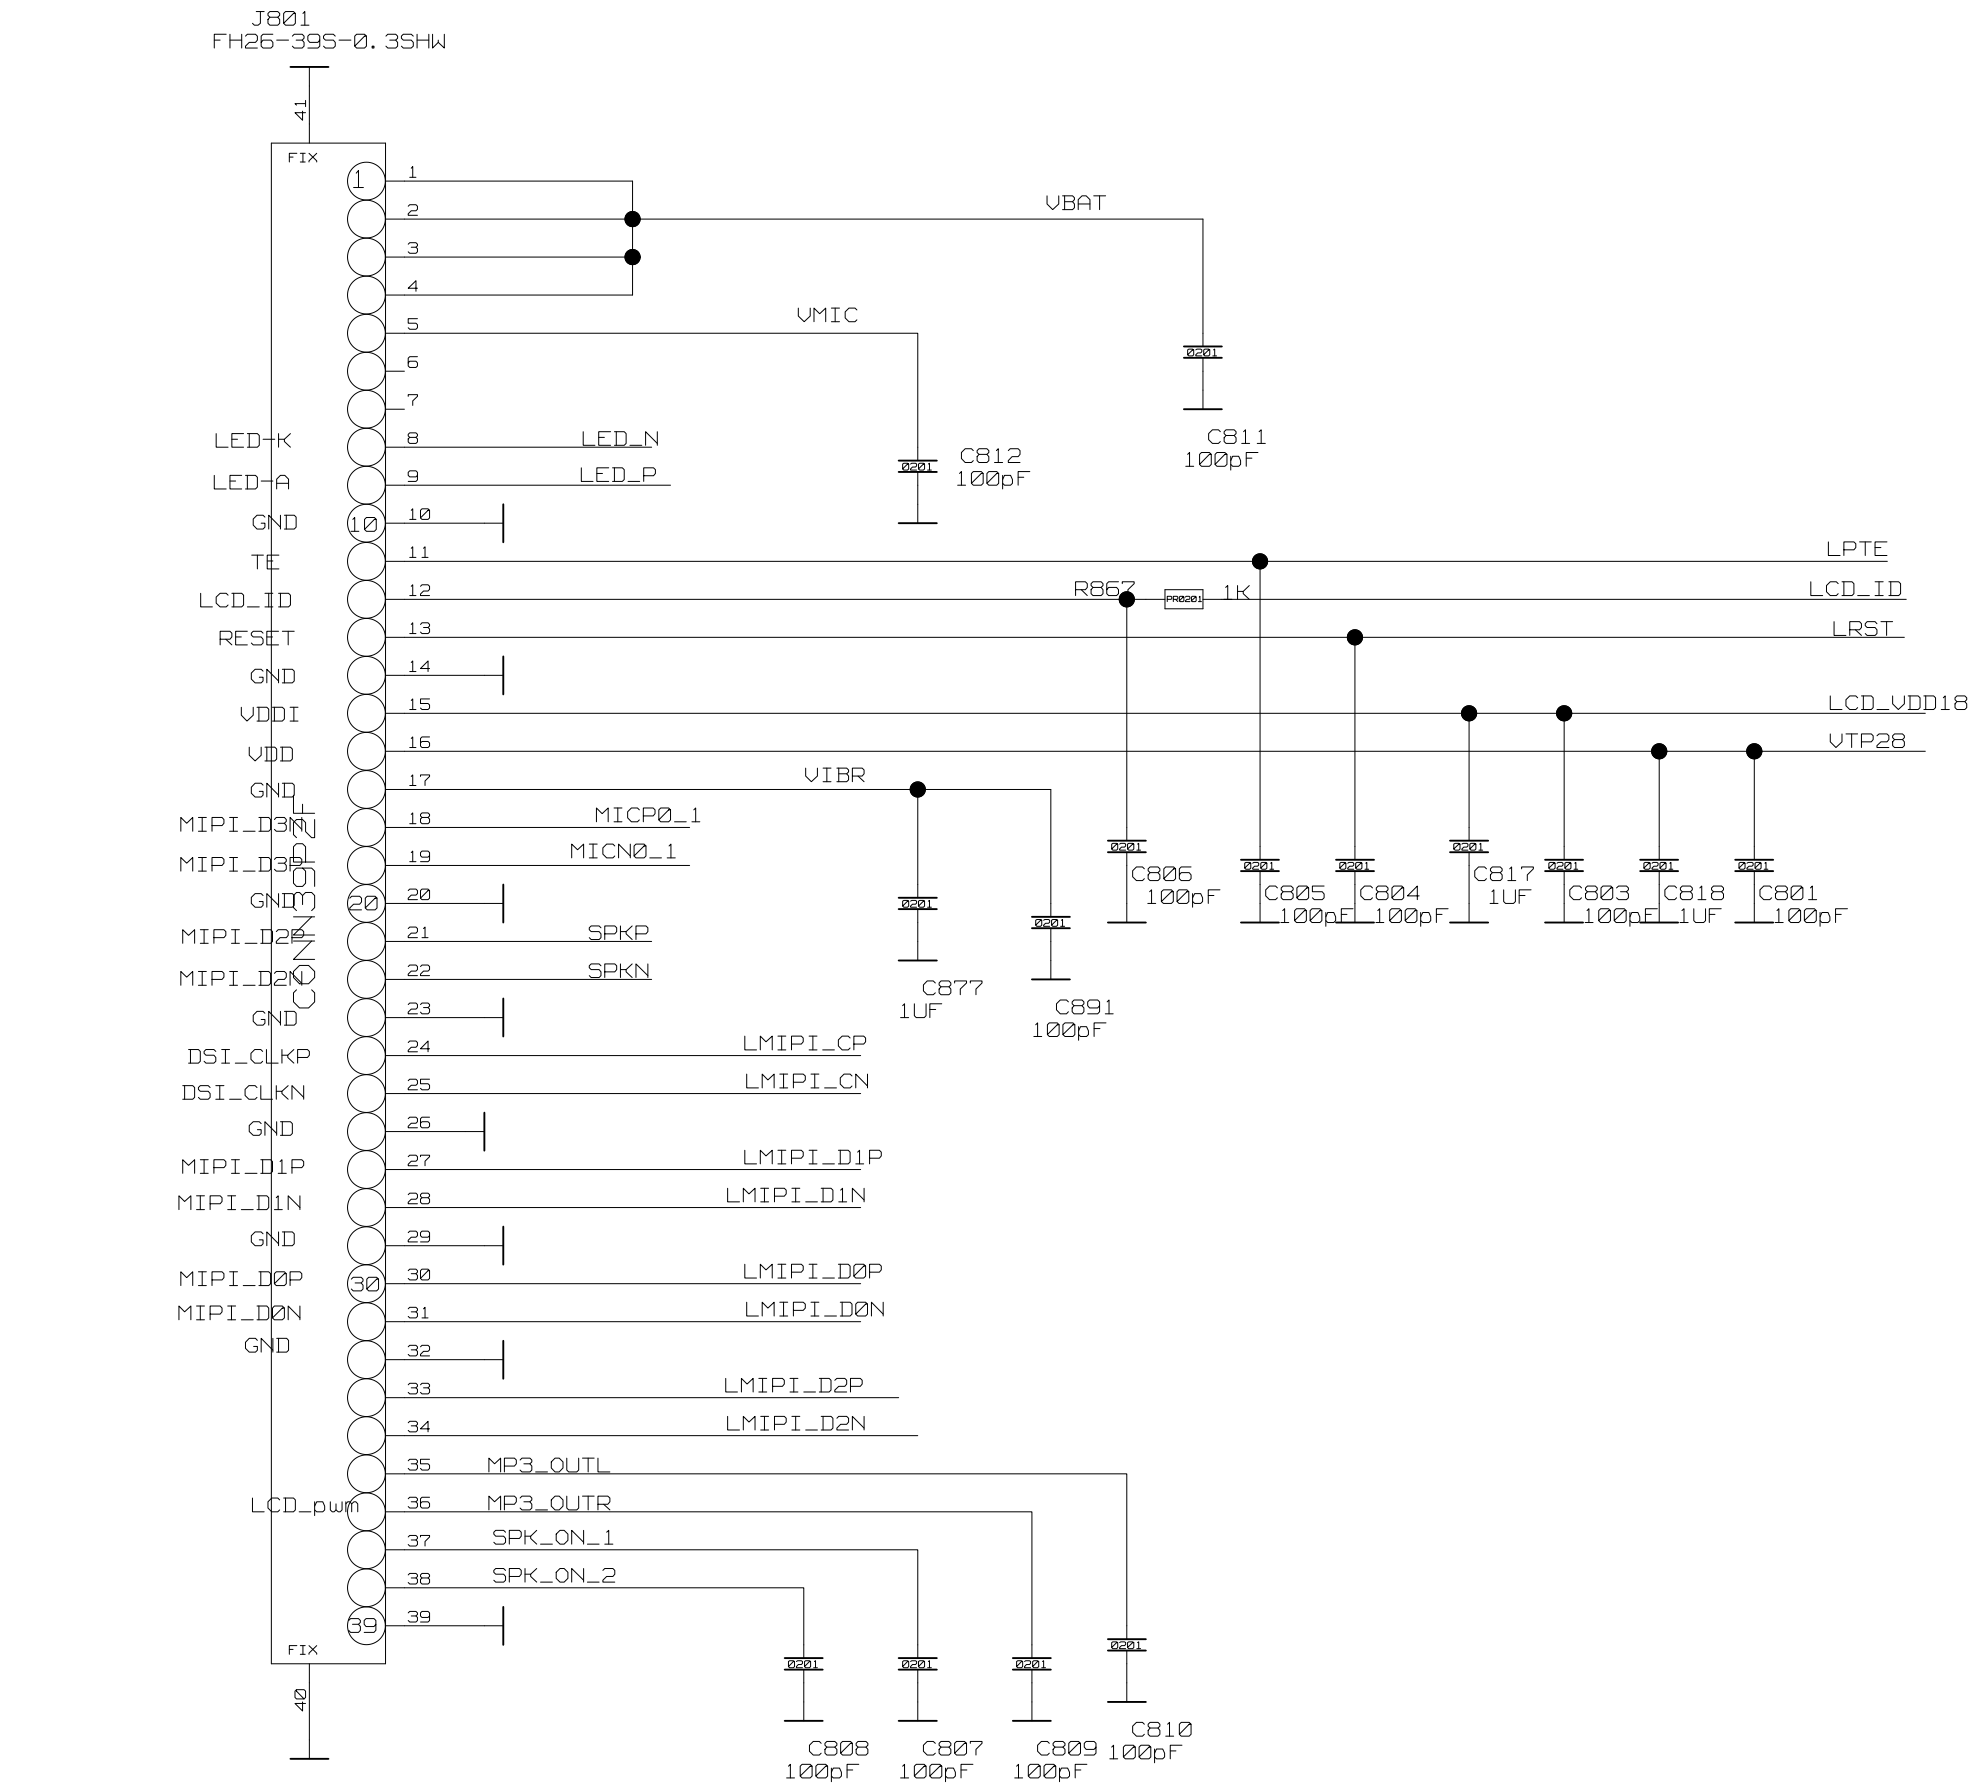


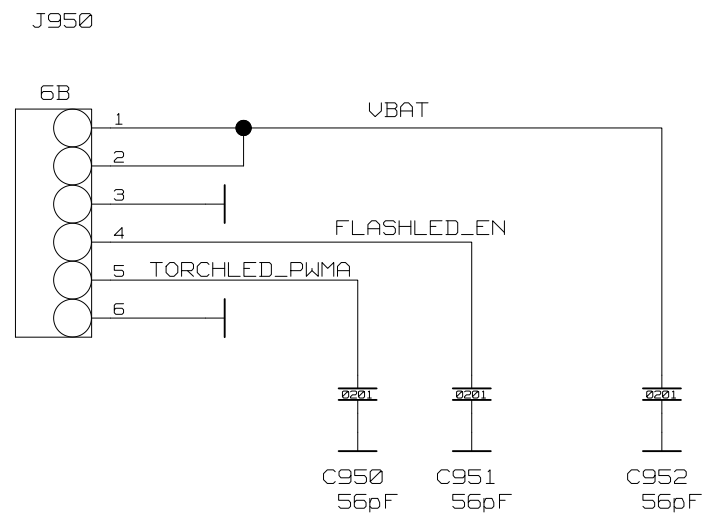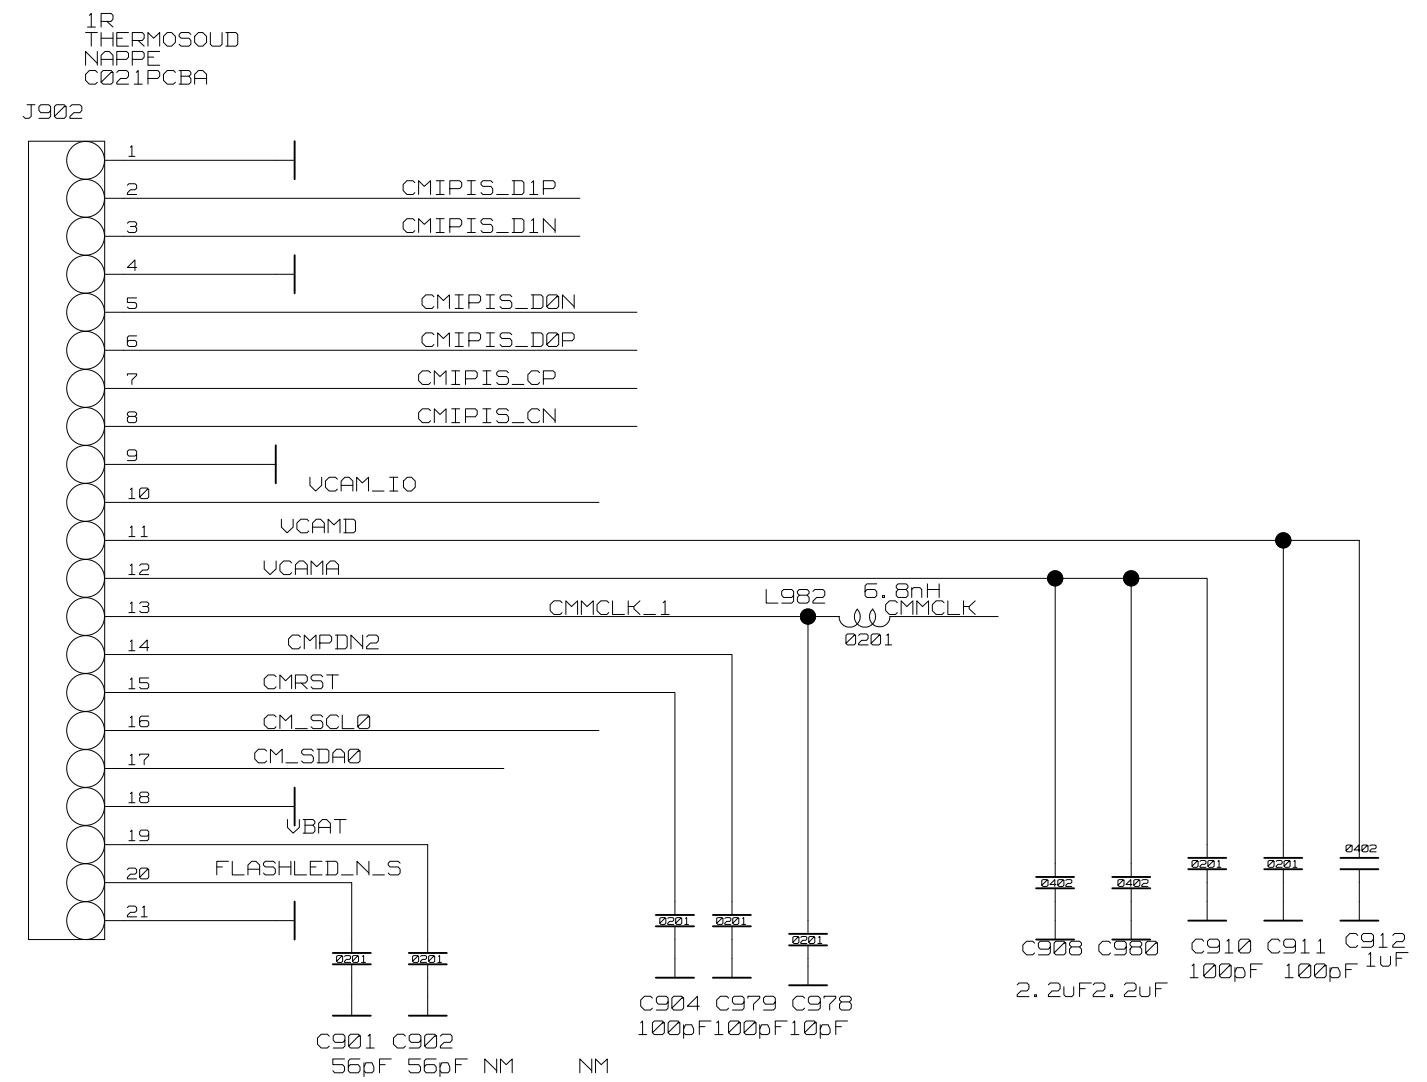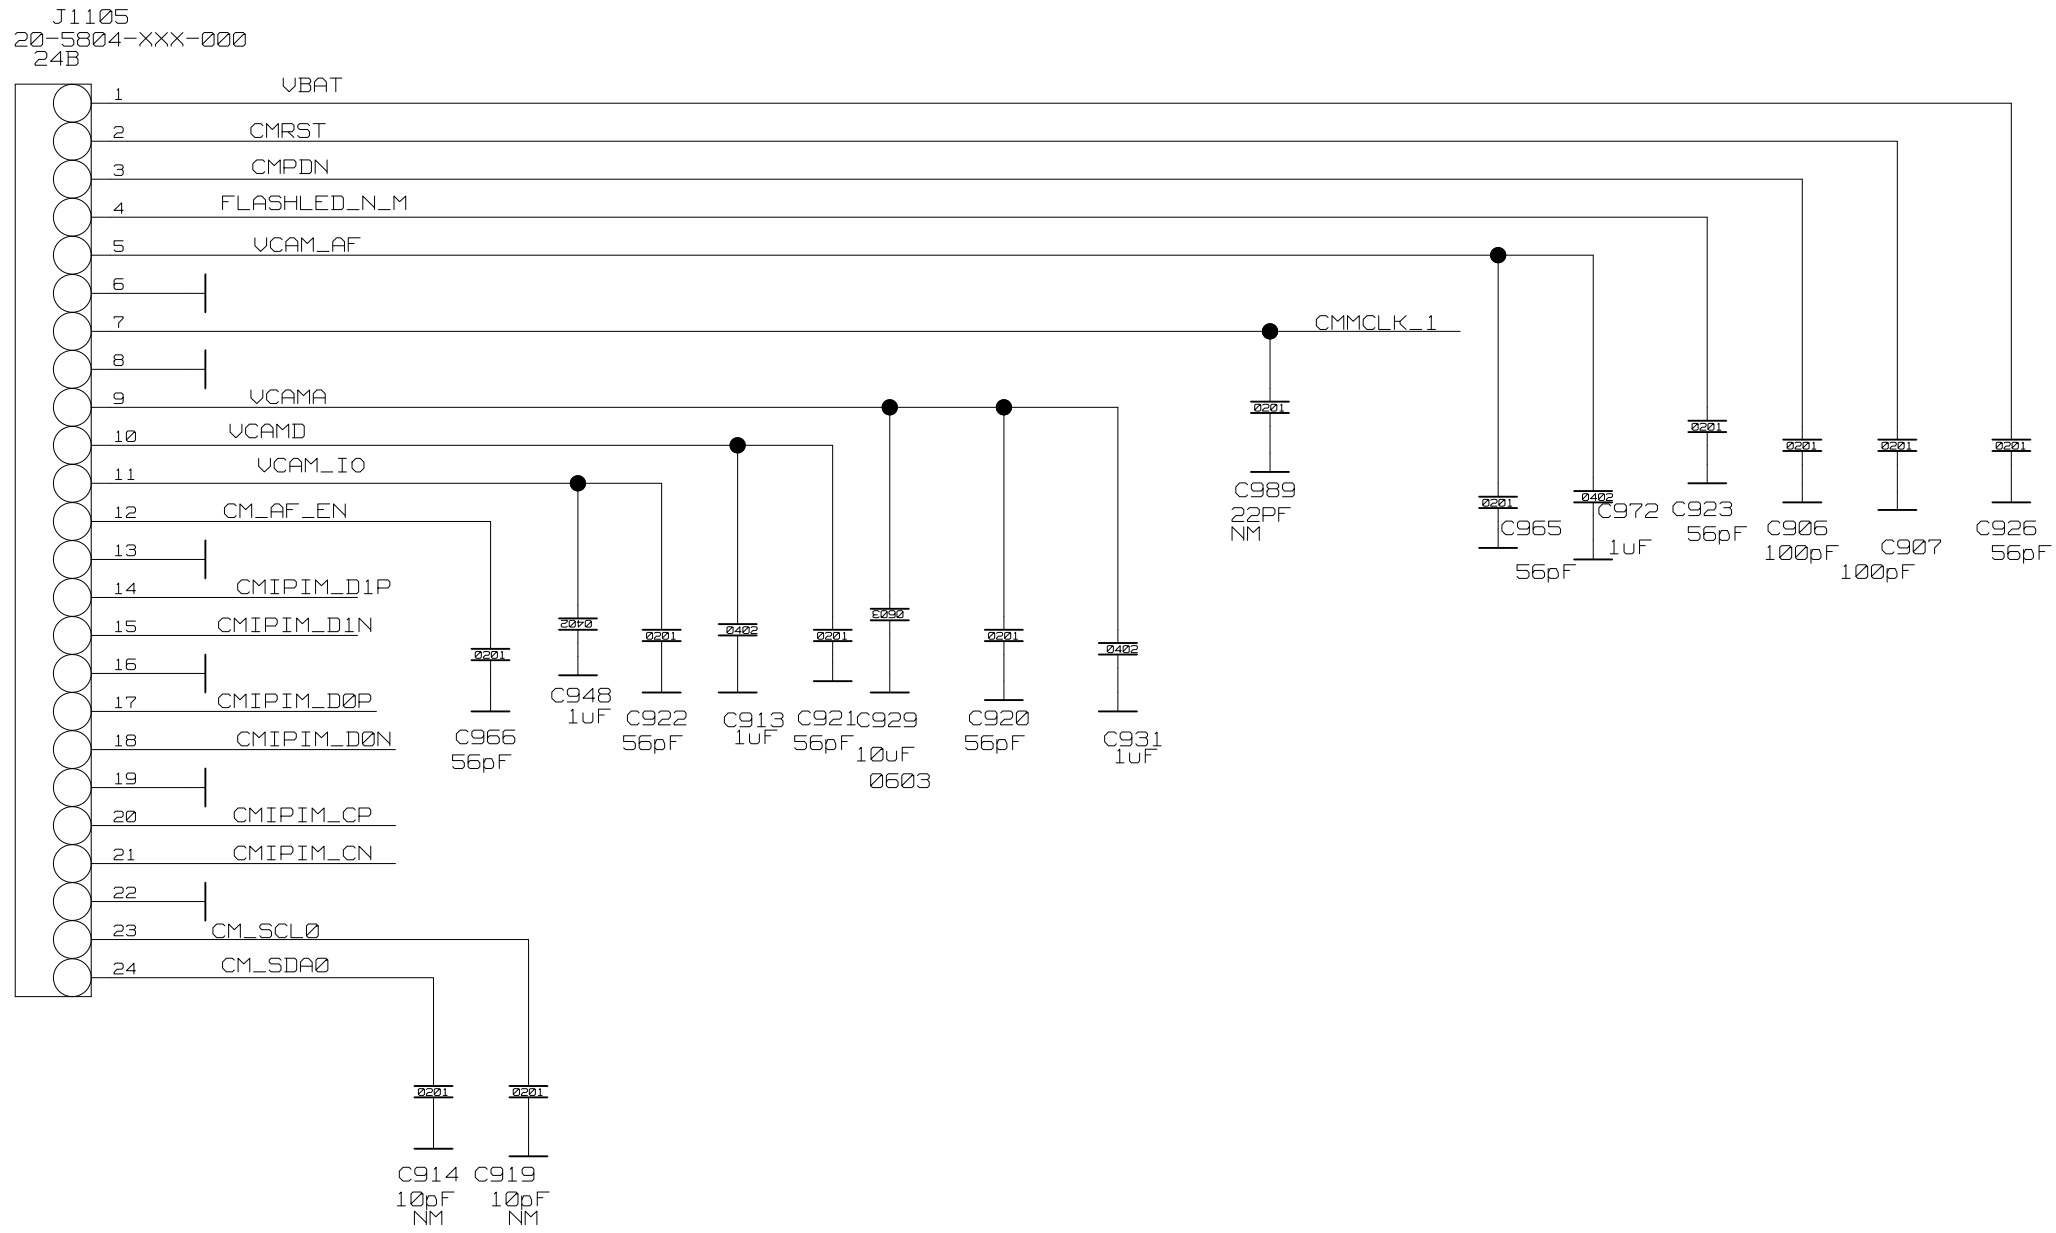

TP FPC

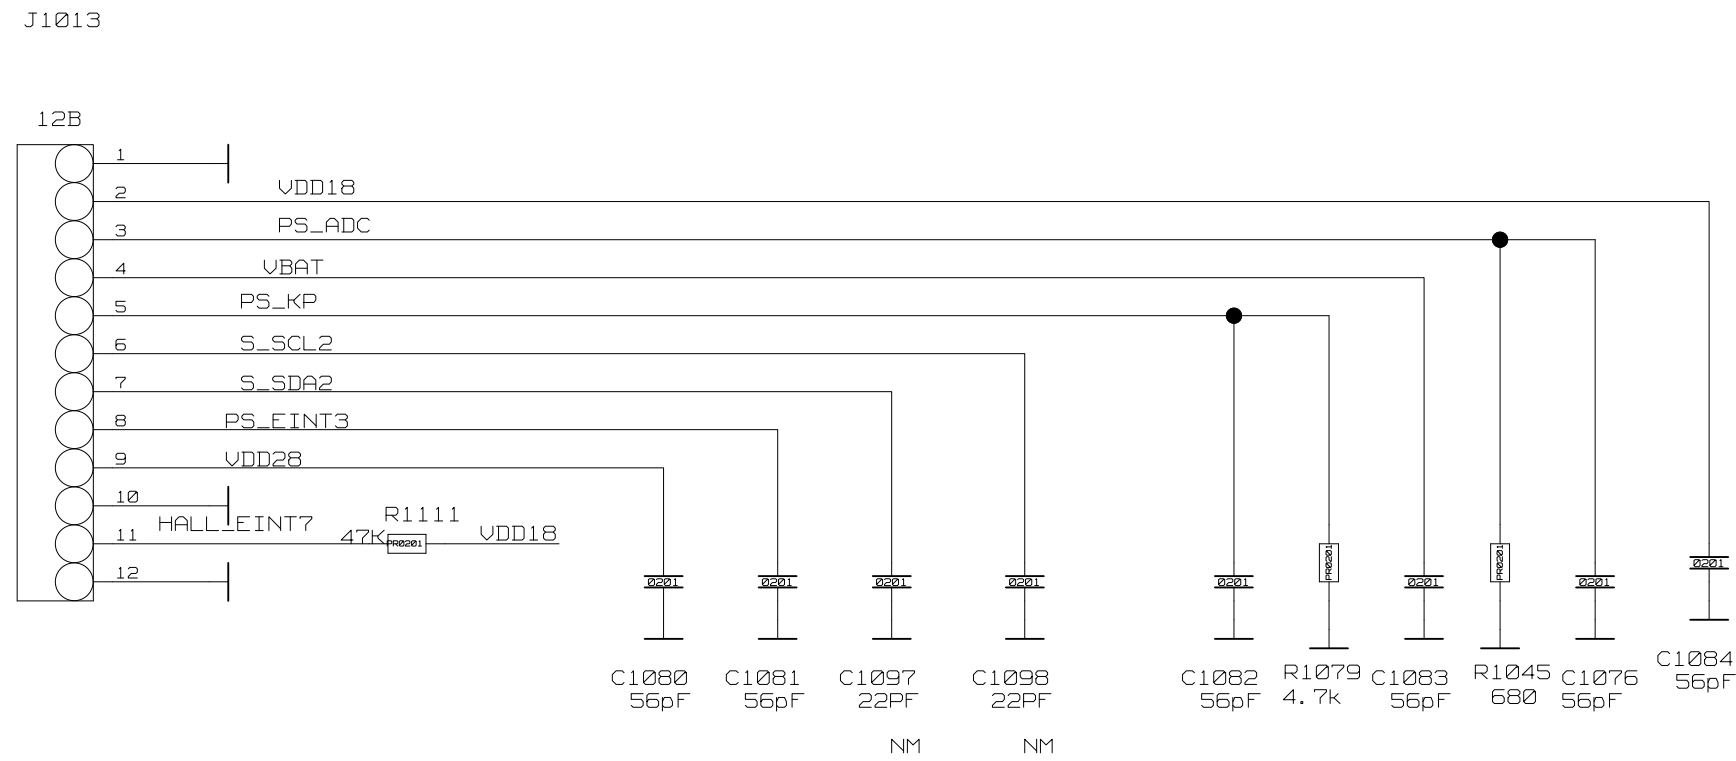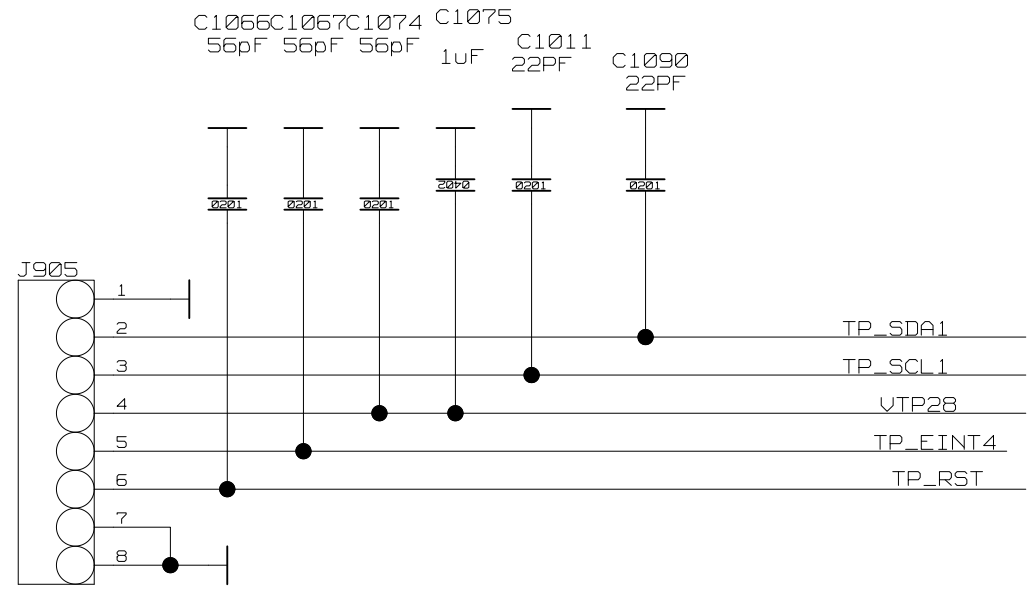


MOTION SENSOR

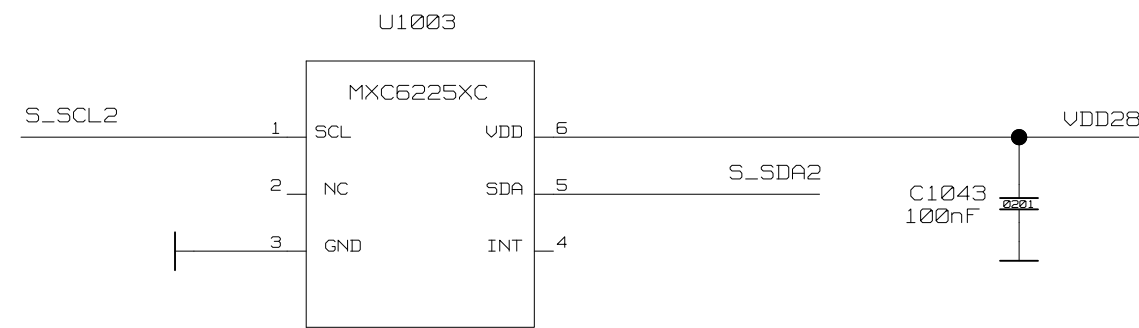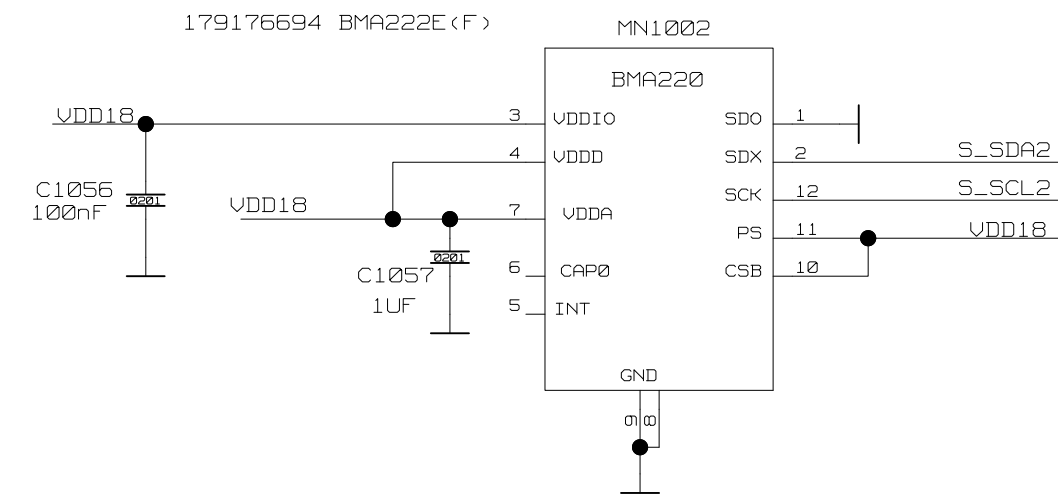

4000144020R4300001

J1102

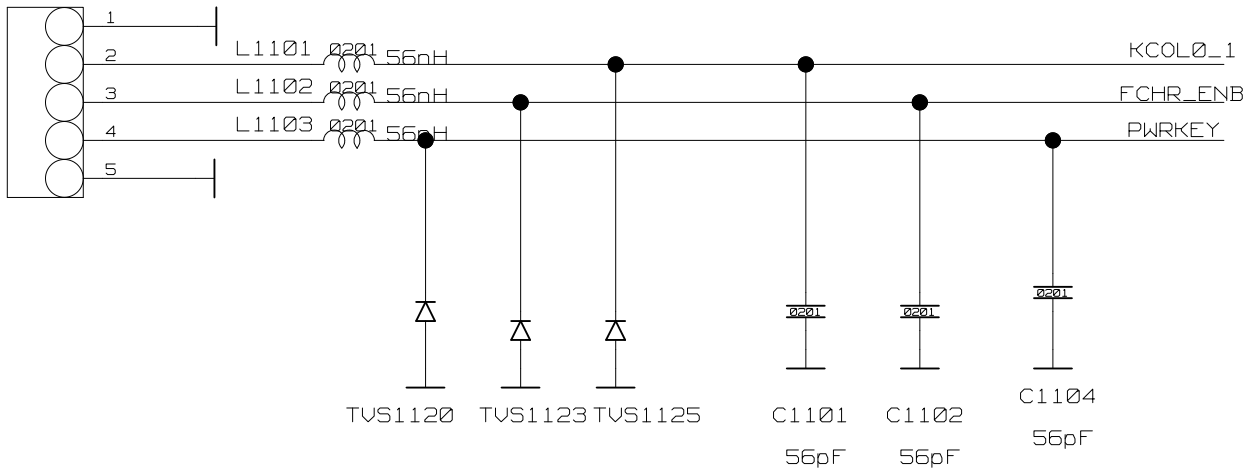

J1103

