

EUT:JOYSTICK

FCC ID:FSUGUSBG07

KYE SYSTEMS CORP

U'ser Manual

EXHIBIT 1

USB G-07 USER GUIDE

(1). Install your USB G-07 Game Pad

1. Turn on the power of computer
2. Plug the USB G-07 connector into the USB port on the computer firmly
3. Enjoy your game

(2). Adjust your USB G-07 Game Pad

1. In the Windows 98, choose the "start" menu (Ctrl & Esc).
2. Click the "setting" button
3. Click the "control panel"
4. Click the "game controller" in the dialog box
5. Click the "property"
6. Follow the instructions on dialog box to complete the adjustment

(3). Function button Description

1. The direction button has eight directions, you can use this button to control the direction in game
2. The left, right buttons and the six buttons on the panel all are function buttons the function setting depend on the software of game

