

8.89 cm / 3.5 in

6.985 cm / 2.75 in

55.88 cm / 22 in

 
Let's Set You Up For Great Sleep

HatchRestore

Step 1

Plug in Hatch Restore

Connect your power cable then plug it into your power outlet. Always keep your device plugged in.

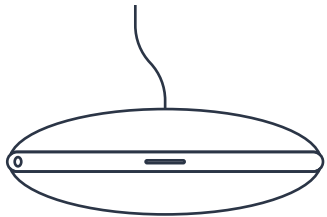

Step 2

Download the Hatch Sleep app

Download the app on your phone or tablet to create an account.



Step 3

 
Complete Setup

Follow the steps in the Hatch Sleep app to connect your device. Wi-Fi is required.




Top Button

Turn On: Tap top button.
Turn Off: Press & hold top button.
Skip: Tap to skip through your routine steps.

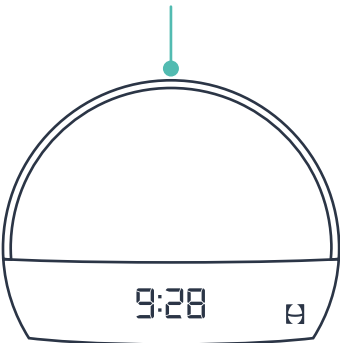

Side Controls

 
Right: Tap to increase or decrease brightness.

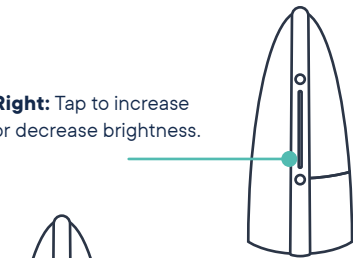

Left: Tap to increase or decrease volume.



 Alarm Controls

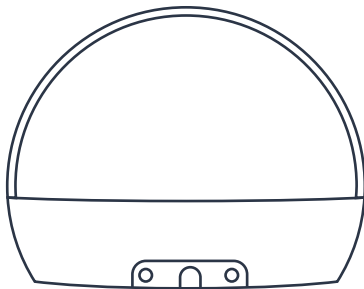

Press to check alarm time.

Press to turn all alarms on and off.

Quick Tips



Alarm

The dot next to the time indicates your alarm is on. Use the app or the alarm button on the back of Restore to turn your alarm on or off.

Wish to snooze? Tap the top of Restore for another 9 mins!



Clock Brightness

Dim or turn off the clock in the app. Visit Clock Display under Settings.

Need help? Hatch support is a dream.

Avez-vous besoin d'aide ?
Le soutien à Hatch est un rêve.

Contact us at support@hatch.co.

Contactez-nous à support@hatch.co.



Follow [@hatchforsleep](https://twitter.com/hatchforsleep) and see what dreams are made of.

Suivez [@hatchforsleep](https://twitter.com/hatchforsleep) et voyez de quoi sont faits les rêves.

Front

(Back Panel)


Permettez-nous de vous aider à l'installation !

HatchRestore

Étape 1

Branchez le Hatch Restore

 Connectez le câble d'alimentation et puis branchez-le à une prise de courant. Maintenez votre appareil branché tout le temps.

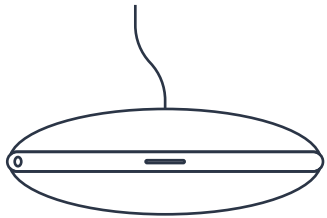

Étape 2

Téléchargez l'Appli Hatch Sleep.

Téléchargez l'appli sur votre téléphone ou tablette et puis créez un compte.



Étape 3

 
Pour compléter l'installation.

Suivez les étapes de l'appli Hatch Sleep pour connecter votre appareil. Le Wi-Fi est requis.




Bouton supérieur

Tapez sur le bouton supérieur pour allumer. Appuyez sur le bouton supérieur et maintenez-le enfoncé pour éteindre. Tapez pour faire défiler vos étapes de routine.

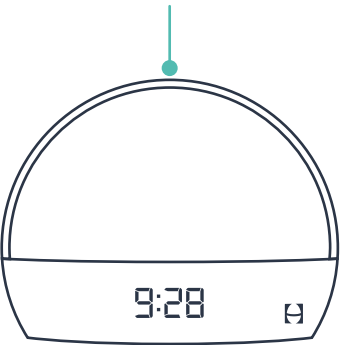

Les Contrôles Latéraux

 
Droit: Tapez sur pour augmenter ou diminuer la luminosité.

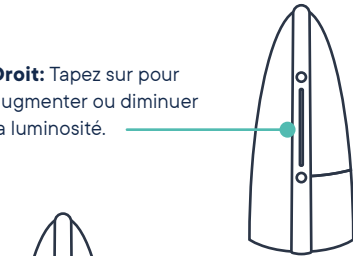

Gauche: Tapez sur pour augmenter ou diminuer le volume.



 Les Contrôles d'Alarme

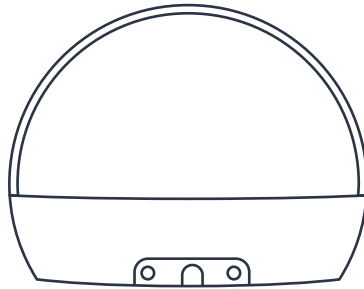

Pressez pour vérifier l'heure de l'alarme.

Pressez pour activer et désactiver toutes les alarmes.

Conseils rapides



L'alarme

Le point à côté de l'heure indique que votre alarme est activée. Utilisez l'appli ou le bouton d'alarme au verso du Restore pour activer ou désactiver votre alarme.

Voulez-vous interrompre la sonnerie d'alarme ? Tapez sur le haut du Restore pour faire une petite somme pendant 9 minutes de plus!



Luminosité de l'horloge

Baissez la luminosité ou éteignez l'horloge sur l'appli. Visitez l'Affichage de l'Horloge (Clock Display) sous la section Réglages (Settings).

FCC Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

ISED/C Warning: This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) L'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité et compliance d'acquies les informations correspondantes. La distance minimale du corps à utiliser le dispositif est de 20cm.

FCC ID: 2AFYZ-RESTORE03 / IC: 23920-RESTORE03

Back

Do not print / for size reference only