

POWERFLIGHT* SMART MOTION MALLARD

USER'S MANUAL



ℤ F©





STAKE ASSEMBLY

MOBILE APP REMOTE CONTROL

- 3. negyster a new account or login.
 4. To add a Smert Motion decoy, locate the "Decoys" tab in the footer navigation. Click "ADD" in the upper right-hand corner to pair to the decoy. Add as many decoys as you file in the app using this method.
 5. Name the decoy, select the desired mode, start and stop this single decoy all within that individual decoy's device card.
 NOTE: Please see page 12 to reset to new paring mode.









- Push wing onto decoy shaft.







- Make sure to align battery terminal with co chamber.
- Press downward until you hear snapping sound and battery cover is flush with bottom of decoy.

 Test to make sure battery is required and the state of the state o





- With the decoy head facing away and the bottom of the decoy facing up grasp both battery cover clips by pressing inward, until battery cover is released from battery chamber.
- With one motion pull upward removing battery from battery chamber



REMOTE PAIRING

To mount to the decoy, take the square end and push square post of decoy into the stake.



To power on the decoy, use the switch on the bottom of the decoy. The switch is printed with "I" which means REMOTE, "O" which means OFF, and "II" which means SPIN.



STORAGE & TRANSPORTATION

Turn switch to "REMOTE" position on the decoy.

For "SPIN" motion press the button that is printed with "SPIN".

For "INTERMITTENT" motion press the middle button that is printe
"INTERMITTENT".

To turn motion "OFF" press the bottom button that is printed with "OFF".

REMOTE BATTERY REPLACEMENT



For the remote so the back is facing up.

Remove the two screws holding the battery cap on.

Lift Battery cap off to expose the battery.

Replace battery with new CR2032 (Positive/+ side up).

- Turn on decoy with pattery in decoy and turn switch to "New Press and hold "SPIN" button on remote for more than 4 sec
 The LED inside decoy will be flashing.

 Press the "SPIN" button once and release.

 The LED inside the decoy will stop flashing when it is paired.



- With battery removed, locate the charging port on side of battery. Insert charger cord and plug charger in. Light on battery will be RED when charging and GREEN when Charged. When complete remove charging cord and reinsert battery into decoy.

 When storing the decoy, the wings should be removed and stored flat and in a safe place to avoid damage.
 The battery should also be removed and stored in a cool dry location. 3. For transporting the decoy, the wings should be removed to avoid damage to the wings.

Charger
Stake
Feet (set)
Remote

PARTS LIST

Wings (set)
 Battery
 Battery Cover

For more information go to: https://www.avian-x.com/ shipping-returns/



Avian-X is not responsible for damage, expense or injury caused by the unauthorized use of, alterations to, improper connection of and abuse or neglect of Avian-X products.

Avian-X products are covered by a One Year Limited Warranty.

Avian-X reserves the right to make changes to product features, functionality and physical design at its sole discretion. As a result, such changes may not be reflected in this version of the manual.



Models ANDRECO (Remote)

This device complex with Part 1 of the FCC flules. Operation is subject to the following two criticals. This device may not cause harmful interference, and DJ This device may not cause harmful interference, and DJ This device must accept any interference need including interference that may cause undered operations.

Warring Changes or modifications to this unit not expressly approved by the party region. The complex is the property of the property

Heaplating enlargy and, if not intribute and used in accosance with no intribution, may cause naminal the However, there is no guarantee that interference will not core in a principal entaillation. If the equipment does cause harmful interference to radio or television reception, which can be determined by furning the equipment of and on, the use in encuraged to try to correct the interference by one or more of the following measures.

If the production of the production of the equipment and receiver, ancrease the sequipment into an outlet on a crucial different from that to which the receiver is connected.

-Connect the deeplaration between the equipment and receiver,

-Connect the equipment into an outlet on a crucial different from that to which the receiver is connected.

-Connect the equipment and receiver is received in the comply with Innovation, Solence and Connected Solence (Cheologone Cheologone Cheol





POWERFLIGHT* SMART MOTION MALLARD

GUIDE D'UTILISATION

 
GSM OUTDOORS

ℤ F©















TÉLÉCOMMANDE PAR APPLICATION MOBILE









- naut du reurre orienté vers le haut.

 Prenez l'alle avec le "L" sur le manche. Alignez la broche sur l'arbre du leurre avec la fente de la broche femelle sur l'arbre de l'aile moulée sur le côté gauche du leurre.

- leurre.
 Pousset l'aile sur l'ave du leurre.
 Prenez l'aile avec le 18° sur l'abre. Alignez la goupille sur l'arbre du leurre avec la frente de la goupille femelle sur l'arbre de l'aile moulée sur le côté droit du leurre.
 Pousset l'aile sur l'ave du leurre.





- Avec la tête du leurre tournée vers l'extérieur et le bas du leurre vers le haut, insérez la batterie et le couvercle de la batterie dans la chambre de la batteri femelle.
- Assurez-vous d'aligner la borne de la batterie avec les bornes de connex dans le logement de la batterie.

- Appuyez vers le bas jusqu'à ce que vous entendiez un claquement et que le couvercle de la batterie soit aligné avec le bas du leurre.

 Testez pour vous assurer que la batterie est correctement fixée avant de pla leurre sur le piquet.

ASSEMBLAGE DU PIEU



- 2. Pour assembler le pieu, suivez le diagramme.

 3. Pour l'assemblage sur le leurre, prenez le bout carré et poussez le piquet carré du leurre dans le pieu.



Pour allumer le leurre, utilisez l'interrupteur au bas du leurre. Le commutateur est imprimé avec "1" qui signifie REMOTE, "0" qui signifie OFF et "11" qui signifie SPIN.



STOCKAGE & TRANSPORT

- Pour le mouvement INTERMITTENT, appuyez sur le bouton du milieu sur lequel est imprimé «NTERMITTENT».

 Pour arrêter le mouvement, appuyez sur le bouton du bas sur lequel est imprimé «OFF» (ÉTENT).

REMPLACEMENT DE LA PILE DE LA TÉLÉCOMMANDE

- Soulevez le couvercle à pile pour exposer la pile. Remplacez la pile par une nouvelle pile CR2032 (pôle positif vers le haut).

APPARIEMENT DE LA TÉLÉCOMMA



- 3. Le voyant LED à l'intérieur du leurre clignotera.
 4. Appuyez une fois sur le bouton TOURNER et relâchez-le.
 5. Le voyant LED à l'intérieur du leurre arrêtera de clignoter lorsqu'il est apparié.



- Avec la batterie retirée, localisez le port de charge sur le côté de la batterie. Insérez le cordon du chargeur et branchez le chargeur. La lumière sur la batterie sera ROUGE lors de la charge et VERTE lorsqu'elle est chargée.

- 2. La pile doit également être retirée et stockée dans un endroit frais
- Pour le transport du leurre, les ailes doivent être retirées afin d'éviter tout endommagement de ces dernières.

LISTE DES PIÈCES

- Ailes (paire)
- Charge
 Pieu
 Pieds (paire)
 Télécommande Ailes (pr...
 Pile
 Couvercle de la batterie

Les produits Avian-X sont couverts par une garantie limitée d'un an. Pour plus d'informations, rendez-vous sur : https://www.avian-x.com/shipping-returns/



EXCLUSIONS

Avian-X n'est pas responsable des dommages, dépenses ou dommages causés par l'utilisation non autorisée de modifications à inappropriés, un branchement d'abus ou de négligence et des Avian-X produits.

Avian-X se réserve le droit d'apporter des modifications aux caractéristiques des produits, la fonctionnalité et la conception physique à sa seule discrétion. En conséquence, de tels changem ne peuvent pas être reflétés dans la présente version du manuel.