



## WIRELESS WATER RESISTANT EARBUDS

Model: M-67721

### Warnings



Permanent hearing loss may occur if earbuds are used at high volume. Set the volume to a safe level. You can adapt over time to a high volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use the earbuds at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn down the volume if you can't hear people speak near you.

### Battery warning!

- "Caution" – The battery used in the product may present a risk of fire or chemical burn if mistreated. Batteries may explode if damaged.
- Only recharge your battery with the provided approved cable designated for the product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose the battery as household waste or in a fire as it may explode.
- The battery in your product can not be removed or replaced by the user. Any attempt to do so is unsafe and may result in damage of the product.

### Important Safety Precautions

#### Read all instructions before using your Earbuds.

 
**Important:** Use of earbuds while operating a vehicle, motorcycle, watercraft or bicycle is not recommended and is illegal in some areas. Check and obey applicable laws and regulations on the use of earbuds while operating a vehicle. Be careful and attentive while driving. Stop listening to your audio device if you find it disruptive or distracting while your operating any of vehicle or performing another activity that requires your full attention.

- Never expose your earbuds to high temperatures, extreme cold or submerge in water.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- In order to avoid the risk of electric shock, never attempt to open your earbuds or repair them, consult a certified professional.
- Your earbuds are not to be used by children without adult supervision.
- Do not clean the earbuds with harmful chemicals or detergents.

#### Built-in Battery Care:

- Your product is powered by a rechargeable battery. The optimal performance of a new battery is achieved only after two or three complete charge and discharge cycles. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery.
- Always try to keep the battery between 32°F and 113°F. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged.

### Product Overview

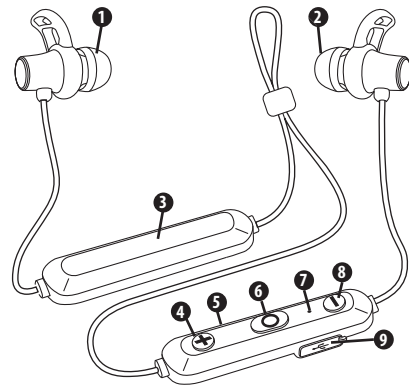

- 1 Left Earbud
- 2 Right Earbud
- 3 Battery Compartment
- 4 Volume + / Next Track Button
- 5 Microphone
- 6 Multi-Function Button
- 7 Indicator Light
- 8 Volume - / Next Track Button
- 9 Micro-USB Recharging Port

**IPX4 water resistance rating:** Earbuds are protected against splashing water for a short period of time and sweaty situations.

**Note:** The earbuds are NOT waterproof and can not be used while swimming, showering or submerged in water.



### Turning On/Off the Earbuds

**Turning On:** Press and hold " " for 3 seconds until BLUE LED flashes and you hear "Power On".

**Turning Off:** Press and hold " " for 3 seconds until RED LED flashes and you hear "Power Off".

### Bluetooth® Connection (Pairing)

1. Turn on the earbuds by pressing and holding the button for 3 seconds until indicator light flashes blue and you hear "Power On".
2. A few seconds later you will hear "Pairing" and the light will flash red and blue.
3. Place the earbuds and the Bluetooth device (phone) so that they are no further than 3ft apart.
4. Activate the Bluetooth function on your Bluetooth device. (Refer to the manufacturer's instruction manual to enable Bluetooth on your device).
5. Select "24/7 Life BT S Earbuds" from the list of available Bluetooth devices. If required enter password "0000". If "24/7 Life BT S Earbuds" does not appear in your device turn off the Bluetooth function on your device then turn it back on.
6. Once paired successfully, you will hear a confirmation "Connected" and the blue indicator light will slowly flash.

**Note 1:** Once you have paired the earbuds with a device, the device will remember the earbuds and will pair automatically when the device's Bluetooth is activated and in range.

**Note 2:** The earbuds will attempt to automatically connect to the last device it was paired with when switch on. If you want to pair it with a new device, disconnect (unpair) the earbuds from the previous device and follow the steps outlined above.

Bluetooth® Disconnecting

- 1. Turn off the Bluetooth function on your device and you will hear “Disconnected”.
- 2. Press and hold the “⏻” for 3 seconds until RED LED flashes and you hear “Power Off”.

Bluetooth® Connection Trouble Shooting

Why won’t the earbuds connect to my device?

- a. The Bluetooth setting on your device may have been turned off. Turn on the Bluetooth function and search for earbuds.
- b. The earbuds may have been connected to another device. Disconnect (unpair) the headphone from the previous device before connecting them to your device.
- c. The earbuds may not have been recognized by your device. Turn off the earbuds then turn them back on. Search your Bluetooth settings on your device and connect the earbuds.
- d. The earbuds may be too far away from the device to connect. Make sure there are no obstacles between the devices and reconnect the earbuds.
- e. There is 120 seconds maximum to pair the earbuds with your device, after 120 seconds the Bluetooth pairing mode will stop and the lights will go out. Retry pairing the earbuds again.
- f. The earbuds will not work while charging. Unplug the charging cable and try pairing the earbuds again.

Why aren’t the earbuds playing music?

- a. The volume level is set at the minimum. Adjust the volume on the device or earbuds to the desired level.
- b. Make sure the earbuds are connected to the Bluetooth device.

Why won’t the earbuds power on?

- a. The earbud’s batteries need to be recharged using the charging cable.

Music Operation

You can control your music from the Bluetooth device by using the earbud’s in-line controller. Use the chart to control your music:

Function*	Operation
Volume Up	Short press “+” button, when you reach maximum volume you will hear a beep.
Volume Down	Short press “-” button
Previous Track	Long press “⏮” button
Next Track	Long press “⏭” button
Pause	Short press “⏻” button once
Play	Short press “⏻” button once

\* Note: Not all functions work with all devices or programs.

Hands Free Operation

You can control phone calls from the Bluetooth device by using the earbud’s in-line controller. Use the chart to control your calls:

 
Function	Operation
Answer a Call	Short press “⏻” button once
End a Call	Short press “⏻” button once
Reject a Call	Double press “⏻” button and you will hear a tone

Charging


The wireless earbuds have a built-in rechargeable battery. It is recommended to fully charge the earbuds before using.

- 1. Before charging, make sure the earbuds have been switched off.
- 2. Use the enclosed cable to charge the earbuds from a car/wall charger or from a computer’s USB port .
  - Red light on = charging
  - Blue light on = fully charged
- 3. It takes approximately 2 hours to fully charge the earbuds.

Recharge via USB Wall Charger:

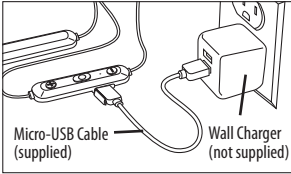


Recharge via Computer’s USB Port:

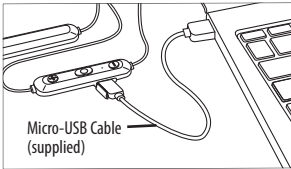 

Changing Ear Gels

 For the optimal comfort and audio fidelity, it is recommended to try each of the different ear gel sizes (small, medium and large). The fit should feel tight and secure in your ear but not be uncomfortable. The medium size ear gel is pre-installed on the earbuds.

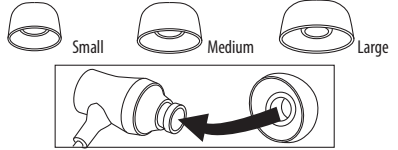

Specifications

Cable Length: 66cm  
Driver Unit: 9mm  
Frequency Response: 20Hz-20KHz  
Water resistant: IPX4  
Impedance: 16Ω  
Sensitivity: 87±3dB  
Bluetooth® Technology: JL solution  
Batteries: Lithium-ion Rechargeable Battery, 100mAh  
Battery Charge Method: Micro USB charging, max charging current 84mA  
Battery Charge Time: Approx. 2 hours  
Battery Life (continuous communication time): Max 5 hours at 100% volume, Max 7 hours at 50% volume.  
Battery Life (continuous music playback time): Max 5 hours at 100% volume, Max 7 hours at 50% volume.  
Battery Life (standby Time): Max 200 Hours  
Effective Range: 30 ft (10m)  
Certification Type: FCC, Bluetooth  
Specifications are subject to change without notice.

FCC Information

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

“The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by [licensee name] is under license. Other trademarks and trade names are those of their respective owners.”