

# GEO+ Waterproof Wireless Rock Speakers

## User's Guide for Model ISBW422 v3016-01

 


### Features


- IPX5 Waterproof
- Bluetooth wireless 5.0: range 59 ft.
- Party Plus Mode
- Built-in rechargeable battery: approximately 9 hrs playtime
- Micro-USB port for battery recharge

### Overview

Front View

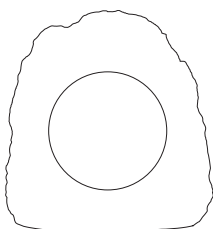

Side View

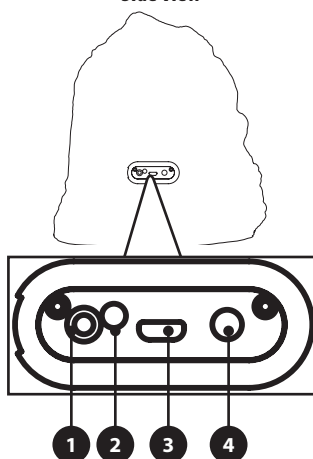 

1. **Charging/Mode Indicator LED:** Light will flash red when battery is low. Light will turn solid red when charging and will turn off when fully charged. Quick flashing blue when in Bluetooth mode. Solid blue when paired to Bluetooth device.
2. **Power/Mode:** Press and hold to power ON/OFF. Quickly double tap to connect/disconnect speakers together (Party Plus Mode).
3. **DC Power Input**
4. **Aux In**

### Includes

 
- 2 micro-USB to USB charging cables

### Battery Charging

To charge the internal battery, plug the USB charging cable into the DC Power Input on the speaker and a powered on computer or USB power adapter (not included) and standard power outlet. Charging time is approximately 4 hours. Battery life is approximately 9 hours at 50% volume.

**When the battery is low** a voice will announce "Low Battery," then the unit will automatically power OFF.

**While the unit is charging** it will display a solid red light. When the battery is fully charged the light will turn off.

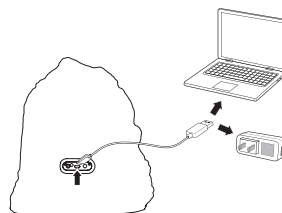


### Aux In

#### Aux In

Requires a 3.5mm audio cable (not included).

 1. Connect a 3.5mm audio cable to the **Aux In** on the unit and the **audio output** on an audio device. The unit will automatically change to Aux in mode and disconnect the speakers if paired together.
2. Use the controls on the connected device to select and play audio. Be sure the volume on your connected device is audible when you begin playing.

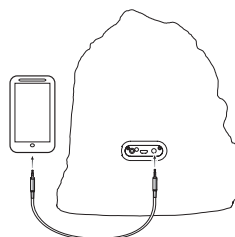

## Party Plus Mode

Party Plus Mode, allows you to pair and play the two speakers together for true wireless stereo.

1. To enter Party Plus Mode, Power ON both speakers and make sure both units are in Bluetooth mode.
2. An audible chime will be heard and the LEDs on both units will be flashing blue. **(Please give the speakers a few seconds to connect).**
3. When the two speakers are paired together an audible chime will indicate the two units are connected. When connected the LED on one of the units will flash blue and the LED on the other unit will turn solid blue.
4. Connect Bluetooth device to speakers using the steps from the "Pairing and Playing Bluetooth Audio" section below.
5. Use your device to select and play tracks. The audio will now be heard through both speakers.
6. To disconnect the two speakers, quickly double tap the **Power/Mode** on one of the units.

**Note: To use Party Plus Mode, please make sure that you connect the speakers before pairing to your Bluetooth device. You will not be able to connect the speakers if you are already paired to a Bluetooth device.**

### If the speakers will not connect automatically:

1. With both units powered on, quickly double tap the **Power/Mode** button on one of the speakers. **(please give the speakers a few seconds to connect).**

## Pairing & Playing Bluetooth Audio

1. When first powered on, the speakers default to Bluetooth Mode and are ready to pair automatically. When pairing, remain within 3 feet of the Bluetooth device.
2. Using the controls on your Bluetooth device, select **ISBW422** in the Bluetooth settings to pair. *If need be, refer to the user's manual for your specific device for more information.*
3. When successfully paired, a voice prompt will announce the connection. Your Bluetooth device will now be heard through the speakers.
4. Use the controls on the connected Bluetooth device to select and play audio, pause, and adjust the volume level.
5. After initial pairing, the speaker will automatically connect to the last Bluetooth device used whenever it is in Bluetooth Mode. **Note:** If your device should become unpaired or you find it is unable to connect:
  - Enter your Bluetooth settings and select, ("Forget This Device").
  - Then connect to the speakers using the initial Bluetooth connection steps above.

## Customer Support

**Customer Service:** 1-888-999-4215 | **Email Support:** [prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com) | **Email Parts:** [partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)

For Warranty Information and the most up-to-date version of this User's Guide, go to **[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: **[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: **[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**  
Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: **[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**



Copyright © 2022 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

## FCC Warnings

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Additional Warnings

- **WARNING:** To prevent fire or shock hazards, do not immerse this unit into water or other liquids.
- **WARNING:** Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- **WARNING:** Do not leave the speaker exposed to extremely high or low temperatures as this can shorten the lifespan of electrical components.
- **CAUTION:** Keep the speakers away from open flames and fire as this can result in an explosion.
- **WARNING:** Do not use abrasive cleaning solvents to clean the speakers.
- **WARNING:** Avoid storing the unit in direct sunlight.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- The device has been evaluated to meet general RF exposure requirement.
- The device can be used in portable exposure condition without restriction.



**WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). This product meets and complies with required Federal product guidelines.