

Installation instructions

① Installation instruction diagram for bracket

1. As shown in the figure: Remove the body and bracket;



2. Remove the H-shaped bracket and the one with a screw hole on one end. Smooth the rod and screw it into the screw hole by hand;



3. Take out a wrench and tighten the screws;



4. As shown in the figure: The machine bracket has been installed.



② Installation diagram of body and bracket

1. Remove the body and turn on the electric hand. As shown in the figure: fuselage power. Align the hole position parallel to the bracket light rod.



2. As shown in the picture: power pliers and place the light poles parallel to each other.



3. After the installation of the body is completed, manually press the handle. Ensure the stability of the body.



④ Angle adjustment display

Adjust the angle arbitrarily according to posture requirements. When adjusting, simply turn the handle of the strong clamp.



③ Power and accessory indicator diagram

1. Power socket.



2. Elastic screw with adjustable stroke length.



5. Install accessories and connect the connector into the socket. (All attachment installation methods are the same)



3. The machine adopts a dual rail design, and it is recommended to add rail lubricating oil every 4-5 times. To maintain smooth operation (arrow indicates lubrication position).



Remote control instructions



① Power on/off

② Accelerator

③ Deceleration key

④ Mode key

(This product has 18 different adjustable frequencies)

Please use normal mode for the first attempt,

it is recommended to use the variable frequency mode only after adaptation.

Kind reminder: The effective distance of this remote control is within 15 meters.
Attention: This product is not waterproof, please do not wade into water.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.