

A900x User Guide

2015 08 05

Polaroid A900x Tablet

In the box

-
-
-
-
-
-
-

Care & safety precautions

- During charging, keep your mobile device and charger near room temperature for efficient battery charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- The included charger is intended for indoor use only.
- Service should only be provided by an authorized service provider.
- Never attempt to disassemble, repair or modify the tablet yourself.
- Do not use the tablet in rain or other wet locations.
- Avoid falling any liquid on the tablet.
- In case the tablet gets wet, unplug all cables and turn off the tablet.
- Do not attempt to dry the tablet with an external heat source.
- Unplug all cables and turn off the tablet before cleaning.
- Use a soft, lint-free cloth to clean the tablet and display.
- Avoid getting moisture in open ports.
- Do not use household cleaners, solvents, alcohol, or abrasives to clean the tablet.
- Routinely check the tablet for proper and safe conditions. If there is any damage, or broken parts, remove the tablet from use.
- For any reason the screen (display) is fractured or cracked, immediately remove this product from use and contact Customer Support for replacement.
- If in fire or potential for serious fire as indicated by light flames or patterns such as smoke on computer or TV screens, to reduce exposure to this potential hazard, play/watch in a well-lit room, sit at appropriate distance from the screen and take 10 to 15 minute breaks every hour.
- Cords could be a strangulation hazard.
- Keep out of reach of children under 3 years of age.
- Children pulling on the cord could cause the computer monitor or other equipment to which the device is connected to fall with possibility of property damage, serious injury, or death. Adult supervision required during play.
- Prolonged exposure to loud sounds, at high volume, may result in hearing loss.
- Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss.
- When using headphones or earbuds, it's recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume level in a quiet environment. Turn the volume down if you cannot hear the people speaking near you.
- Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected.
- If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

<p style="font-size: x-small;">THE USER SHOULD NEVER ATTEMPT TO REPAIR OR DISASSEMBLE THIS TABLET. IF YOU ARE UNABLE TO RESOLVE A PROBLEM WITH YOUR TABLET, STOP USING IT IMMEDIATELY AND CONTACT CUSTOMER SUPPORT FOR ASSISTANCE.</p>	<p style="text-align: center; font-weight: bold; font-size: x-small;">WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p style="font-size: x-small;">WARNING: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p style="font-size: x-small;">THE DECLARATION HEREIN STATES THAT THE EQUIPMENT COMPLIES WITH THE ESSENTIAL REQUIREMENTS OF THE EUROPEAN DIRECTIVE ON THE LOW VOLTAGE DIRECTIVE (LVD), THE EMC DIRECTIVE, AND THE ROHS DIRECTIVE. THE USER IS ADVISED TO READ THE INSTRUCTIONS AND MAINTENANCE INFORMATION PROVIDED WITH THE PRODUCT.</p>
--	---	---

Buttons, ports & hardware

Expanding the storage

Inserting a Micro SD card

The tablet supports Micro SD cards up to 64GB (not included).

To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.

To remove the Micro SD card, gently press it inward to eject.

Charging

Power ON / OFF

Connect the tablet to a wall outlet using the included AC adaptor as shown below.

Turning on

- ① Press and hold the Power button to get started.
- ② Follow the initial setup wizard prompts.
- ③ To use the Google Play store, sign into or create a Google account.

Google Play™

Google Play™ is a digital content experience from Google where you can find and enjoy your favorite music, movies, TV shows, books, and Android™ apps and games. It's your entertainment hub; you can access it from the web or from your Android device, and all your content is instantly available across your devices.

Lock the tablet (standby)

Briefly press the ⏻ button. (Lock the tablet to conserve the battery).

Unlock the tablet

Briefly press the ⏻ button, and slide the "Lock icon" up.

Startup screen

Setup wizard

Google account

I If you use Gmail™, you already have a Google account —if not, you can create an account now.

Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet (turning the display off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.

Home Screen

Widgets

To add a widget, press and hold anywhere on the home screen, and select the "Widgets" option.

Press and hold widgets to place them on the home screen as shown below.

Notifications panel

Swipe down from the top edge of the screen to display the Notifications panel where you can browse and reply to your emails, check software updates, reminders and more.

Quick Settings panel

Swipe down **twice** from the top edge of the screen to expand and access the Quick Settings panel, where you can easily enable/disable Wi-Fi, Bluetooth, Airplane mode and other settings.

Notifications and Quick Settings

Wi-Fi and Bluetooth®

To enable/disable Wi-Fi or Bluetooth®, simply tap the icons on the Quick Settings panel as shown below.

To access more settings options, select the **Settings** icon.

Using the wireless Bluetooth® keyboard

Power indicator light

Turning the keyboard on / off

Slide the switch as shown above, the indicator light will briefly turn on.

Blinking Pair button

Pairing the keyboard to the tablet

- Turn on the keyboard.
- Press the "Pair" button, the Bluetooth blue indicator light will blink and the keyboard is ready to pair with the tablet.

Charging the keyboard:

You can charge the Bluetooth keyboard by connecting it to a computer with the included USB cable.

While charging, the red indicator light is on.

Pairing successfully:

After pairing successfully with the tablet, "Bluetooth Keyboard Connected" is displayed.

Legal information

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Information Regarding Exposure to Radio Frequency Energy

Your Device is designed and manufactured to meet the exposure limits for exposure to RF energy set by the Federal Communications Commission (FCC). Information on your Device or on the FCC and the Federal Communications Commission can be found at <http://www.fcc.gov/oet/rf/>.

PUR R Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governments in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product. You may also go to www.e-waste.com and reference Social Responsibility <http://www.pur.com/socialresponsibility> to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure neither early access nor your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Battery Disposal & Recycle

This device contains a non-rechargeable battery. The battery must be recycled or disposed properly, contact your local waste management office for information on battery recycling or disposal. BT-S00242@BOSCH

Designed by Southern Telecom / Made in China
Qinpuo Rd No. 14, Suzhou, Suzhou City, Jiangsu Province, P.R. China

Pakelard, Pakelard & Patel, Pakelard Color Spectrum and Pakelard Circle Border Logo are trademarks of PUR R Holdings, LLC, used under license. PUR R Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support. www.southerntelecom.com

Android, Google, Google Play and other marks are trademarks of Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. All other trademarks and trade names are those of their respective owners.

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

This Product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by ATL Inc./ATI to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

Product Type: Tablet Territory: United States of Canada
Parts Warranty : 1 Year Labor Warranty : 1 Year

To obtain warranty service:

- Call the Customer Support number located below, or go to our website portal to receive an SFD number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Preserve all shipping cartons to the authorized service center, and remember to insure your return.
- Include a return shipping address (no PO Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are requesting the return of the product.

Customer Support:
1-877-766-6611 (Toll Free)
Monday - Friday: 9AM - 5PM (EST)
www.southerntelecom.com
Click on "Product Support"

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines the product is defective. Products received without a result of approval require you to file a claim with the carrier.

The shipping address of the authorized service center is:
Southern Telecom, Inc.
Attention: Customer Service (2nd Floor)
14C 13rd Street
Brooklyn, NY 11222

Warranty service not provided:
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification or tampering including software modifications such as the installation of custom firmware, the warranty is void. Any unauthorized modification or tampering with or repairs this product, and all products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATE ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSONAL, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT. THIS INCLUDES, BUT IS NOT LIMITED TO, ANY AND ALL WARRANTIES OF MERCHANTABILITY, PERFORMANCE, SATISFACTION, DURABILITY, QUALITY, OR OTHERWISE. PURCHASED FROM AN INDIVIDUAL OR PRIVATE PARTY, IN NO EVENT WILL DISTRIBUTOR BE LIABLE FOR CONSEQUENTIAL DAMAGES SUCH AS BUT NOT LIMITED TO DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS CAUSED BY THE USE, MISUSE OR ABUSE OF THE PRODUCT EXCEPT AS DIRECTED HEREIN. NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING, CONSUMERS RECOVER AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. ANY OTHER REMEDY, REPAIR OR REPLACEMENT OF THE PRODUCT SHALL BE AT THE DISCRETION OF THE MANUFACTURER. ANY OTHER REMEDY OR REPAIR OF THE PRODUCT SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. ANY OTHER REMEDY, REPAIR OR REPLACEMENT OF THE PRODUCT SHALL BE AT THE DISCRETION OF THE MANUFACTURER. ANY OTHER REMEDY, REPAIR OR REPLACEMENT OF THE PRODUCT SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR.