


USER MANUAL

Bluetooth Speaker

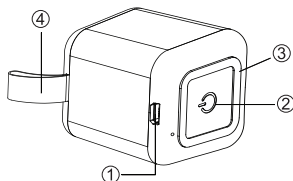

① Micro USB Connector ② On / off button ③ Silicone Pad ④ Hanging Strap

CONNECTION WITH MOBILE PHONE

1. Press and hold the Button '⏻' for 3 seconds to go into pairing mode. The blue LED light flashes when pairing and you will hear a tone.

TWS (True Wireless Stereo) Mode

* TWS function is optional, only for two 'M23' speakers

Turn on the 1st & 2nd speaker individually. Double press the button '⏻' of one speaker to go into TWS pairing mode. One speaker will light up, another speaker will flash and you will hear a tone when the two speakers are connected. Once paired, The two 'M23' speakers will automatically connect when you turn on them next time.

2. Turn on your mobile phone and Bluetooth.

3. Search for the Bluetooth device in your mobile phone and select 'M23' or 'M23P' and connection is successful. The blue LED light will light up when pairing and you will hear a tone. Press the button '⏻' to play/pause.

4. Press and hold '⏻' for 3 seconds to turn off the speaker and you will hear a tone.

SELFIE Mode:

* SELFIE function is optional, only for 'M23P' speaker.

1. Double press the button '⏻' after turning on the speaker to go into SELFIE mode, you will hear a tone.

2. Turn on your phone's camera and short press the button '⏻' of speaker to take a photo.

3. Double press the button '⏻' to turn off the SELFIE mode.

CHARGING YOUR SPEAKER

1. Connect the Micro-USB charging cable to the DC5V input of the speaker, and plug the USB connector of the charging cable to DC5V USB power supply. When charging, The LED indicator next to the charge port will turn red.

2. When the speaker is fully charged the red LED will turn off.

Note: about the speaker's using environment:

1. Bluetooth connection and transmission may be affected by the surrounding environment like trees, metal and some other materials, for they can absorb or block the signal, so the distance of data transmission may be influenced as well.

2. Please make the speaker fully charged at first time using to make sure it will work well. (when the speaker's power gets lower, the sound will be not as good as the sound in normal case. Please charge it right now)

3. Please do not expose the speaker into the high temperature environment.

Service and Support:

If your device is not performing as it should, please take it to your local service providers or dealer for service.

FAQ:

1) Why is there no sound even when the speaker is power on?

A: Make sure the battery is being charged up to 4 hours for first time using. The led is lighted when it starts charging.

2) There is no sound ever playing the speaker.

A: Check that the playback device and the Bluetooth speaker whether to establish a good connection, if there is no connection, please reconnect. Also ensure the speaker device is paired and connected with your target phone or other master device.

3) How to identify the speaker has been fully charged

A: When the red charging indicator automatically turns off, which means that the speaker has been fully charged.

Specifications:

Model Number:	M23
Version:	5.0
Range:	≤10m
Frequency Response:	20Hz~20KHz
Loudspeaker Output:	3W
Signal-To-Noise:	≥75dB
Distortion:	≤1.0%
Dimension:	41x41x47 mm

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter