



## 按键与接口说明/快速指南 1、IPS 多点触摸屏

停/开始播放,或快进至下一首歌。

DSD 白色

2、电源开关: 关机状态下长按两秒, 即可开机; 开机状态下 长按,可关机;开机状态下短按,可熄灭/点亮屏幕;长按十

4、上一首歌曲。5、播放歌曲/暂停歌曲。6、下一首歌曲: R3熄屏或在口袋中时也可使用这些按键快退至前一首歌、暂

7、USB-C端口:新买的机器,建议先关机,以提供的USB数

a step-down cable to connect to this port. 2 the anolog

line out can be accessed using any regular 3.5mm auxiliary

\* Do NOT connect balanced earphones (i.e. earphones

with 3.5mm plugs with three rings on the metal plug that

do NOT carry a microphone nor remote button) to this

connect to the 2.5mm balanced headphone port.

port. Instead, use an appropriate step-down cable to

12, 2.5mm balanced headphone port:suitable for

specially designed balanced headphones with 2.5mm

plugs with three rings on the plug. Please do not use

converter cables / adapters to connect regular earphones

The R3 player proper, USB data / charging cable, user

guide, warranty card, QC certificate, and 3 screen

protectors for the R3 touchscreen (one pre-applied on the

据/电源线将机器连接至合适的USB电源两小时或直至充满。 屏幕将显示充电状态数秒后熄屏,之后短按电源开关可重现充 电状态。充电完毕后,长按电源开关开机,把USB线改为连接

至电脑的USB接口,即可开始将歌曲导入R3以供听常。

- 3、RGB LED:按照不同采样显示不同颜色
- 不播放淡蓝色 32k~48k 蓝色 10、音量+键:在音乐播放期间,按下此键可增加音量,长按 88.2k~192k绿色 可一直增加至最大音量。 352.8k~384k 橘黄色
  - 带有线控和/或麦克风的耳机,支持线控,上一首、下一首、 暂停播放操控。②可配上适配线,提供线路输出至相关设备。 12、2.5mm平衡耳机口:适用于带有特制2.5mm平衡耳机插

一直减少至静音。

头的平衡耳机使用。请不要使用转接头把一般单端耳机接上平

8、TF卡槽: R3以外置TF储存曲目, 支持最大2TB。将TF卡面

向下插入槽以安装,再按入一次以弹出。卡安装在R3内而

R3以提供的USB线连上电脑时,在电脑上可看见该卡并将歌

曲拖拉进去以拷贝歌曲。拔掉USB线前请在电脑中将卡"安全

9、音量-键:在音乐播放期间,按下此键可减少音量,长按可

11、3.5mm耳机口+线路输出口: ①一般的耳机都是插进此

耳机口作播放的,包括插头带三节的耳机,以及插头带四节并

播放器一台,USB线一条,说明书一份,保修卡一份,合格证 书一张,屏幕保护膜3张(其中一张已贴机)。





Thank you for purchasing the HiBy R3, an ultraportable touchscreen hi-res digital audio player. To enjoy the R3 to its fullest, please read this user guide thoroughly.


The HiBy R3 -Features the custom lightweight HiBy OS, passing audio bit-perfectly to the DAC and allowing quick touchscreen

-Features a ESS ES9028Q2M DAC for native decoding of hi-res audio formats, up to 384kHz PCM and DSD128.
-Supports a wide variety of music formats, including DSD DXD, WAV, FLAC, ALAC, APE, WMA, AIFF, AAC, MP3, MP2 and Ogg Vorbis, at up to 64bit/384kHz | DSD128.

-Comes with professional features such as .cue indexed playback, gapless playback, auto-play through folders

Below we will introduce you to the use of the R3 as an audio player via an illustrated guide.

1. Touchscreen: displays the R3' s graphical user interface and allows you to complete all touch-based operations. The R3, after power on, will go straight to the intuitive player screen, where tapping on the labelled and/or pictorial icons will produce predictable results. Note that you can swipe left and right on the screen to

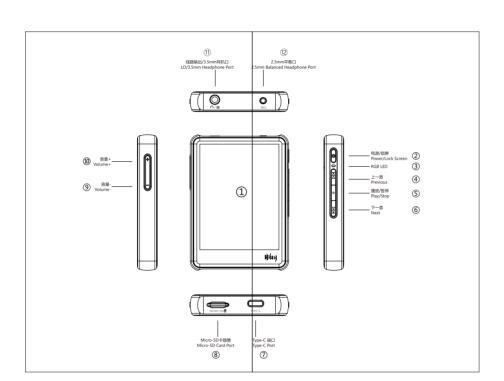

2. On / off switch: Hold down for two seconds to turn the R3 from off to on; hold down the button while the R3 is on to show the power off / restart menu; press briefly while powered on to turn the screen off / on; hold down for ten seconds to force restart.

3、Multicolor LED: changes colors depending on what is playing in terms of sample rate: Blue Green Orange 352.8k~384kHz

4、Previous/5、Play/ 6、Next buttons: These buttons car be used to skip to the previous track, toggle play / pause, and skip to the next track respectively, even while the R3' s screen is off or the R3 is in your pocket.

7. USB-C port: It is recommended to keep your newly bought R3 powered off and charge its battery using the provided USB data/power cable connected to a suitable USB power source (preferably a Quick Charge 1.0/2.0/3.0 capable power adapter) for two hours or until the R3 indicates it is full. The screen would light up for a few seconds indicating the charge

status / level; press the power button briefly to light up the screen with this indication again at any time. After completing charging, hold the power button to turn on the R3 and connect the USB cable from the R3 to your  $computer \,to\,start\,importing\,songs.$ 

card slot for music storage. Insert a micro SD card face down (I.e. the metal contacts facing the same way as the R3' s touchscreen) into the slot and press in until it stays in the slot to install a card; press an installed card into the slot once more and it will be ejected. With the R3 connected to your computer via the provided USB cable. the card you installed in the R3 will appear in you computer. To place music files in the card, simply drag and drop them in. You should "safely eject" the card from your computer before disconnecting the USB cable.

9. Volume - button: while music is playing, press this button to reduce volume by one step, hold down to reduce volume continuously down to silence.

10. Volume + button: while music is playing, press this button tin increase volume by one step, hold down to increase volume continuously up to maximum.

11、3.5mm headphone port+line out output: ①insert most earphone plugs into this port to play music, including earphones with 3.5mm plugs with two rings on the metal plug,

FCC warning and earphones with 3.5mm plugs with three rings on the his device complies with part 15 of the FCC Rules. Operation is subject to the condition that this metal plug that carry a microphone and/or a remote button.\* If your headphones carry a large 1/4" plug, use

Inis device compiles with part 1s of the PLC livide. Uperation is subject to the condition that this device does not clause harmful interference.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 1s of the FC fluide. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can inable radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no expanded to the control of the provided to the provided to the control of the provided to the control of the provided to t

guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television recept
which can be determined by turning the equipment off and on, the user is
encouraged to try to correct the interference by one or more of the following

encouraged to try to correct the interference by one or more of measures:

—Recrient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver—Connect the engipment into an outlet on a circuit different from that to which the receiver is connected.

from that to which the receiver is connected.

— Consult the deliver or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are load or standards that were developed by independent scientific cognization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or hes FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged.

TICLOR Is appause information and statement The SAN time of USA (TCC) is 2.6 V/lyg loverage over one gram of Tissus. Device types: TIBN, TIBN CTD CTD. SCOOL-HERRIST) has to been test against this SAN limit. when property worn on the body is 0.431V/R<sub>c</sub>. This device was tests against this SAN limit. As the sand the sand of the handest length from from the body. To mu compliance with FCC RF exposure requirements, use accessories that maintain a Simm spage distance between the sur's body and the back of the handest. The use of Betting, hottes the sand the sand the sur's body and the back of the handest. The use of Betting, hottes distance between the user 3 body and the oaks of the handset. In we set feet cups, now similar accessions should not contain metallic components in its assembly. The use of accessionies that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. Body-worn Operation



产品保修卡

温馨提醒:请妥善保管产品保修卡及购买发票并 于维修时提供查询,上述单据无经销商公章无效。

 为保障您的权益、请您在购机后仔细阅读以下内容:
 保修有效期内,因产品本身质量问题引起的且并非人为损坏的故障,凭 机发票和保修卡,享受以下保修服务: 主机免费保修有效期一年

、自购机之日起15日内,主机出现性能故障,您可选择直接更换相同型号 日或申请推修;

i、特别说明: (1) 内置可充电电池的保修期限为3个月,如果返修电源或电池有明显的极 物损坏、聚娘、断脚、严重变形及电源线损坏、断线、裸芯等现象则不予 

, 3) 在免费包换期间,产品经过东莞敏动电子科技有限公司检测,确认故 (3) 在免费包换期间,产品经过东票歇加电子科技有限公司检测,输认故障局,可更换相同型等的选续搜由。 电影的瑕疵备件归东莞歇动电子科技有限公司所有;无故障产品,将原样退回; (4) 经东莞歇动油子科技有限公司边缘、保修过的产品将享受原始承诺保质的剩余期限再加3个月的保限期; (5) 如产品为付费维修,同一性能问题将享受自修复之日起3个月止的免费保修,请求即并保存好您的维修凭证; (6) 返修产品的邮寄费用由发送方单向负责; (7) 经销商向您做出的超出东莞散动电子科技有限公司保修条款范围的其它承诺,东莞歇动电子科技有限公司下承担任何责任。

、下列情况不属于免费保修范围,东莞敏动电子科技有限公司可提供有

、已经超出包換保修期限, 一種自涂效、撕毀产品序列号或条形贴纸; 1、并起使用说明书要求安装。使用、维护、保管导致产品故障或损坏; 1、产品保修卡上的产品序列号或型号与产品本身不符; 5、担实现象的电子科技角吸公司钟可,提自拆机修理; 5。因不可抗力或人为行为导致的产品损坏,如使用不适合的电源、信号源 及高温、进水、机械破坏、排环等等; 7、客户发回保修途中由于运输、模如听导致的故障或损坏; 8、其他非产品设计、技术、制造、质量等原因而导致的故障或损坏。 — 杨水仓操

5、與北京市 BDST 1 元、接水支持 前 在您送修产品之前,请致电本公司售后服务人员以确定产品故障,您也可 以通过访问本公司网站www.hiby.com 或发送电子邮件给敏动售后服务 四、产品保修卡内容的最终解释权及修改权归东莞敏动电子科技有限公司 所有。 经销商(盖章): 电子邮件:

注意

如果电池更换不当会有爆炸危险

只能用同样类型或等效类型的电池来更换

电池(电池包或组合电池)不得暴露在诸如日照,火烤或类似过热环境中

	用户签字					
	维修签字					
	维修结果					
	处理结果					
	故障现象					
C N N	送修日期					
维修记录	序号					

感谢您购买了HiBy推出的便携高清无损播放器R3。为了让 R3给您带来更好的体验,这份电子说明书将介绍R3的功能和

HiBy R3是一款高性能、高保真的数字音频播放器,能支持

DSD、DXD、WAV、FLAC、ALAC、APE、WMA无损/有损、

AIFF、AAC、MP3、MP2、Ogg Vorbis等多种无损/有损音乐

格式,最高支持64bit/384kHz | DSD256, DSD、PCM均为硬

解,同时支援CUE索引播放、无缝播放、文件夹跳曲、十段均

衡器等专业功能。R3使用君正X1000E,并内置ESS

ES9028Q2M音频解码器,务求将使用体验和音质同时推上新

使用方法,希望让您更了解R3、使用得更畅快。

一、产品介绍



# **WARRANTY CARD**

Please keep this warranty card and your purchase receipt and produce these on request when making warranty enquiries. This warranty card is only valid with inclusion of the distributor's official chop.

Thank you for choosing a HiBy branded product. To protect your consumer rights and provide after-sales service of defined quality, we provide you with the following warranty terms. Please read carefully:

1, Technical support: Before sending in your product for warranty, please contact our after-sales staff at support@hiby.com to confirm whether your issue stems from a product defect or is instead a problem in usage of the product we can help you through.

2. The following warranty agreement is entered between you, the customer and Dongguan SmartAction Technology Co., Ltd. ( "SmartAction" ), the warranty service provider of HiBy Music Information Technology Co., Ltd. ( "HiBy" ).

3. To claim any of the warranties laid out below, please show us
a)Your dated purchase receipt showing date of

b)Your dated shipment receipt showing date of receipt of the product package in the case of mail / internet

orders; (otherwise warranty will be dated from the purchase date shown per (a) ); c)This warranty card.

4. All time spans defined in subsequent clauses are defined as the span from the date defined in 3(b) (3(a) if 3(b) is not available) to the date of sending as recorded

on the courier package that the claimed product arrives in (inclusive of the start and end dates). If the package is not dated, the day the package is received by SmartAction is taken as the end date. Time spans are

calculated via year, month, day in descending priority. a)15-day period: Clause 3a/b date: January 1, last

many days there are in the year in question).

accessories contained in the product package.

acceptable end date: January 15; b)3-month period: Clause 3a/b date: January 1, last acceptable end date: April 1 (regardless of how many days there are in each month in question); c)1-year period: Clause 3a/b date: January 1 2018, last acceptable end date: January 1 2019 (regardless of how

5. The warranties laid out below pertain to the "main product" purchased, e.g. the product contained by the main chassis in the case of a player / amp / converter / similar device or the headphone proper excluding detachable padding / tips in the case of headphones. It does not pertain to product packaging, connection cables, paper documentation, gifts and other similar

**6.** Battery limited warranty: subject to clauses 11-14, batteries are warrantied for 3 months from the date of purchase / receipt as defined in Clause 4. If within these three months a battery shows obvious signs of external damage not caused by normal use, e.g. kinetic impact, broken pins, broken connecting cables, etc. repair / replacement / parts charges will also be sought per

clauses 11-14, HiBy branded products can be exchanged like-for-like, within 15 days of purchase receipt as defined in Clause 4, if it is found defective, where "defective" is to be defined relative to the nominal

functioning of the product.

a)The user is responsible (including the postal charge) for sending the defective product to SmartAction in proper packaging so that no further damage is suffered

b)The defective product will be repossessed by SmartAction while a replacement will be sent to you.

c)If the product is found to be working within the

product's nominal standards, the original product will be retured to the customer. The limited replacement warranty is not a "satisfaction guarantee" 8, 1-year limited repair warranty. Subject to clauses 11-

14 and modulo Clause 6, HiBy branded products can be repaired free of charge within one year of purchase as defined in Clause 4 (including within the 15-day replacement period, i.e. you may opt to repair or replace in the first 15 days). a)The user is responsible (including the postal charge)

for sending the defective product to SmartAction in proper packaging so that no further damage is suffered

**b)**The defective product will be repaired / replaced by SmartAction at its discretion and sent back to you at SmartAction's expense.

9. After the product is repaired / replaced per clauses 6/7/8, it will enjoy an additional 3 months' limited repair warranty, i.e. the "effective" start date per clause 3a/b is shifted later by 3 months.

10. If a product is submitted for repair after the limited warranty periods of clauses 6-8 (whichever is applicable, modulo Clause 9) expire, SmartAction will solicit repair replacement / parts charges for repairing your product.

11. The following are exclusions to the limited warranties laid out in clauses 6-8 such that SmartAction may still solicit appropriate repair / replacement / parts charges within the designated warranty periods:
a)Serial number or model number shown on the warranty card does not match that of the product: **b)**Unauthorized overwriting / alteration of the product serial number, label, purchase / shipment receipt and/or other documentation used in determining warranty

eligibility; c)Inappropriate use / treatment of the product by the mer or any third party, causing unavoidable d)Disassembly / attempted repair of the product by the ustomer or any third party not authorized by

SmartAction; e)Occurence of any other conditions / natural disasters causing unavoidable damage to the product E.g.extreme heat / cold, kinetic impact, extreme tensile

f)Damage taken by the product in the course of shipping back to SmartAction for repairs, e.g. drops,

impacts not protected against by insufficient packaging; g)Any other damage not caused in the course of normal acceptable use / handling of the product.

12, A product repaired for charges out of warranty will enjoy 3 months' limited repair warranty. Please keep the additional warranty card and show it to us in the case of further repairs to redeem this extra warranty

customer is responsible for the cost of sending the product to the address designated by SmartAction warranty, and ensuring that the product reaches the estination without (further) damage; afterwards, SmartAction is responsible for the cost of sending the repaired / replacement product back to the address designated by the customer (whether local or international), and ensuring that the product reaches

14. Neither HiBv nor SmartAction is not to be held ensible for any extra warranty terms prom the local retailer / distributor outside of the terms laid

15. SmartAction holds the final rights to interpretation and modification of the warranty terms laid out in this

16, Mandatory extra warranty legislation in your jurisdiction may override any part of these warranty terms as required by law.

					Serial No
Model:					Date submitted for repair
Serial No:  Date of Purchase:					Sign of defect
Distributor (official chop):					Diagnosis
Customer's Name:					Repair outcome:
Customer' s Address:					Repair technician's signature
Customer's Email:					Customer' s signature