



# TRUE WIRELESS STEREO EARPHONES



ENACFIRE A8 INSTRUCTION

FCC ID: 2AXI9IT500

# Customer Support

---

support@enacfireglobal.com (US/CA)

moongu@enacfireglobal.com (UK)

desupport@163.com(DE)

 
esenacfire@163.com (ES)

itenacfire@163.com (IT)


We will reply to you within 24 hours and 100% solve your issues

# Packaging List

---

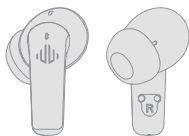

Earphones x1

 

Charging Case x1



Eartips x3



USB Type-C  
Charging Cable x1



Manual x1







Warranty Card x1

---

## Product Overview

    1. Charging Case LED Light
2. Charging Port
3. Multifunctional Button
4. Earphone LED
5. Magnetic Charging Pin
6. Earphone microphone

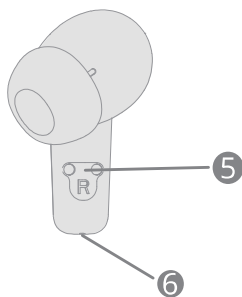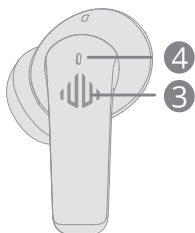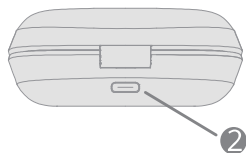

# Power On & Pairing

---

 
## Approach 1 - With Charging Case

**US:** Open charging case cap

**DE:** Öffnen Sie den Ladekoffer

**ES:** Abre la tapa de la caja de carga.

**IT:** Aprire il cappuccio della custodia di ricarica.

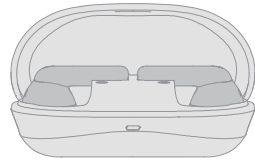


**US:** Select 'ENACFIRE A8' from Bluetooth list

**DE:** Wählen Sie „ENACFIRE A8“ aus Ihrer Bluetooth Liste

**ES:** Selecciona "ENACFIRE A8" de la lista de dispositivos Bluetooth.

 **IT:** Seleziona "ENACFIRE A8" dall'elenco dei dispositivi Bluetooth.

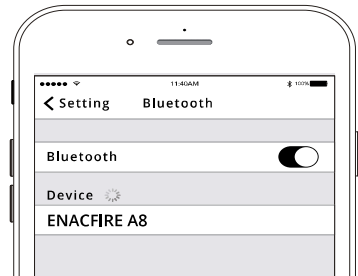

---

## Approach 2 - Without Charging Case

**US:** Power On: Touch the earphones for 2 seconds with prompt sound 'Power on'

Pairing: Right earphone Blue and White light flash  
Select 'ENACFIRE A8'

**Note:** Right earphone is the master earphone

**DE:** Anschalten: Berühren Sie die Kopfhörer für zwei Sekunden und die Benachrichtigung „Power on“ hören.

Paaren: Die Kopfhörer verbinden, der rechten Kopfhörer ein weißes und blaues Licht blinkt Wählen Sie „ENACFIRE A8“

**Hinweis:** Der rechte Kopfhörer ist der Hauptkopfhörer.

**ES:** Encender: Pulsa el botón de los auriculares hasta escuchar un breve sonido de "Power On".

Emparejando: Sobre el auricular derecho parpadea una luz azul y blanca. Seleccionar "ENACFIRE A8".

 
**Nota:** El auricular derecho es el auricular maestro.

---

**IT:** Accensione: tocca gli auricolari per 2 secondi con il suono rapido "Power on".

Accoppiamento: una luce blu e bianca lampeggia sopra l'auricolare destro. Seleziona "ENACFIRE A8".

**Nota:** l'auricolare destro è l'auricolare principale.

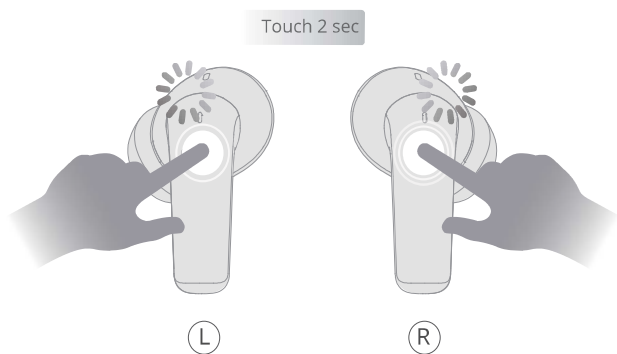

# ANC/Transparency Mode —

**US:** Tap Left earphone once to switch between ANC/Transparency mode  
ANC Mode Prompt Sound: Noise cancelling on  
Transparency Mode Prompt Sound: Ambient on

**DE:** Tippen Sie einmal auf den linken Kopfhörer, um zwischen ANC- und Transparentmode zu wechseln  
Active Noise Cancellation Mode Prompt Sound: Noise cancelling on  
Transparentmode Prompt Sound: Ambient on

**ES:** Pulsa el auricular izquierdo una vez para activar o desactivar el modo de cancelación de ruido.  
Cuando se activa la cancelación de ruido se escucha un breve sonido: "Noise cancelling on".  
Cuando se activa el modo normal se escucha un breve sonido: "Ambient on".

**IT:** Premi una volta l'auricolare sinistro per attivare o disattivare la modalità di cancellazione del rumore.  
Quando la cancellazione del rumore è attivata, si sente un breve suono: "Noise cancelling on".  
Quando è attivata la modalità normale, si sente un breve suono: "Ambient on".

# Incoming call

---

## **US: Answer call/End call**

Tap the Left / Right earphone once

## **DE: Anruf annehmen/beenden**

Drücken Sie den linken/rechten Kopfhörer ein mal

## **ES: Responder llamada/ Colgar**

Pulsa el auricular izquierdo/ derecho una vez

## **IT: Rispondi alla chiamata / Termina la chiamata**

Toccare una volta l'auricolare sinistro / destro

## **US: Reject call**

Touch the Left / Right earphone for 2 seconds

## **DE: Anruf ablehnen**

Drücken Sie den linken/rechten Kopfhörer für zwei Sekunden

## **ES: Rechazar llamada**

Toca el auricular izquierdo/ derecho durante 2 segundos

## **IT: Rifiuta chiamata**

Toccare l'auricolare sinistro / destro per 2 secondi



# Music

---

## **US: Pause / Play**

Tap the Right earphone once

## **DE: Pausieren/Abspielen**

Drücken Sie den linken/rechten Kopfkörer ein mal

## **ES: Pausa / Reproducir**

Pulsa el auricular derecho una vez

## **IT: Pausa / Play**

Tocca una volta l'auricolare destro

## **US: Voice Assistant**

Tap the Left / Right earphone 3 times

## **DE: Sprachassistent**

Drücken Sie den linken/rechten Kopfhörer drei mal

## **ED: Asistente de voz**

Pulsa el auricular izquierdo/ derecho 3 veces

## **IT: Assistente vocale**

Toccare l'auricolare sinistro / destro 3 volte

---

**US: Change Song**

Double-tap the Left/Right earphone

**DE: Lied wechseln**

Drücken Sie den linken/rechten Kopfhörer zwei Mal

**ES: Cambiar canción**

Doble pulsación sobre el auricular izquierdo/ derecho

**IT: Cambia canzone**

Tocca due volte l'auricolare sinistro / destro

**US: Adjust Volume**

Touch and hold the Left/Right earphone

**DE: Lautstärke anpassen**

Drücken und halten Sie den linken/rechten Kopfhörer

**ES: Ajustar volumen**

Mantén pulsado el auricular izquierdo/ derecho

**IT: Regola il volume**

Tocca e tieni premuto l'auricolare sinistro / destro

# Power Off

---

 
## Without Charging Case

**US:** Turn off Bluetooth to disconnect the earphones  
Touch either one earphone for 8 seconds to power off both earphones

**DE:** Schalten Sie Bluetooth aus, um die Kopfhörer von Gerät zu trennen.  
Drücken Sie acht Sekunden lang einen der Kopfhörer, um sie auszuschalten.

**ES:** Apaga el Bluetooth para desconectar los auriculares.  
Mantén pulsado cualquiera de los dos auriculares durante 8 segundos para apagar ambos auriculares.

**IT:** Disattiva il Bluetooth per scollegare gli auricolari.  
Toccare uno degli auricolari per 8 secondi per spegnere entrambi gli auricolari.

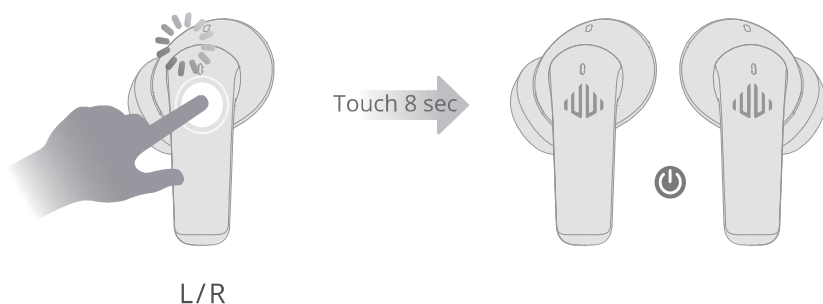

# Charging

---

## Earphones:

**US:** Earphones white LED Light blinking/off: Charging/Fully Charged

**DE:** Weiße LED des Kopfhörers blinkt/ Licht aus: Aufladen/ Voll aufgeladen

**ES:** Luz LED blanca de los auriculares parpadeando/ apagada: Cargando/ Carga completa

**IT:** Auricolari LED bianchi luce lampeggiante / spenta: in carica / carica completa

**Note:** It takes about 1.5 hours to fully charge the earphones

## Charging Case:

 
**US:** Charging Case white LED Light on/blinking: Fully Charged/Charging

**DE:** LED des Aufladebox Licht an / blinkt: Voll aufgeladen/ Aufladen

**ES:** Luz LED blanca de la caja de carga encendida/ parpadeando: Carga completa/ Cargando

**IT:** Custodia di ricarica LED bianco luce accesa / lampeggiante: carica completa / in carica

**Note:** It takes about 1.5-2 hours to fully charge the charging case



White Light Flash 1 times: 0-25% Charged

White Light Flash 2 times: 26-50% Charged

White Light Flash 3 times: 51-75% Charged

White Light Flash 4 times: 76-100% Charged

# Safety Instruction

---

Using earphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised that you keep volume levels moderate to low at all times for your safety.

Do not use while driving, cycling, operating machinery or performing other activities that require hearing surrounding sounds.

Do not use earphones in thunderstorm weather, the earphones may not work properly in the bad weather condition, and may increase the risk of being hit by lightning.

Earphones may not work properly under high temperature or high humidity conditions.

Do not use any corrosive cleaner/oil to clean the earphones. If the earphones come in contact with liquids, quickly wipe away. If submersed in the water, do not turn the earphones on until it is completely dried.

**Tips: Man-made damage and lost are not covered under warranty. Keep the earphones and the packaging out of reach of children.**

# FCC Statement

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



