




ew 100 G4

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Παράρτημα οδηγός
Kısa Kılavuz
Краткая инструкция
快速指南
快速使用指南
クイックガイド
퀵 가이드

SENNHEISER

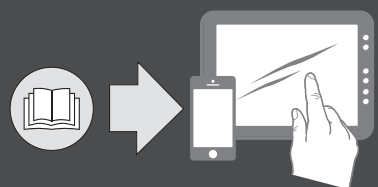

Sennheiser Documentation App



or online at
www.sennheiser.com/download
ew 100 G4_

Sennheiser electronic GmbH & Co. KG


Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany, Publ. 03/18, 575860/A02


EM 100



SKM 100

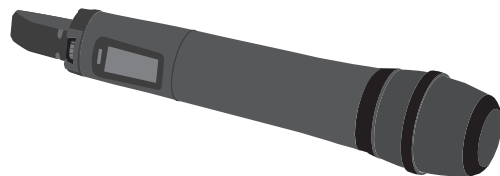


SKM 100-S

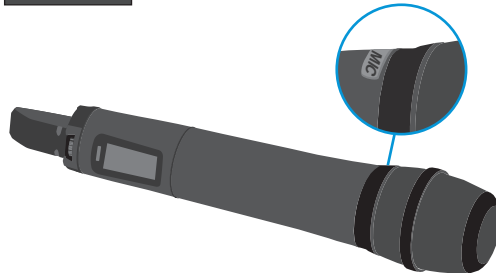

SK 100



Battery

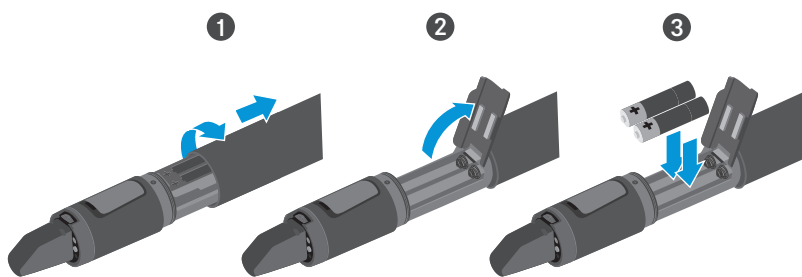


Low Battery




	100 %	> 8 h
	70 %	4 - 6 h
	30 %	2 - 3 h
LOW BATT		

Setup

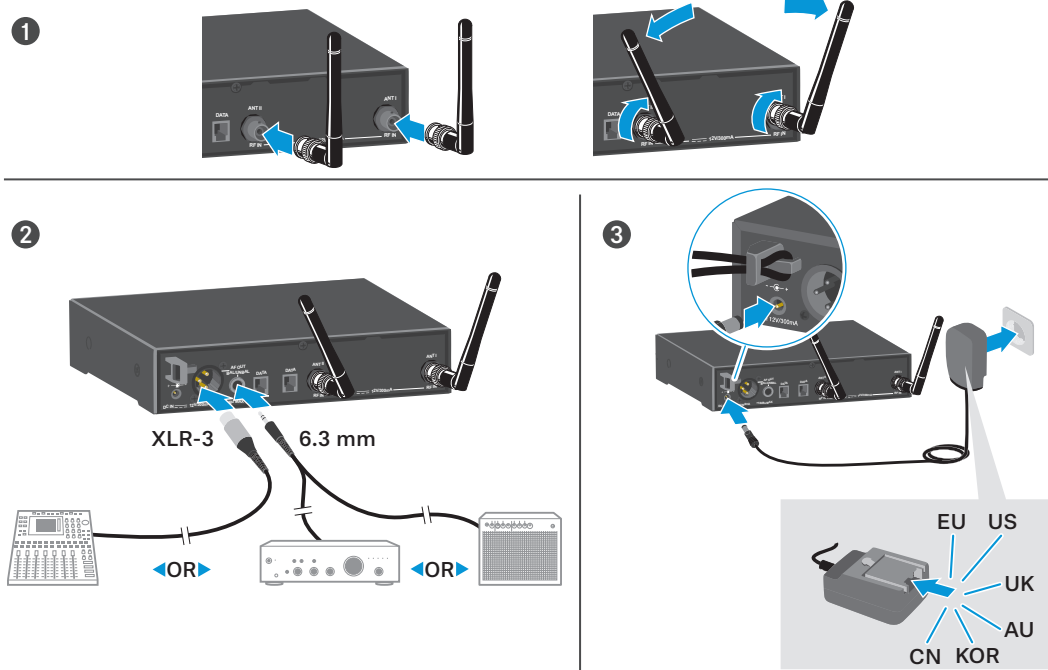


On

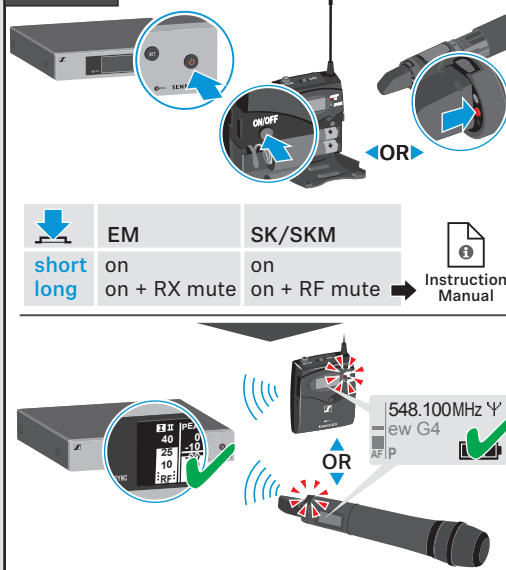



Off




Menu

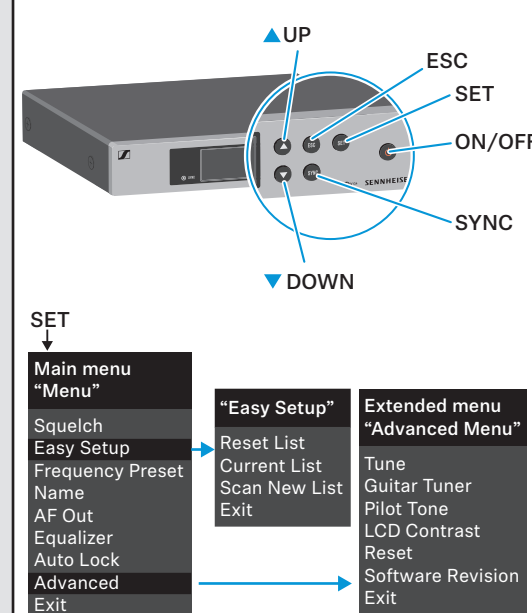

Standard display

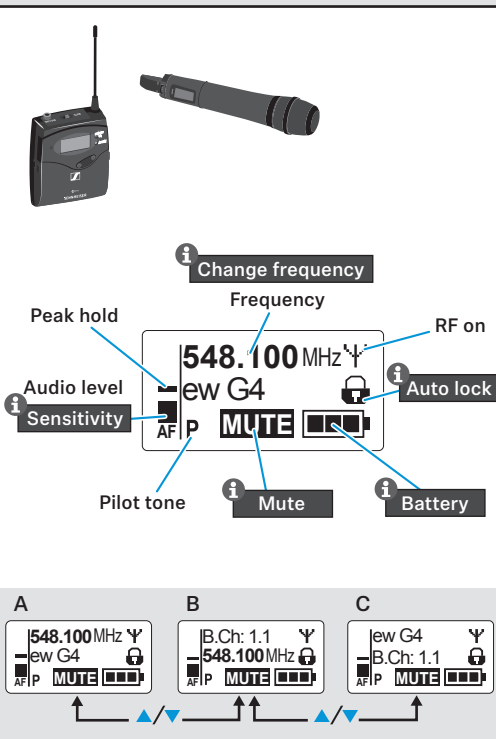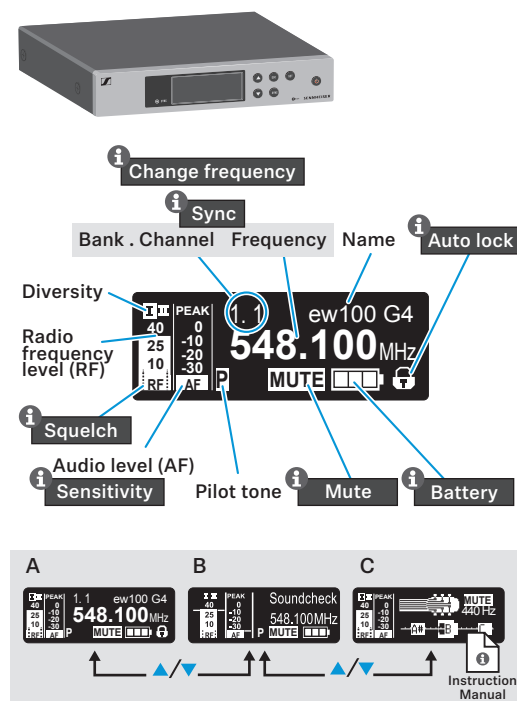


Menu

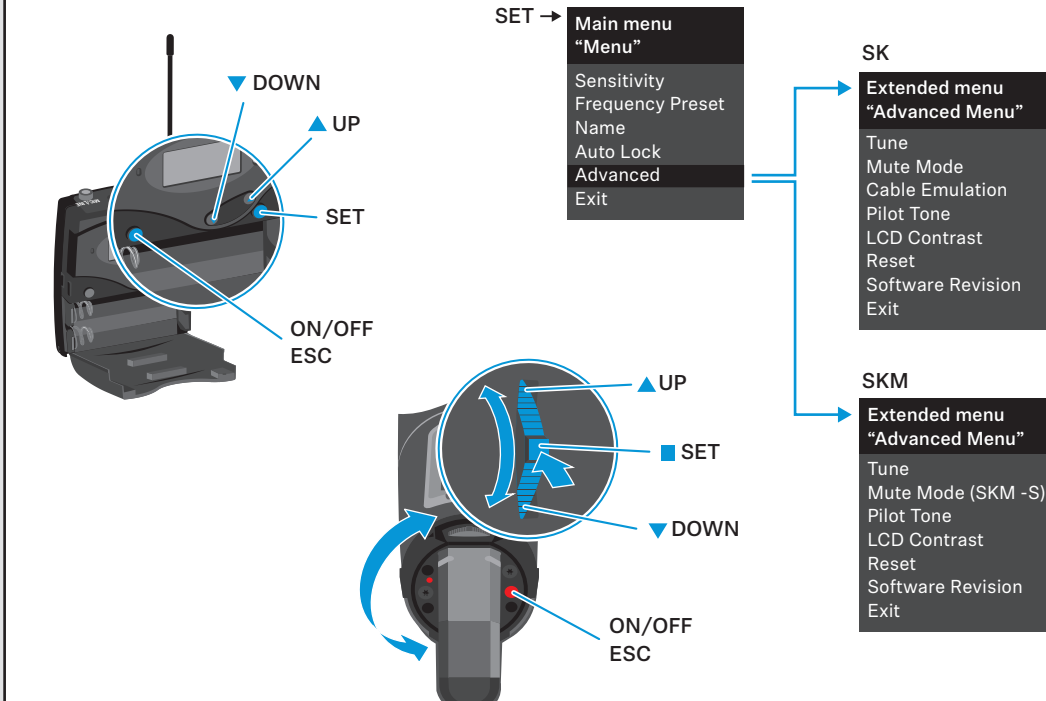


Auto lock


EM

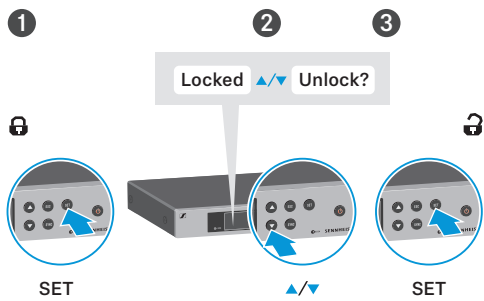

SKM

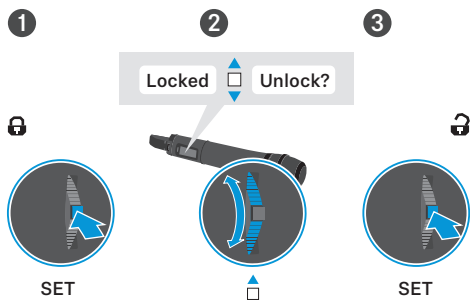

SK

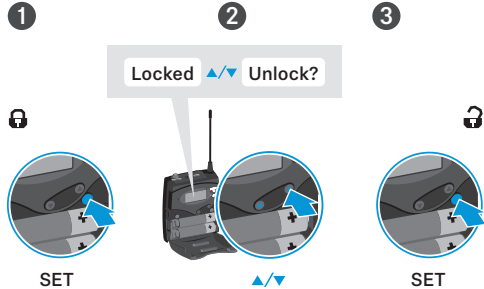


10 s → Auto lock

Instruction Manual


New frequency

Squelch

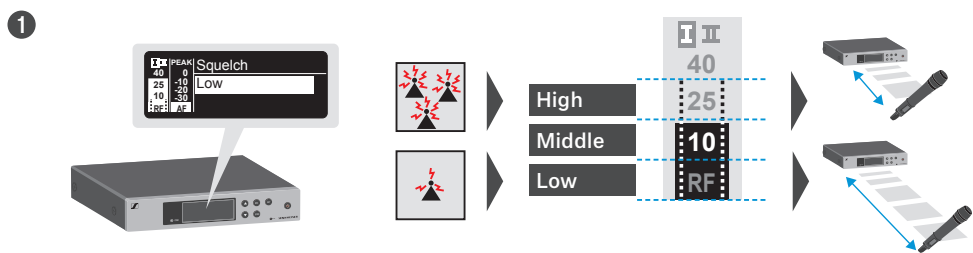


Change frequency


2 SKM/SK off!

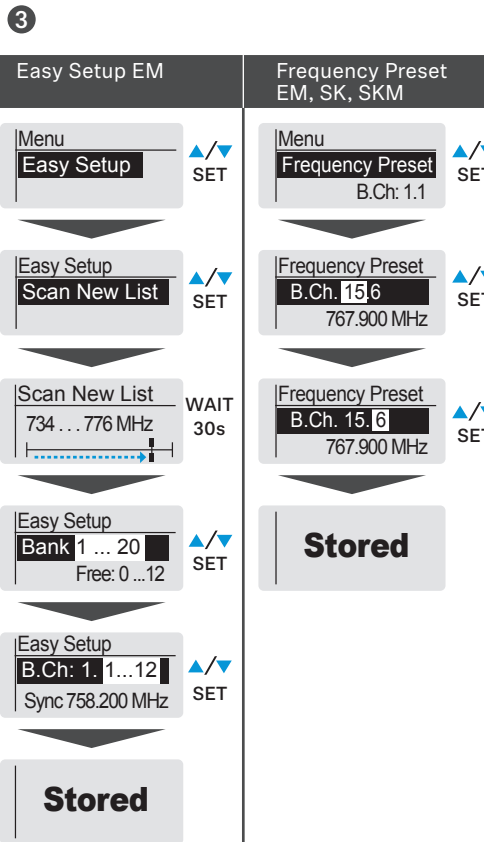


Sync

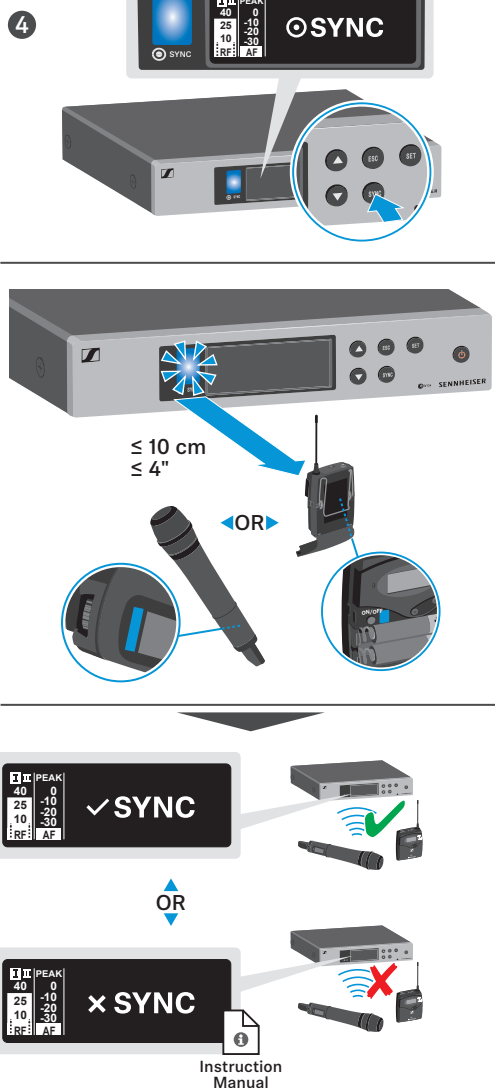

Sensitivity

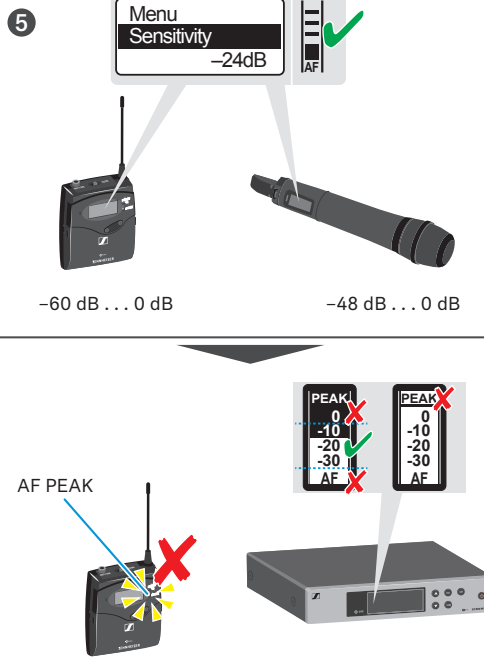

AF out

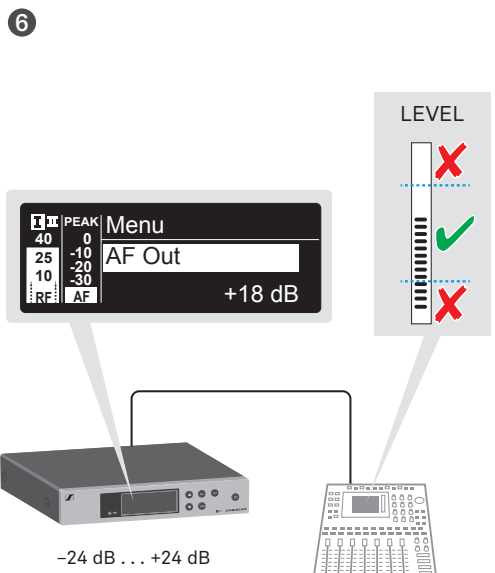


Mute


Instruction Manual

EM 100

SKM 100

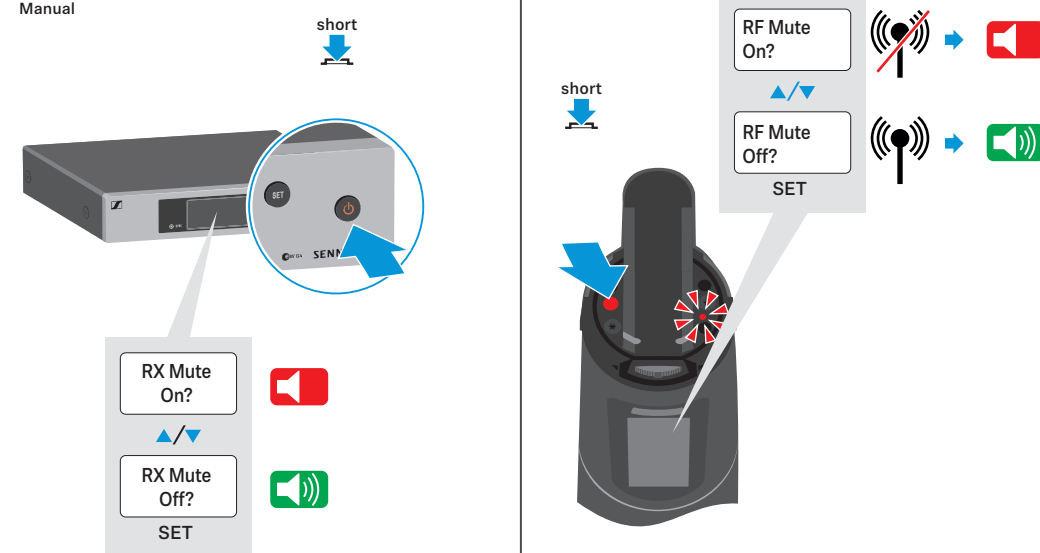


SK 100

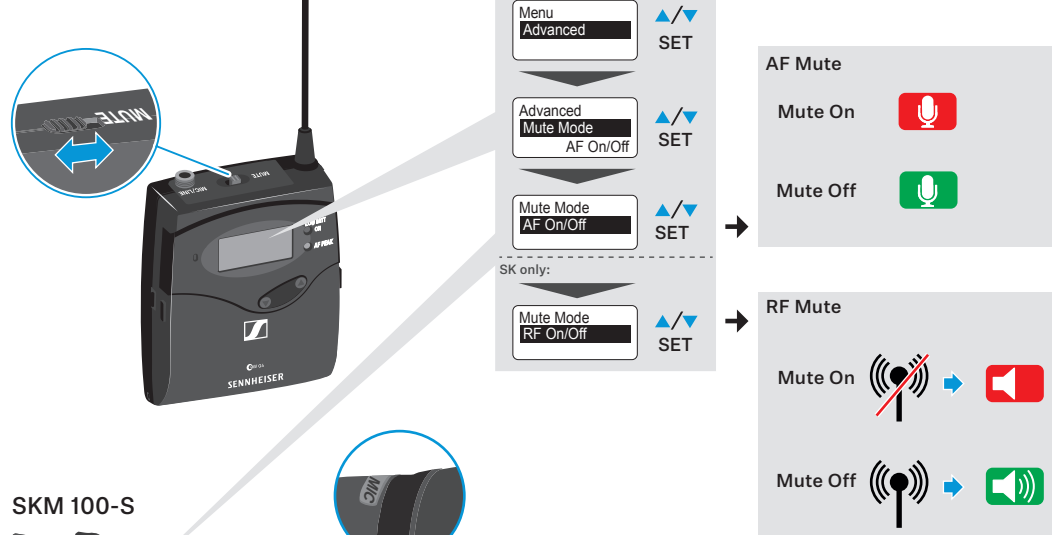


SKM 100-S

Multichannel - Easy Setup

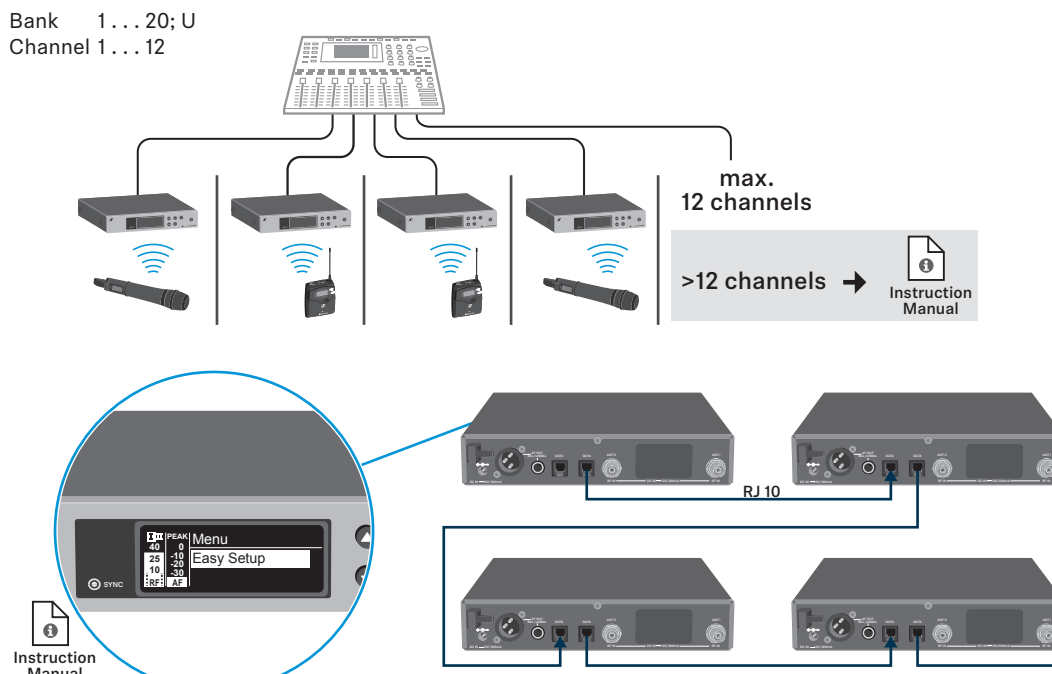

SKM

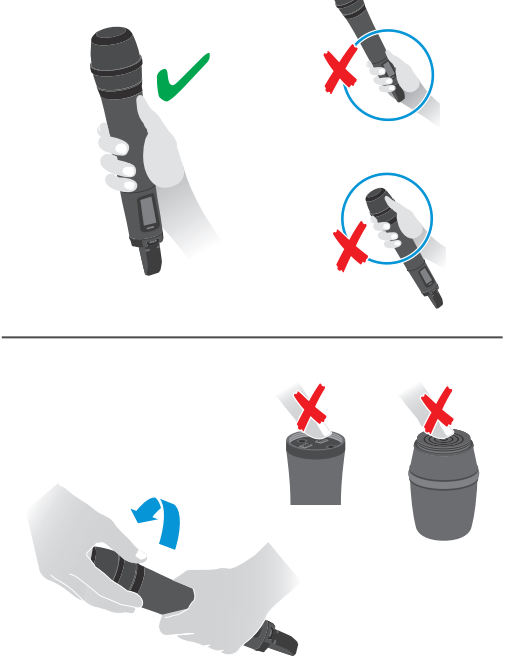

ME 2 | ME 4

