
 

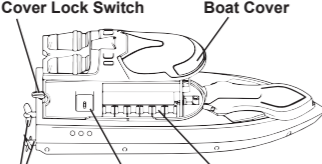


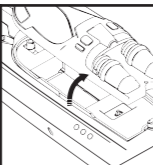
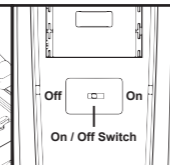
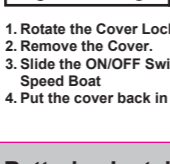
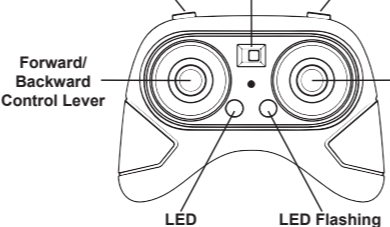
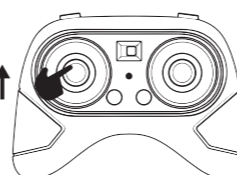
 
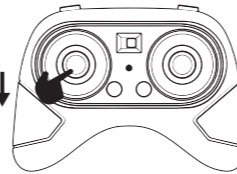
 
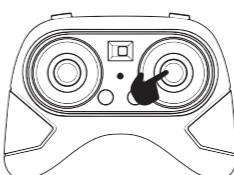
 
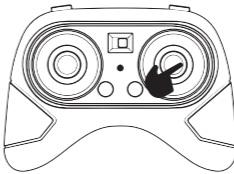
 
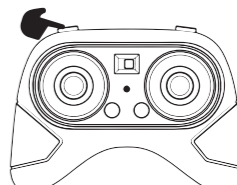
 

 
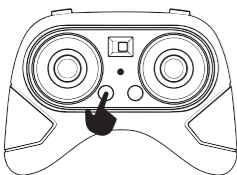

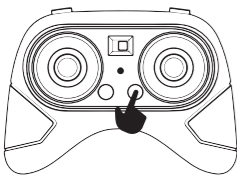

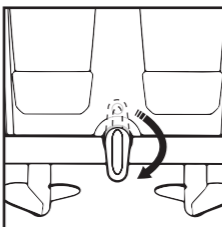
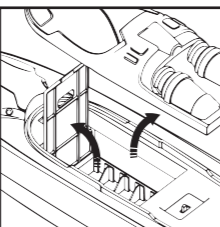
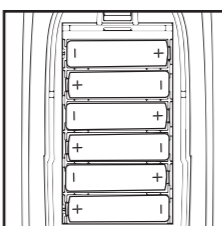
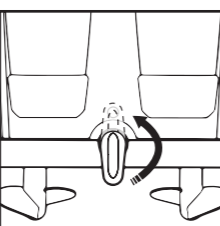
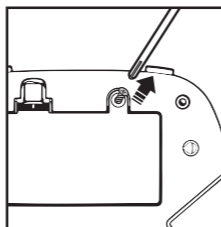
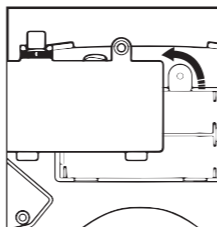
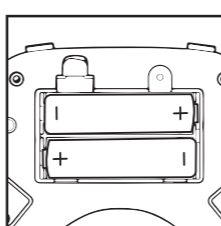
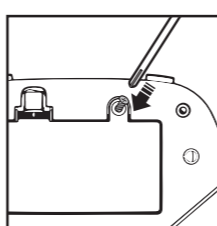


Size: 16.53(W) x 8.66(H)in
420(W) x 220(H)mm

<div><div>AGES 8+</div><div>REMOTE CONTROL WATER BLASTER LED SPEED BOAT</div><div>Instruction Manual</div><div>Thank you for purchasing the RC Water Blaster LED Speed Boat. This manual provides more information about this product, please read the instructions before using.</div><div></div></div>	<div><div>Product Overview</div><div><div><div>Top View</div><div></div></div><div><div>Remote Control</div><div></div></div></div><div><div><div>Cover Lock Switch</div><div>Boat Cover</div><div>Propellers</div><div>On/Off Switch</div><div>Battery Compartment</div><div>Instruction Manual</div></div><div></div><div></div></div><div><div>Boat Power On/Off</div><div><div></div><div></div><div></div><div></div></div><div><div>1. Rotate the Cover Lock Switch to unlock the cover.</div><div>2. Remove the Cover.</div><div>3. Slide the ON/OFF Switch to ON to turn on the RC Water Blaster LED Speed Boat</div><div>4. Put the cover back in place and lock it.</div></div></div></div>	<div><div>Package Contents</div><div>RC Water Blaster LED Speed Boat x 1 Remote Control x 1 Instruction Manual x 1</div><div><div>Specifications</div><div>Power Supply: RC Water Blaster LED Speed Boat Power Supply: 6 x "AA" 1.5V Batteries (Not Included) Remote Control Power Supply: 2 x "AA" 1.5V Batteries (Not Included) Frequency: 2.4 GHz (Blue Boat) 2.4 GHz (Green Boat)</div></div><div><div>Remote Control</div><div><div><div>Water Cannon Trigger A</div><div>Remote Control ON/OFF Switch</div><div>Water Cannon Trigger B</div><div>Forward/Backward Control Lever</div><div>LED ON/OFF Button</div><div>LED Flashing ON/OFF Button</div><div>Left/Right Control Lever</div></div><div></div></div></div></div>	<div><div>Operate Your Boat</div><div><div>Note: To avoid losing control, always pay attention when playing the RC Water Blaster LED Speed Boat.</div><div><div>Forward</div><div><div></div><div></div></div><div>Push the lever forward to control the boat move forward</div></div><div><div>Backward</div><div><div></div><div></div></div><div>Pull back the lever to control the boat move backward</div></div></div></div>	<div><div>Operate Your Boat</div><div><div>Left</div><div><div></div><div></div></div><div>Pull the lever to the left to control the boat turn left</div></div><div><div>Right</div><div><div></div><div></div></div><div>Pull the lever to the right to control the boat turn right</div></div></div>	<div><div>Operate Your Boat</div><div><div>Water Cannon auto fire for 10sec</div><div><div></div><div></div></div><div>Press and hold the Water Cannon Trigger A for 2 seconds the water cannon will auto fire for 10 seconds (Short press to cancel)</div></div><div><div>Water Cannon manual fire</div><div><div></div><div></div></div><div>Press and hold the Water Cannon Trigger B to fire the water cannon (Release the button to cancel)</div></div></div>
	<div><div>Operate Your Boat</div><div><div>LED ON/OFF</div><div><div></div><div></div></div><div>Press the LED ON/OFF button to turn on or turn off the LED</div></div><div><div>LED Flashing mode</div><div><div></div><div></div></div><div>Press the LED Flashing ON/OFF button to turn on or turn off the LED Flashing mode</div></div></div>	<div><div>Batteries Installation-Boat</div><div><div></div><div></div><div></div><div></div></div><div>To install batteries into the RC Water Blaster LED Speed Boat, rotate the switch to right to open the boat cover. Insert 6 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Put back in place the boat cover and rotate the switch to lock the cover.</div><div><div>Notice:</div><div>When placing the batteries, you must insert according to the correct polarity, the RC Water Blaster LED Speed Boat won't function if batteries are reversed.</div></div></div>	<div><div>Batteries Installation-Remote Control</div><div><div></div><div></div><div></div><div></div></div><div>To install batteries into the Remote Control, unscrew the screw on the battery box cover to open the battery compartment. Insert 2 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Put back in place the battery box cover and tighten the screw.</div><div><div>Notice:</div><div>When placing the batteries, you must insert according to the correct polarity, the Remote Control won't function if batteries are reversed.</div></div></div>	<div><div>Performance Tips</div><div><div>1. Do not drive the RC Water Blaster LED Speed Boat in the sea or lake.</div><div>2. Do not drive the RC Water Blaster LED Speed Boat in windy or rainy weather.</div><div>3. Do not drive the RC Water Blaster LED Speed Boat into any sharp object.</div><div>4. Keep fingers, hair and loose clothing away from the propellers.</div></div><div><div>Care and Maintenance</div><div><div>1. Always use dry and soft cloth to clean this product.</div><div>2. Avoid this product from being exposed to sunlight or heat.</div><div>3. Avoid to immerse this toy into the water with the cover unlocked, otherwise, the electronic parts may be damaged.</div><div>4. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.</div></div><div><div>IMPORTANT: BATTERY INFORMATION</div><div><div>For AA Batteries</div><div><div>⚠ WARNING: TO AVOID BATTERY LEAKAGE</div><div>1) Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions.</div><div>2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.</div><div>3) Always remove weak or dead batteries from the product.</div><div>4) Remove the battery if the product is left unused for a long period of time.</div></div></div></div></div></div>	<div><div>Warning</div><div><div>This product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old.</div><div>Please do not put the product in your mouth to prevent choking hazard of small parts.</div><div>Please do not put the finger into available interspaces.</div><div>Please do not play the product in a brutal way such as throwing, crashing or twisting it.</div><div>Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents.</div><div>Avoid placing the batteries in places in high temperatures and avoid exposure to heat.</div><div>When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the toy more convenient.</div><div>When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product.</div><div>Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.</div><div>Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.</div></div></div>

ITEM# ET-0802