

Manual

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPods, Mac, macOS and watchOs are trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.

To use the Apple Find My app to locate this item, the latest version of iOS, iPods, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Getting Started

1. Check For Updates

To use the Apple Find My app to locate your Item Locator, the latest version of iOS, iPad OS, or macOS is recommended.

2.Power On

Press the button on item locator. it should beep once indicating it is powered on and will be in pairing status.



3.Add Your Item Locator

3.1 Start the APP

Open Find My APP on your supported iPhone or iPad.

3.2 Connect your Item Locator

Step 1. Choose the "Items" tap and then tap on "Add Item". Or, tap on the "+" icon directly.



Step2. Tap "Other Supported Items".



 
Step3. Make sure your Item Locator is close to your phone. Wait... until you see "H802", then tap "Connect". Follow the pop-up to fill name and select an emoji; then tap "Continue".

There will be a request to add your Item Locator to your ID, then tap "Continue". Tap "Finish" and your Item Locator will be set up.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

5.Function Introduction

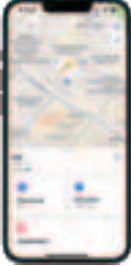

Locate your Item

• Find Item Locator
Tap "Play Sound" to make your Item Locator beep when it is nearby.
• Find your Item Locator's location
Your Item Locator's last known location will appear on the map as emoji you choose during set up, tap "Directions" to navigate to the last known location.



 
Find Item When Out of Range

• Enable the "Notify When Left Behind" toggle, you will receive a notification when you leave your Item Locator behind and it is no longer in range of your device.
• Enable the "Notify when Found" toggle, when your Item location is seen by another Find My enabled device, you will receive a notification of its updated location.
• Note: "Notify When Found" can only be activated when your Item Locator is out of range.



When Your Item is Lost

• When "Your Item is Lost" Under "Lost Mode", tap the "Enable" tab, a screen detailing Lost Mode will pop up, tap "Continue". You can enter your phone number or email address and tap "Next". You may enter a message that will be shared with the person that finds your item. Tap "Activate" to enable "Lost Mode".
• Note: When "Lost Mode" is enabled, "Notification When Found" is automatically enabled.
• Note: When "Lost Mode" is enabled, your Item Locator is locked and cannot be paired to a new device.

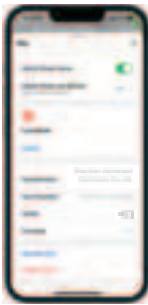

Remove your Item Locator

• Ensure "Lost Mode" is disabled, tap "Remove Item" tab, a summary will open, tap "Remove" to confirm.

Reset your Item Locator

• After successfully removing the Item Locator from the APP, press the Item Locator's function button four times rapidly, and then hold it a fifth time until you hear a ringing chime, the Item Locator is now reset and ready to pair to a new device.

How to replace the Battery:

• Use the opening tool to carefully open the case in the small gap on the side of the item finder.
• Replace the battery with a new CR2032 battery 3V (Positive pole upward).
• Carefully close the Item Locator.



Unwanted Tracking Detection:

If your iPhone detects that an unknown Item Locator is traveling with you, it will send you a notification. A sound will start playing so you will be able to find it. These alerts are only activated when an Item Locator is not connected to its owner's phone, so your partner's Item Locator will not trigger a sound if they are with you.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference.
There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Button Function:

1. Power on (Findmy function is on).
Press the button once to turn it on. it should beep out a ringing chime indicating it is powered on.
If the product is not paired, it will be closed within 3 minutes.
You need to trigger the findmy function again to continue pairing.
2. Power off (Findmy function is off).
Hold the button for 3 seconds, release your hand on time, hear two beeps indicating it is powered off.
3. Enable learn more information query.
Press the button two times rapidly and you will hear a confirmation sound.This operation will be displayed on the findmy app to guide the person who gets the device to obtain the device information, such as the owner's contact information (if the item is set to the lost mode on the app), and the serial number of the device.
4. Factory reset
Press the button 4 times rapidly and then hold it a fifth time until you hear a ringing chime.

A reset operation is required to enable the device to enter the pairing state again (synchronization of Findmy also requires simultaneous unbinding) and rebind the new Apple ID account.

Important tips.

1. When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems. The following action is recommended: 1. Change the phone's network, such as switching between WIFI and mobile. The first pairing may takes a long time, please wait patiently 2. Reset your item. 3.Repair with Findmy APP
2. When "Lost Mode" is enable, DO NOT REMOVE ITEM in the APP. Your Item Locator will be locked and cannot be paired to a new device.
3. The battery usage time varies depending on personal usage habits.
Frequent use of the call function can accelerate battery consumption.



Regulatory Safety Information

Warning: The battery must be kept out of the reach of children. Due to chemical burns and potential esophageal perforation, swallowing may cause serious injury or death. If the child accidentally swallows the button battery, please call the rescue phone immediately and seek medical advice in time.



⚠ WARNING	
<ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested.• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.	
⚠ WARNING	
<ul style="list-style-type: none">• KEEP new and used batteries OUT OF REACH OF CHILDREN• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	



 
Keep in original package until ready to use;
Immediately dispose of used batteries and keep away from children.
Do NOT dispose of batteries in household trash.

使用说明

Apple Find My网络提供了一种简单、安全的方式,可以使用iPhone、iPad、Mac上的Find My应用程序或Apple Watch上的查找项目应用程序查找兼容的个人项目。

要使用Apple Find My应用程序查找此项目,建议使用最新版本的iOS、iPadOS 或 macOS。Apple Watch上的“查找项目”应用程序需要最新版本的watchOS。

将Works with Apple置章一起使用意味着产品的设计特别适用于徽章中标识的技术,并已获得产品制造商的认证,以满足Apple Find My网络产品规范和要求。苹果公司不对本设备的操作或本产品的使用或其是否符合安全和监管标准负责。

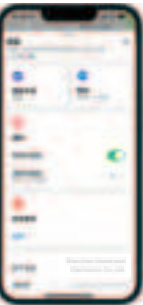

超出范围时查找物品

- 开启“遗落时通知”按钮。当您物品定位器遗落,并且它不再在您的设备范围内时,您将收到通知。
- 开启“找到时通知我”,当您的物品定位器被另一个启用“查找”的设备看到时,您将收到其更新位置的通知。

 
注意:“找到时通知我”只能在您的物品定位器超出范围时激活。



当您的物品丢失时

- 在“丢失模式”下,点击“启用”,将弹出一个详细说明丢失模式的弹窗,选项卡“继续”。您可以输入您的电话号码或电子邮件地址,然后点击“下一步”。
- 您可以输入和可能找到您定位器的人共享的消息。
- 点击“启用”以启用“丢失模式”

注意:启用“丢失模式”后,您的物品定位器将被锁定,无法与新设备配对。

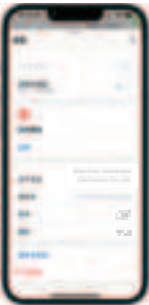

删除并重置您的物品定位器

- 确保“丢失模式”已禁用,点击“移除物品”选项卡,将打开摘要,点击“删除”进行确认。
- 成功从APP中移除物品定位器后,快速按下物品定位器的功能键四次,然后按住第五次直到听到铃声。
- 物品定位器现在已重置并准备好与新设备配对。

如何更换电池:

- 用开壳工具在物品定位器侧面的小缝隙处小心地打开外壳。
- 用新的CR2032 3V电池更换电池(正极向上)。
- 小心合上物品定位器外壳。



如何防止设备被用于恶意跟踪?

 
当别人的设备混入您的随身物品时,并跟踪超过一段时间,您会通过以下两种方式被提醒:

1. 如果您有iPhone, iPad, 或者iPod touch等苹果设备,您会在苹果设备上获得提醒;此功能在iOS or iPadOS 14.5 及以后版本的苹果设备上有。
2. 如果您没有苹果设备,如果别人的Tag离开了自己的主人,并跟踪您一段时间,当它移动时,它会发出音乐,以提醒您。当然,如果您的朋友正佩戴设备,或者您搭乘的地铁上很多人都有这个设备,也不必担心。因为只要设备没离开主人身边,就不会触发这样的提醒。

操作说明

1. 检查更新
要使用Apple Find My应用程序查找物品定位器,建议使用最新版本的iOS、iPad OS或macOS。

2. 开机
按一下按键,听到响声后表示开机,设备进入配对状态。



3. 添加设备

- 3.1 打开查找APP
在支持的iPhone或iPad上打开“查找”应用程序。
- 3.2 连接您的定位器

步骤1.按照图示选择“物品”图标,然后点击“添加物品”。或者直接点击右上角的“+”。



步骤2.点击“其他支持的物品”。



步骤3. 确保您的定位器靠近手机,然后等待系统配对,当您在系统弹窗看到“HB02”的时候,点击下面的“连接”按钮,根据弹窗提示填写设备名字和选择设备图标,然后点击“继续”,最后点击“完成”,您的定位器就设定好了。



4. 产品功能介绍



寻找物品

- 查找物品定位器:点击“播放声音”,让您的物品定位器在附近时发出声音。
- 找到您的物品定位器的位置:您的物品定位器的最后一个已知位置将作为您在设置过程中选择的表情符号出现在地图上。点击“路线”导航到最后一个已知位置。

WARNING

Remove and Immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate. Even used batteries may cause severe injury or death. Call a local poison control center for treatment information. Non-rechargeable batteries are not to be recharged. Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns. The compatible battery type is CR2032. The nominal battery voltage: DC 3V

Ensure the batteries are installed correctly according to polarity(+ and -). Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbonzinc, or rechargeable batteries. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.



WARNING: This product contains a button cell or coin battery.

