

Chapter 0: Quick Start




Acer C200 Mobile Phone


Please follow the simple steps below to make your first call:

Install the battery

Place the bottom end of the battery on the phone.

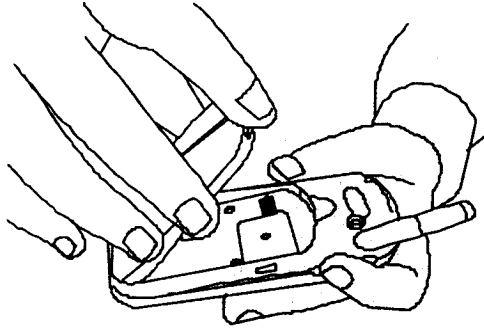


Hold down the top side of the battery. You will hear a click when the battery is secured.

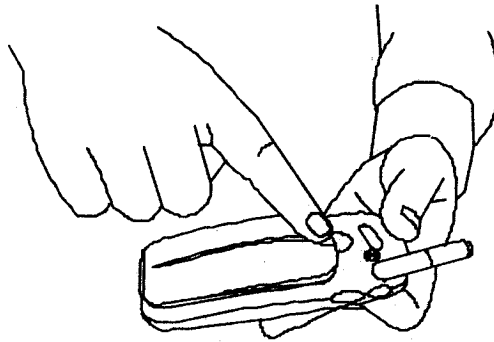


Charge the battery

Insert the battery charger connector into the battery charging socket.

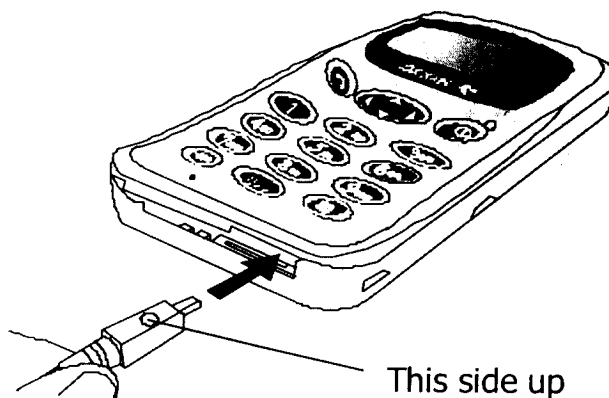



Acer C200 Mobile Phone

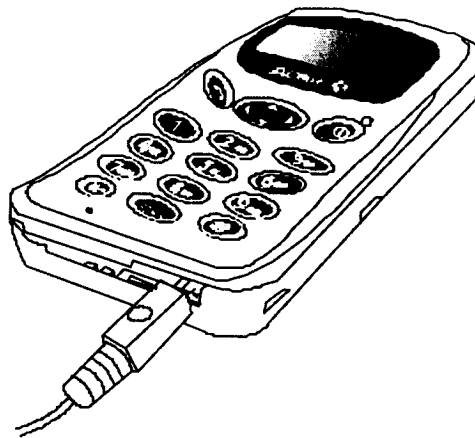

It takes 24 hours for the charger to fully charge a new battery. Recharging takes about 160 minutes each time.

When charging, the battery strength bars  flashes until the battery is fully charged.



Turn the phone on

After the battery is fully charged, press and hold  key to turn on the phone power. The phone beeps and a welcome animation will be displayed on the screen. After you turn your phone on, it will start searching the network to use.



Make a call

Key in the phone number with the keys on the keypad. When finished, press  key.



End a call


Press  key to end the call.



Acer C200 Mobile Phone

<Memo>



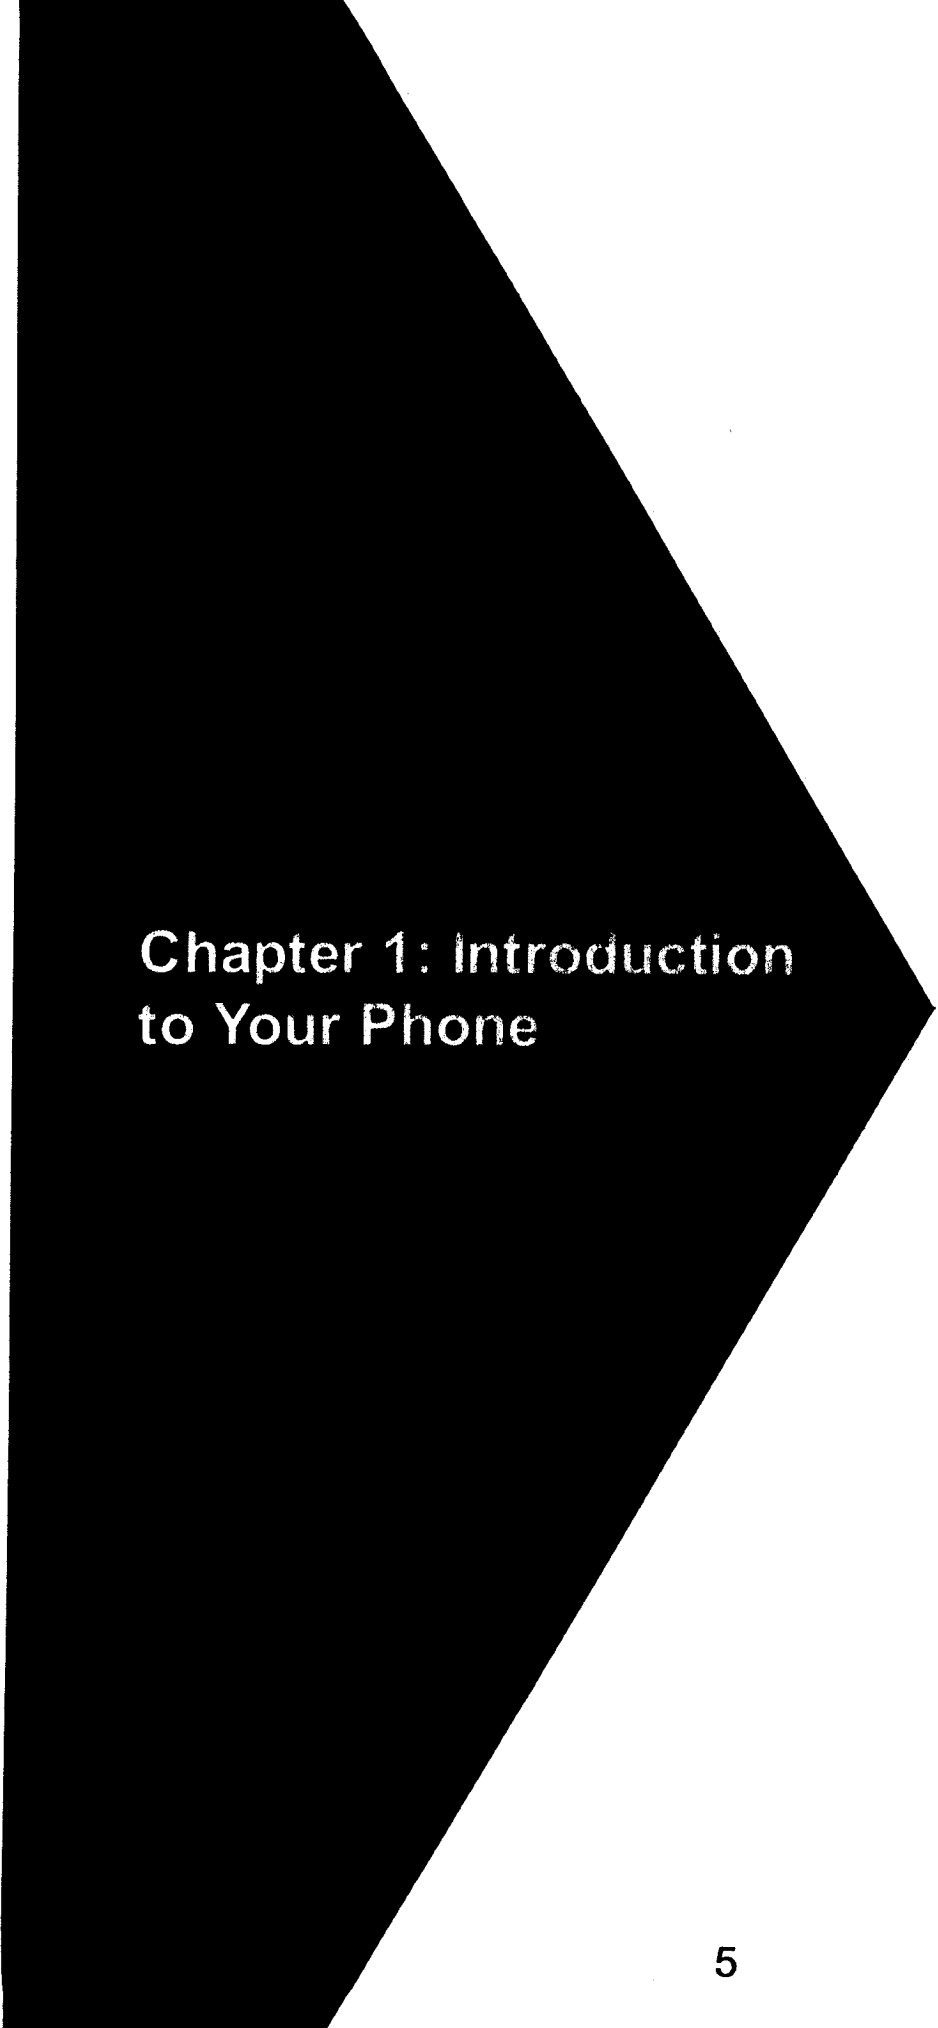

Chapter 1: Introduction to Your Phone

FCC RF EXPOSURE INFORMATION

WARNING! Read this information before using your phone

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation


This device was tested for typical body-worn operations with the back of the phone kept 1 inch (2.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1 inch (2.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 1 inch (2.5 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov



Acer C200 Mobile Phone

Your Phone

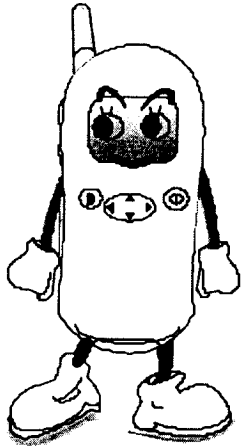

Thank you for choosing Acer mobile phone!

From now on, with your Acer mobile phone, you will experience total mobility in your life. You will be able to communicate with more freedom and convenience - you can not only make and receive phone calls with your handset alone, but also communicate silently by connecting to a laptop or desktop PC to transmit data, fax and access the Internet.

We know that you demand more than what a mobile phone can offer for mobility. The light-weight, slim body of your phone symbolizes your taste for elegance and compactness. The hi-resolution LCD display frees you from the nightmare of groping between pixels. You see clearly each and every character displayed on the screen.

Why not take your phone along as a personal secretary? With the built-in scheduler function, you can let the phone remind yourself with the alarm when it's time to go. If you prefer a silent reminder, the built-in vibrator ringer can certainly save you from embarrassment in a meeting.


There are more features to discover. Now please follow us and make the acquaintance of your new and versatile partner.




Acer C200 Mobile Phone

Appearance

Front View

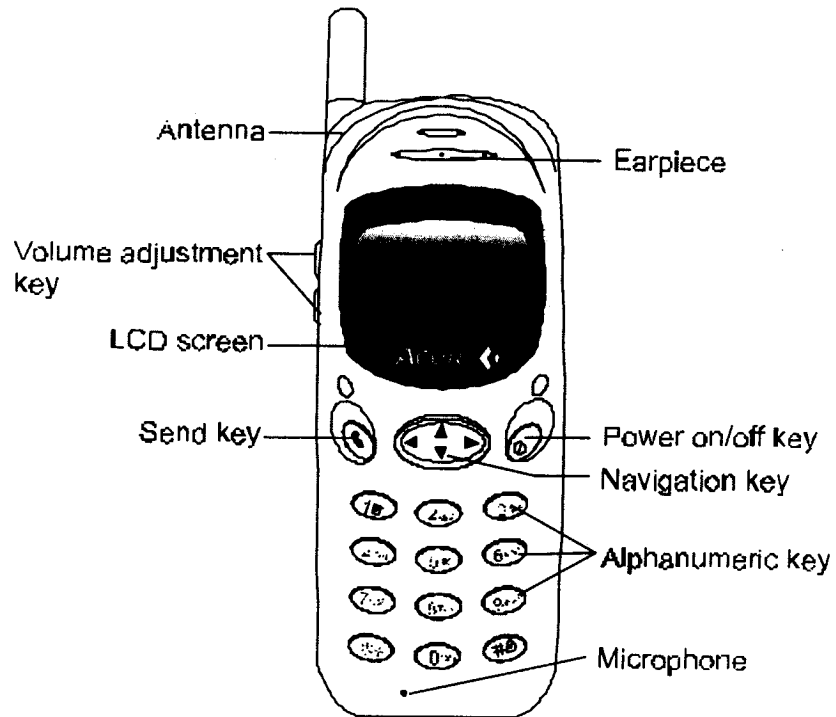


Rear View

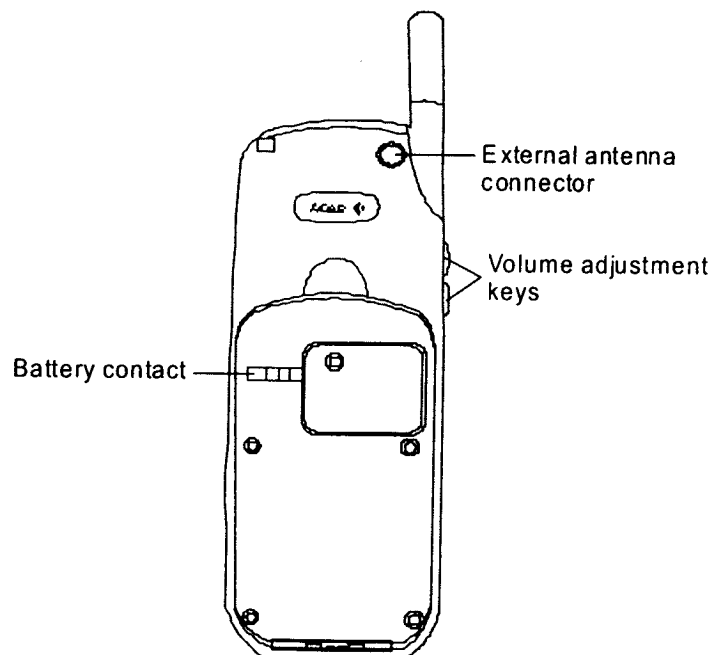



Acer C200 Mobile Phone

 Bottom View

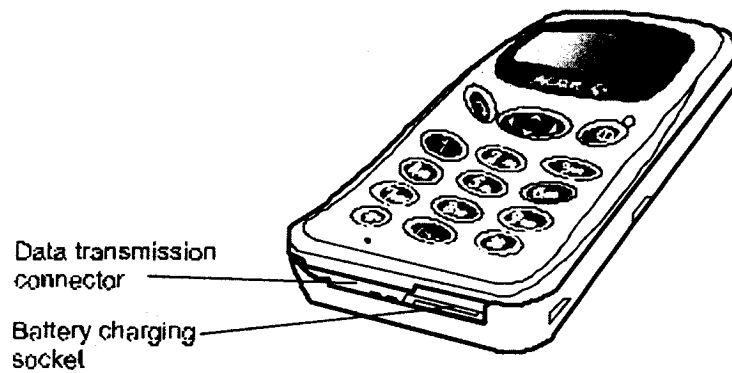



Acer C200 Mobile Phone

The LCD Screen

There are several icons that appear on the LCD screen to indicate the status of your phone. Please see the table below for the meaning of each icon:



Icon		Meaning
	Signal strength	Shows the current signal strength. The more bars displayed, the better the signal strength.
	Message	Steady: indicates that there are new and unread text or voice messages. Blinking: indicates that there are new unread emergency messages.
	Roaming	Steady: indicates that this phone is out of the reach of its service area, but in a friendly roaming area. Blinking: indicates that the phone is currently in an unfriendly roaming area
	Digital mode	This icon appears when the phone works in digital mode.
	Call status	Blinking: indicates that there is an incoming call. Steady: when you are speaking with your phone, the icon will turn steady.
	No service	This icon indicates that the phone can not receive signal from the network operator.
	Ring type	Displays the ring type when your phone receives an incoming call:  : ring only  : vibrate only  : ring and vibrate



Acer C200 Mobile Phone



Battery level

The battery level is shown by the number of bars in the battery icon. The more bars displayed, the higher the battery strength. This icon will flash when the handset is running out of battery.

When you charge the battery, the bars will flash until the battery is full.



Acer C200 Mobile Phone

Keypad

There are two kinds of keys on the keypad: the **Function Keys** and **Alphanumeric Keys**. In each section below, "long press" a key means "press and hold a key for about 2 seconds", while "press" a key means "press and release a key immediately".

In standby mode, when you press a key on the keypad, the backlight will be turned on automatically. If you want to turn off the backlight, please refer to "Backlight" on page 40 for details.

Function Keys

Press...		To...	
	End/Power key	• End a call. • Exit menu and return to standby mode. • Abort any operation. • Turn the phone power on/off.	
	Send/OK key	• Make an outgoing call or answer an incoming call. • Enter Main Menu. • Confirm selections.	
	Navigation Key		• Enter Phone Book in standby mode. • Move cursor backward. • Return to the previous menu.
			• Enter Call Logs in standby mode. • Move cursor forward. • Move to the next item in menu options.
			• Start Voice Dialing in standby mode. • Delete an letter or number. Long press to delete all. • Return to standby mode from the Main Menu.
			• Enter Main Menu. • Enter submenu in the Main Menu.



Acer C200 Mobile Phone

Alphanumeric Keys

There are 12 alphanumeric keys on the keypad. You can use these keys to enter numbers and letters. To enter a number, simply press the button with that number. To enter characters, press the key several times until the desired letter appears. To switch between upper and lower cases, long press the key.

Please see the table below for the keys and their corresponding letters:

Key	Letters
	0
	, . : 1 % ! ? ; " ' < > () @ &
	A B C 2 Å Ä å ä à Ç æ ß
	D E F 3 è é Ê Ë Æ \$
	G H I 4 ì í î ï ð
	J K L 5 Δ _ Φ Γ Λ Ω
	M N O 6 Ñ ñ ò Ö ö
	P Q R S 7 ¥ §
	T U V 8 ü Ü ù
	W X Y Z 9 Π Ψ Σ Θ Ξ Ι)
	+ - * / =
	# P



Acer C200 Mobile Phone

When you have entered the first letter, the cursor will advance to the position of the next letter after about two seconds. You can type to enter the letter directly. To clear a letter or number, press ◀ on the navigation key. The cursor will move backward and the letter will be deleted. To delete all letters or numbers, simply long press ◀ on the navigation key.

For example, if you want to enter "Mary" :

- Press 6 key until "M" displays on the screen.
- Long press 2 key, then press 2 key several times until "a" appears on the screen.
- Press 7 key several times until "r" appears on the screen.
- Press 9 key several times until "y" appears on the screen.
- Finally, press key to confirm.



Acer C200 Mobile Phone



<Memo>

Chapter 2: Using Your Phone



Basic Operations


Turning on the phone

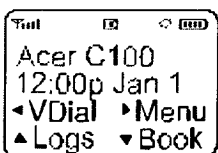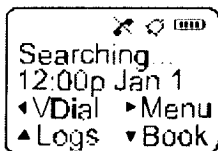

When the phone power is off, you can long press key to turn it on. The phone beeps and a welcome animation will appear on the screen. After you turn your phone on, it will start searching the network to use.

When the network service is acquired, the network name will be displayed on the screen. Under this "standby" mode, you can:

- Press on the navigation key to access the **Main Menu**. (see "Chapter 3: Menu Options" on page 25)
- Press on the navigation key to use **Voice Dialing**. (see "Use voice dialing" on page 58)
- Press on the navigation key to access **Phone Book**. (see "Phone Book Menu" on page 51)
- Press on the navigation key to enter **Call Logs**. (see "Call logs" on page 21)
- Long press key to listen to the voice mail message.

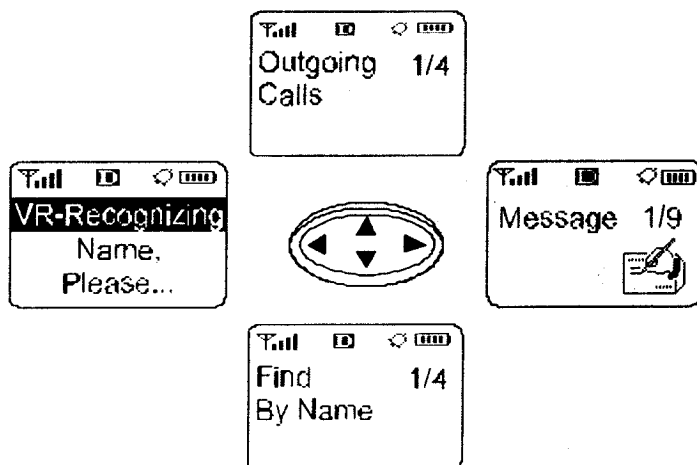

You can not make a call if network service is not available.



Acer C200 Mobile Phone

Turning off the phone

When the phone power is on, you can long press  key to turn it off.

Making a call

In standby mode, you can make a call in one of the following ways:

- Key in the phone number, then press  key.
- Press  key to browse the last dialed numbers, then press  key again to dial.
- Long press  key to redial the last dialed number.
- Press  on the navigation key to use Voice Dialing (see "Use voice dialing" on page 58).
- Find a Phone Book record by name and press  key (see "Find by name" on page 52).
- Find a Phone Book record by location and press  key. (see "Find by location" on page 52).
- Long press  ~  key to use one-touch dialing (see "One touch dial" on page 44).
- Enter the location (number) of a Phone Book record and press  key.
- From "Outgoing Call" log, choose the number to dial and press  key (see "Call logs" on page 21).
- From "Incoming Call" log, choose the number to dial and press  key (see "Call logs" on page 21).
- From "Missed Call" log, choose the number to dial and press  key (see "Call logs" on page 21).


when you dial a phone number, you can long press  key to insert a hard pause, or  key to insert a time pause. H (hard pause) or T (time pause) will appear on the screen.

If a hard pause is inserted, the phone will prompt you to send the numbers behind the hard pause when call is connected.



Acer C200 Mobile Phone


For example, if you enter:

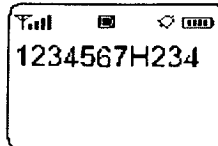

After the call "1234567" is connected, the screen will prompt you to send the number "234". You can press  key to send.


If a time pause is inserted, the phone will send the numbers behind the time pause after 3 seconds. This is useful when you want to call a extension number.

For example, if you want to call 1234567, extension number 89:

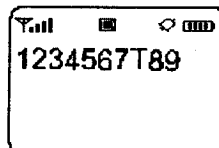



3 seconds after the call "1234567" is connected, the phone will send the number "89" automatically. You can lengthen the pause duration by inserting more time pauses.

For example,

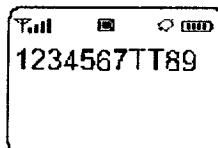

6 seconds after the call "1234567" is connected, the phone will send the number "89" automatically.

You can also use time pauses in combination with hard pauses:

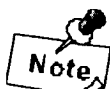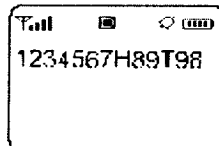

Hard pause does not work if it is inserted right after a time pause without numbers in between (e.g, 1234567TH89).



Acer C200 Mobile Phone

Redialing a call

If the attempt to make a call failed, according to the setting in **Retry Mode** (see "Retry mode" on page 45), you can redial the last dialed number manually or let the phone redial the number automatically.


Answering a call

The phone rings or vibrates when a call is received. If the caller's number can be found in the Phone Book, the caller's name will appear on the screen. The call time will also be shown.


You can press  key to answer that call. Depending on the setting in **Answer Mode** (see "Answer mode" on page 44), you can also choose to answer a call by pressing any key (except  key) on the keypad.



Your phone can also receive data and fax calls when it is connected to a host computer via a data service cable. The data and fax calls will be answered automatically. Meanwhile, "Fax Data" will be displayed on the screen.

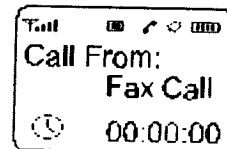

Ending a call

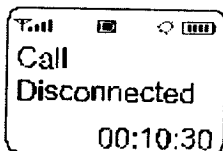

You can press  key to end a call. The call timer information will flash on the screen for about three seconds and the phone will then return to standby mode.

If the total call time exceeds the value you set in the **Call Time Limit** function (see "Call time limit" on page 45), a warning tone will be generated to remind you of the total call time.



In call options

During a phone call, you can choose to use the following features:


- Press the alphanumeric keys to send DTMF tone (for example, when you are asked to enter ID number, account number or other data).
- Press  key to end the call.
- If there is another call coming, you can press  key to answer the second incoming call and put the current call on hold. To unhold the call, press  key again (see "Call waiting" on page 20).
- Press the volume adjustment keys to adjust the ear piece volume.
- Press  on the navigation key to enter the **In Call Option** menu:

In the menu, you can highlight the desired item by pressing  or  on the navigation key and then press  key to select.

Mute (Unmute): mute or unmute the current call.

Scratch pad: jot down numbers on the scratch pad.




When finished, you can press  key to save.

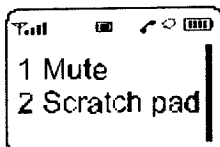

Call waiting

If another call is received while you are speaking, the "Call Waiting" message and name (or number) of the third calling party will appear on the screen.

- To put the current call on hold and answer the incoming call, press  key.
- When the incoming call is ended, you will return to the previous call automatically.

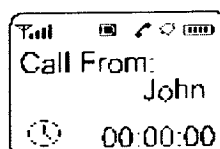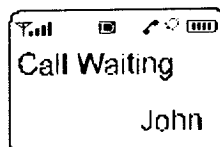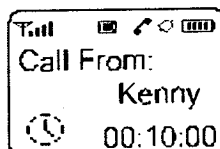



Acer C200 Mobile Phone

Three way call

Call From:
Kenny
00:10:00

Call to:
John
00:00:00

While you are speaking, you can initiate another call to the third calling party:

- Make a call to the third party and press key.
- When the third party is connected, press key again and the three calling party will be connected.
- To disconnect the third calling party, press key. To disconnect all calls, press key.

Key guard

In standby mode, you can use the key guard function to keep from accidental key operation.

To activate key guard, long press key. To cancel, press key, then press key.

Call logs

You can enter the **Call Logs** menu by pressing on the navigation key in standby mode.

There are 4 options in the Call Logs menu. You can highlight the desired item by pressing or on the navigation key and then press key to select.


Outgoing Log
1/4
0 Call(s)

Incoming Log
2/4
0 Call(s)


- **Outgoing Log:** display the record of outgoing calls. You can press or on the navigation key to scroll the records, then press key to dial or press on the navigation key to add to the Phone Book.
- **Incoming Log:** display the record of incoming calls. You can press or on the navigation key to scroll the records, then press key to dial or press on the navigation key to add to the Phone Book.



Acer C200 Mobile Phone

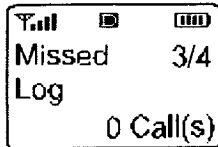

- **Missed Log:** display the record of missed calls. You can press ▲ or ▼ on the navigation key to scroll the records, then press key to dial or press ► on the navigation key to add to the Phone Book.

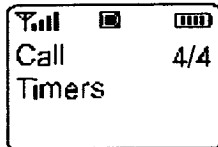


- **Call Timers:** you can press key to display the duration of the Last Call, All Calls, Home Calls and Roam Calls. To clear the timer, see "Reset all timers" on page 67

Reading messages



When you have a new text message, the phone will generate an alert sound and "You have new text message!" and icon will appear on the screen. A blinking icon means that you have received an urgent text message.

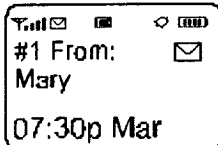

Press key. The sender and time of the message will be appear on the screen.

If you have more than 1 new messages, you can press ▲ or ▼ on the navigation key to scroll the messages.

Press key again to read the message. After you read the message, you can press ► on the navigation key to save the message.

Calling voicemail


You can long press key to listen to the voice mail message.



Knowing What Your Phone Says

Your phone lets you know its working status by issuing sounds or display text prompts on the screen.


Low battery warning

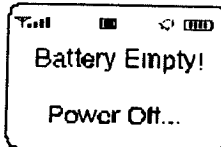

If the battery power is getting low, the battery icon on the screen will start to flash. If the phone has run out of the battery completely, the battery empty message will appear on the screen and the phone will be turned off automatically.


At this time, use the battery charger to charge the battery.

Battery charging

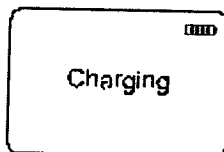

When the battery is being charged with phone power off, the battery charging animation will appear on the screen. If the phone power is on, the number of bars in the battery icon will change accordingly. When the battery is fully charged, a battery full notification will appear on the screen.

Missed call alert

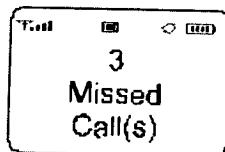

When you have a missed call, a missed call information (including the number of call missed) will appear on the screen.

Roam alert

If you are roaming under other network service areas, the roam icon  will appear on the screen, telling you that are under a home service area, roam service area or a secondary roam service area.



Acer C200 Mobile Phone

Power saving

If the phone can not acquire a network for a long time, the phone will enter power saving mode automatically. You can press any key to wake up the phone.

Chapter 3: Menu Options




Acer C200 Mobile Phone

In standby mode, you can press ► on the navigation key to enter the Main Menu. You can press ▲ or ▼ on the navigation key to scroll through the menu items and press ⏏ key to enter. The Main Menu includes many advanced options and you can get the most from your phone by using these functions.







Message Menu

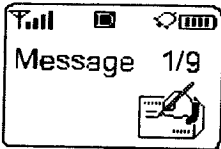



The options in the Message Menu allow you to deal with text messages.

You can press  key to enter its submenu that includes the options listed below. You can use  or  on the navigation key to highlight an item and press  key to enter.

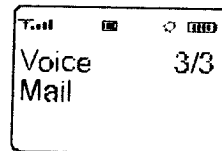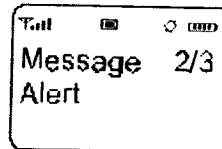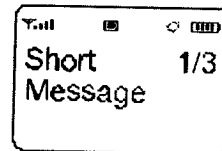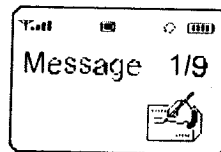



Short message

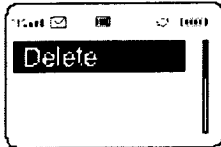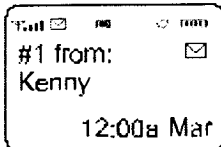

Inbox

Inbox is where received messages are stored.


Press key to enter, then press or on the navigation key to browse the messages. If the message is urgent, the icon flashes.

Press key to read the message. You can scroll through the messages by pressing or on the navigation key. You can press key and select "Delete" to delete current message.

Erase all

By selecting this item, you can erase all text messages at once.

Message alert

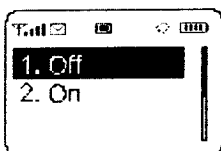

The message alert function can let your phone generate a vocal notification when a new message is received.

You can enter this function item by pressing key. Press or on the navigation key to select "On" or "Off", then press key to confirm.



Acer C200 Mobile Phone

Voice mail

If you have new voice mails, the number of new voice mails will be displayed on the screen after you enter this function item.

Press  key to listen to the voice mail.

In standby mode, you can also long press  key directly to listen to the voice mail message.




Acer C200 Mobile Phone

<Memo>









Scheduler Menu

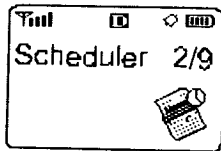



Scheduler is a simple-to-use tool for managing your appointments. You can use the scheduler to set up a reminder of important events.

You can press  key to enter its submenu that includes the options listed below. You can use  or  on the navigation key to highlight an item and press  key to enter.

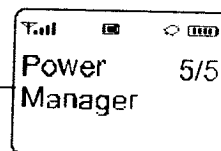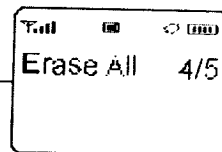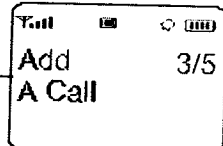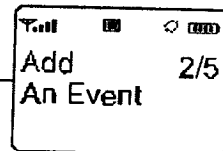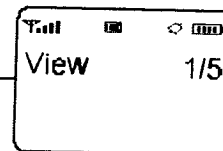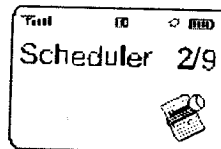



View

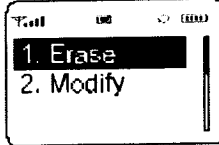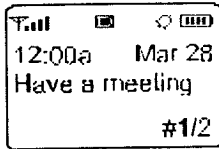

You can use this function to view the events that are previously recorded in the scheduler memory. If the memory is empty, "Record Empty" will appear on the screen.

If there are already events stored in the memory, you can press ▲ or ▼ on the navigation key to browse the events. You can press ⌂ key to select an event and view its options:

Erase: press ⌂ key again and the selected event will be deleted.

Modify: press ⌂ key to start modifying the content of the event. When finished, press ⌂ key and you will be prompted to enter the year, month, day and time of the alarm. Finally, press ⌂ key to save.

Add an event

You can add new events to your scheduler here. The phone will generate an alarm to remind you of the event.

To add a new event, first press ⌂ key to enter this item, then key in the content of the event. When finished, press ⌂ key and you will be prompted to enter the year, month, day and time. Finally, press ⌂ to save.

Add a call

You can add a call reminder here.

To enter a new call reminder, first press ⌂ key to enter this item, then key in the content of the event. When finished, press ⌂ key and you will be prompted to enter the year, month, day and time of the alarm. Finally, press ⌂ key to save.






Acer C200 Mobile Phone

Erase all

You can use this function to delete all events in the scheduler. After you press  key to enter this item, press  key again and all events in the memory will be erased.

Power manager

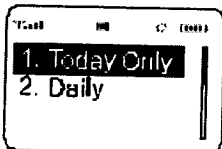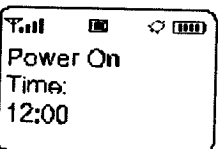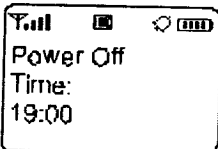

The Power Manager allows your handset to power on or off at a specified time automatically.

Press  key, and press  or  on the navigation key to select "Auto Power Off" or "Auto Power On". Select "On", then enter the power on time and press  key, then you will be prompted to select "Today Only" or "Daily" for the Power Manager to take effect. Press  or  on the navigation key to select and finally press  key to confirm.

To cancel the function, select "Off" after you select "Auto Power Off" or "Auto Power On".



Acer C200 Mobile Phone

<Memo>





Acer C200 Mobile Phone

Sounds Menu


The options in the Sounds Menu allow you to customize the sound settings of your phone according to your preferences.

You can press  key to enter its submenu that includes the options listed below. You can use  or  on the navigation key to highlight an item and press  key to enter.

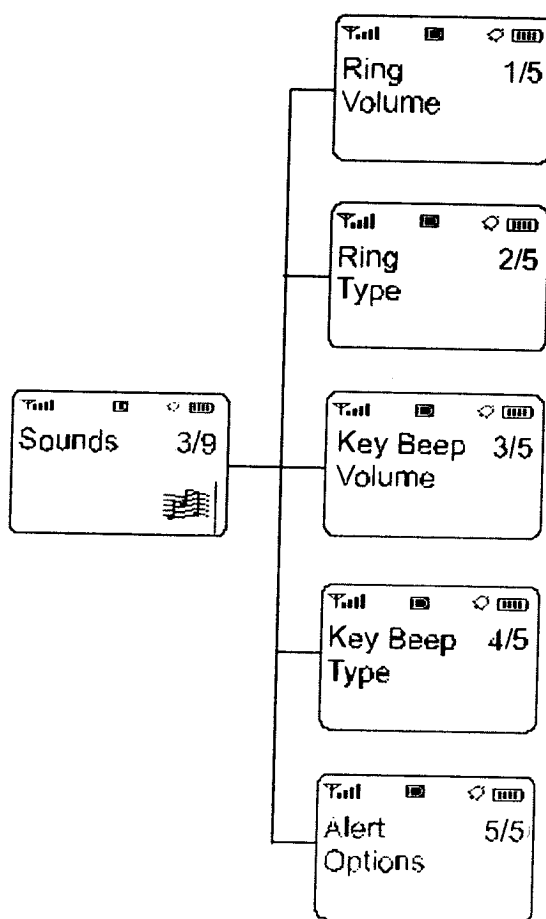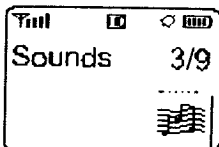



Ring volume

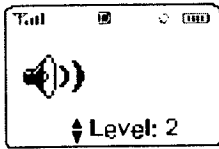

To adjust ring volume:

Press key to enter, then press or on the navigation key to select an appropriate volume level. The more bars displayed beside the speaker icon, the higher the volume level.


Finally, press key to confirm.

Ring type

You can change the ring types for your voice calls, scheduler alarms and message alert. Press key to view the following option list:

Voice Call

Press key and 4 available ring types will be displayed on the screen:

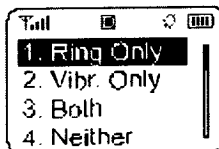


Ring Only: the phone rings when a voice call is received. If you choose this item, you can then choose a ring type to use from the ring type list that follows up. There are 16 ring tones available.

Vibr. Only: the phone vibrates when a voice call is received.

Both: the phone rings and vibrates when a voice call is received. If you choose this item, you can then choose a ring type to use from the ring type list that follows up. There are 16 ring types available.

Neither: the phone neither rings nor vibrates when a call is received.

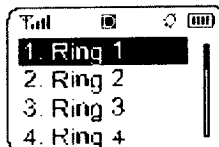


You can also let your phone generate different ring tones when your phone receives calls from different callers (see "Add a record" on page 53).




Acer C200 Mobile Phone

Message

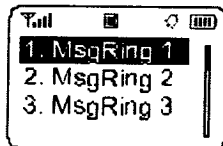


Press ▲ or ▼ on the navigation key to scroll through the sound you like to use as the message alert tone. When you highlight each ring type, the phone plays the ring tone you choose. There are 3 ring types available. When you find the one you like, press  key to confirm.

Scheduler

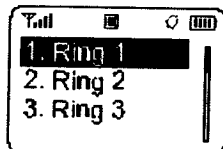


Press ▲ or ▼ on the navigation key to scroll the sound you like to use as the scheduler alarm tone. When you highlight each ring type, the phone will generate the ring tone of that type to let you know what it sounds like. There are 3 ring types available. When you find the one you like, press  to confirm.

Key beep volume

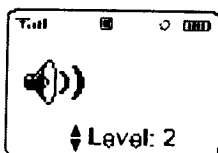

You can adjust the volume of the beep generated when you press a key on the keypad. Press ▲ or ▼ on the navigation key to increase or decrease the key beep volume (the more bars displayed beside the speaker icon, the higher the key beep volume).

Key beep type

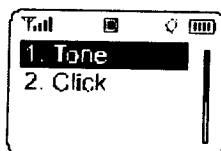

The options here allow you to choose between two different key beep types. Press ▲ or ▼ on the navigation key to highlight "Tone" or "Click" and then press  key to confirm.




Acer C200 Mobile Phone

Alert options

You can choose to let your phone generate an alert sound under these circumstances:


Roaming Alert

Roaming Alert is generated when you are roaming under a friendly network. Press ▲ or ▼ on the navigation key to select "On" or "Off". Finally, press  key to confirm.

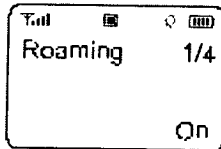


In or Out Service Alert

No Service Alert is generated when no network service is available. Press ▲ or ▼ on the navigation key to select "On" or "Off". Finally, press  key to confirm.

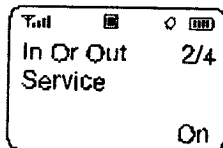


Service Mode Change Alert

Analog Alert is generated when your phone is working in analog mode. Press ▲ or ▼ on the navigation key to select "On" or "Off". Finally, press  key to confirm.

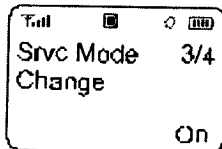


Minute Alert

Minute Alert is generated once every minute after a phone call is connected. Press ▲ or ▼ on the navigation key to select "On" or "Off". Finally, press  key to confirm.

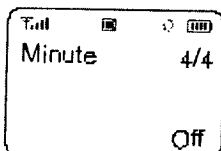




Display Menu

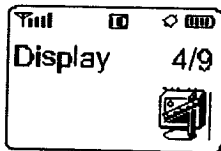

The Display Menu provides several options that allow you customize your screen display properties.

You can press  key to enter its submenu that includes the options listed below. You can use  or  on the navigation key to highlight an item and press  key to enter.

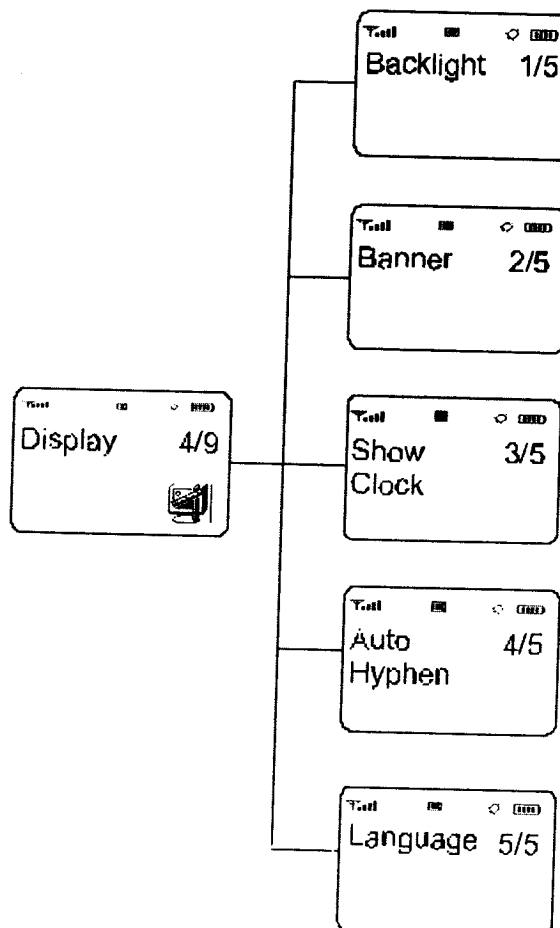




Acer C200 Mobile Phone

Backlight

When you press a key on the keypad, the back light of the screen will be turned on automatically. The back light of the phone screen allows you to clearly read the information displayed on the screen when the environment is dark. However, letting the back light stay on too long will consume the power of battery quickly.

Press  key to view the option list and use ▲ or ▼ on the navigation key to highlight an item, then press  key to select.

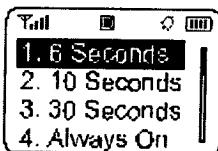



6 Seconds: if no key is pressed after the back light is on for 6 seconds, it will be turned off automatically.

10 Seconds: if no key is pressed after the back light is on for 10 seconds, it will be turned off automatically.

30 Seconds: if no key is pressed after the back light is on for 30 seconds, it will be turned off automatically.

Always On: the back light stays always on until you turn off the power of your phone.

Banner

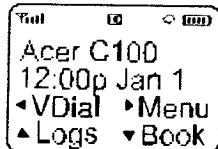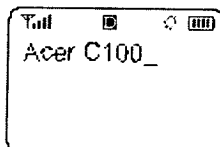

Banner is the text that appears on the center of the screen when your phone is in standby mode. You can press  key to start editing the banner (maximum 12 characters). When finished, press  key to save.



Acer C200 Mobile Phone

Show clock


You can choose to let your phone display or not display current time. Press  key and then use  or  on the navigation key to highlight an item, then press  key to confirm.

Auto hyphen


Auto hyphen function hyphenates the phone number automatically when you enter.

For example, if you enter the number 12345678:

With Auto hyphen function off:

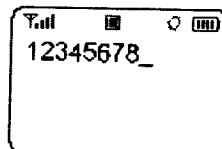

With Auto hyphen function on:

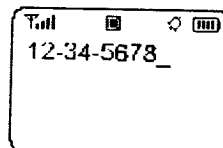

Press  key and then use  or  on the navigation key to select "On" or "Off", then press  key to confirm.

Language

You can choose the language used to display information on the phone screen.

Press  key and then use  or  on the navigation key to select a language, then press  key to confirm.



Acer C200 Mobile Phone

 
<Memo>






Acer C200 Mobile Phone

Services Menu

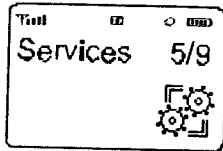

The Service Menu provides several functions that allow you customize your phone to fit your own preferences.

 You can press  key to enter its submenu that includes the options listed below. You can use  or  on the navigation key to highlight an item and press  key to enter.

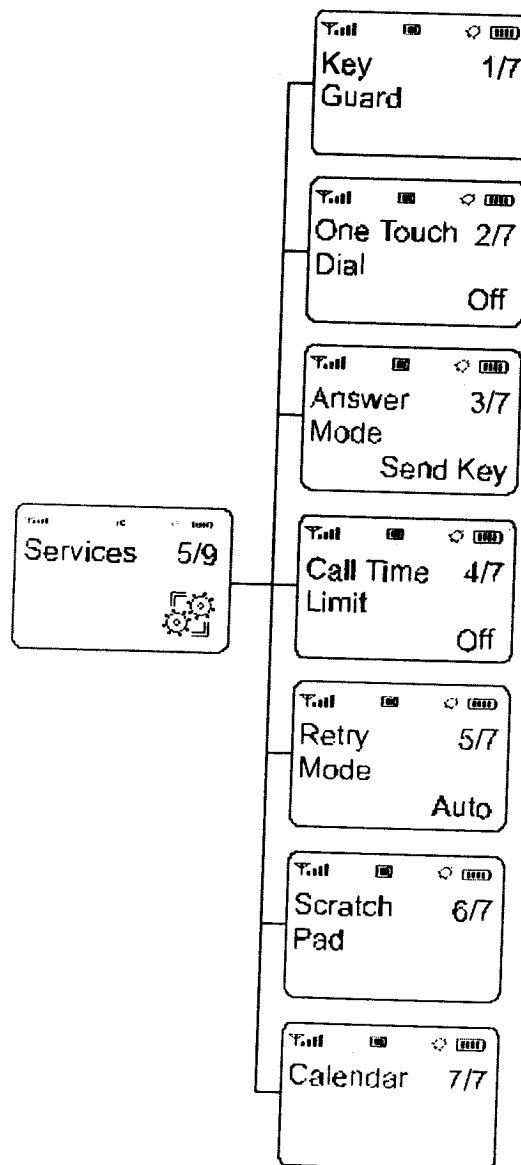



Key guard

Full ID
Acer C100
12:00p May 12
Key Guard On
Send: Unlock

You can activate this function to keep from accidental key operations.

Press  key to activate key guard. You can also activate the key guard function by long pressing  key in standby mode.

After you activate the key guard function, you can still press  key to answer an incoming call.

To deactivate key lock, first press  key, then press  key.

One touch dial

You can choose to turn on/off the touch dial function here. (For how to use the touch dial function, please see "One touch dial" on page 44.

Press  key to view the option list and use  or  on the navigation key to highlight "On" or "Off", then press  key to confirm.

Answer mode

When an incoming call is received, you can choose to use one of the following modes to answer that call. You can press  key to view the options below and use  or  on the navigation key to highlight the mode you want to use, then press  to select:

Full ID
1. Send Key
2. Auto
3. Any Key

Send key: the call will be answered when you press  key.

Auto: the call will be answered automatically after ringing for 3 seconds.

 
Any key: the call can be answered by pressing any key on the keypad (except  key).

Note

The Auto mode works only when a hands free or car kit is connected to the phone, or the Answer Machine function is activated.



Call time limit

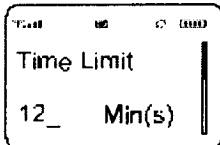

Each time you end a call, the limited alert timer will give you a warning beep if the total talk time exceeds the time limit set here.

Press  key and you will be prompted to enter the limit time in minutes. When finished, press  key to activate the function. If you set the limit time to 0, this function will be deactivated.

Retry mode



When you try to make a call but is not successful, you can let your phone try making the call again.

 
Press  key to view the options and press  or  on the navigation key to highlight a mode you want to use. Finally, press  key to confirm.

Off: the phone does not retry making the call.

Auto: if the call is not connected, your phone will try again until the call is connected successfully.

Prompt: your phone will prompt you before retrying.

Scratch pad

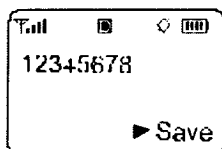

During your phone conversation, you can use this function to jot down important memos, such as telephone numbers.

When you finish entering the content, you can press  on the navigation key to save the data to Phone Book.



If you do not save the data, it will not last after you turn off the phone.



20:00

1 2

3 4 5 6 7 8 9

10 11 12 13 14 15 16

 
17 18 19 20 21 22 23

24 25 26 27 28 29 30

To move among months, use ▲ and ▼ on the navigation key.
To move among days, use ◀ and ▶ on the navigation key.




Network Options Menu

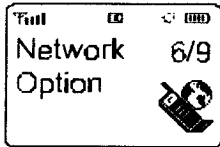

The Network Options Menu contains options that you can choose to determine the operation mode of your phone with the network.

 You can press  key to enter its submenu that includes the options listed below. You can use  or  on the navigation key to highlight an item and press  key to enter.

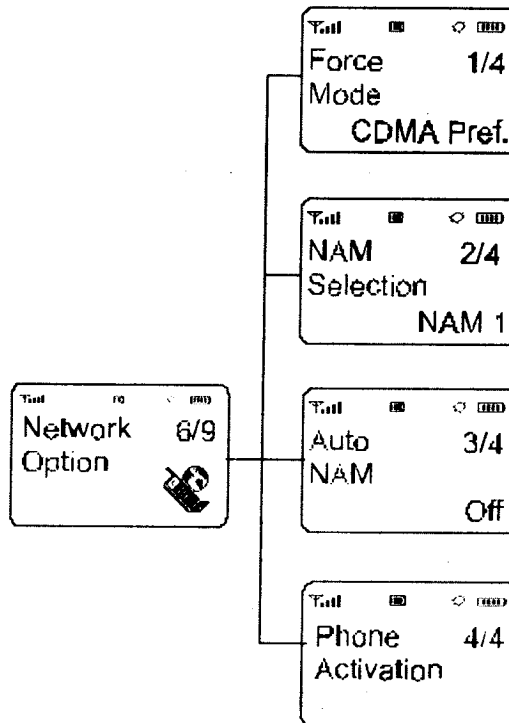




Acer C200 Mobile Phone

Prefer mode

The Prefer Mode determines which network the phone will select after it is turned on.

 Press ▲ or ▼ on the navigation key to highlight a mode you want to use, then press  key to confirm.

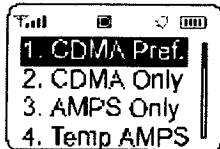

CDMA Prefer: the phone will first select the CDMA network when turned on.

CDMA Only: the phone can only use the CDMA network.

AMPS Only: the phone can only use the AMPS network.

Temp AMPS: you can choose this item to force an AMPS call temporarily. This function will be set to Off automatically after you make an AMPS call or if no call is made 10 minutes after this function is activated.

NAM selection

 
NAM is short for Number Assignment Module. You can use different NAMs to receive and make telephone calls.

This function allows you to choose which NAM to use. Press ▲ or ▼ on the navigation key to highlight the one you want, then press  key to confirm.

NAM #1: use NAM #1.

NAM #2: use NAM #2.

Auto NAM

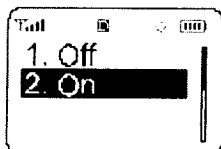

You can let your phone assign an NAM automatically. Press ▲ or ▼ on the navigation key to highlight the one you want, then press  key to confirm.

To select NAM manually, set Auto NAM to "Off".



Acer C200 Mobile Phone

Phone activation

Use this function to activate your phone. Press  key to start making activating the phone.

 


Acer C200 Mobile Phone

<Memo>




Phone Book Menu

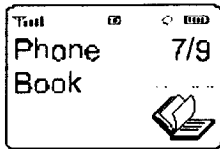

Phone Book is where you can store phone numbers. The Phone Book Menu provides several options to let you find, save and use Phone Book entries quickly and easily.

 You can press  key to enter its submenu that includes the options listed below. You can use  or  on the navigation key to highlight an item and press  key to enter.

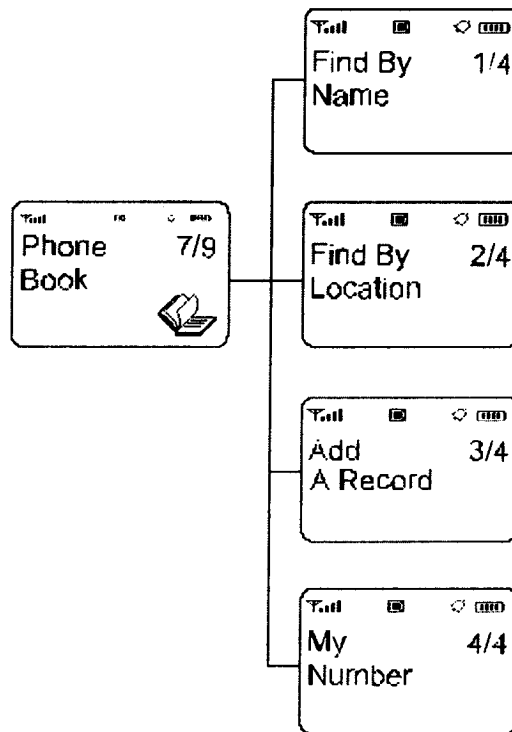




Acer C200 Mobile Phone

Find by name

You can find a Phone Book record by name.

Press  key and you will be prompted to enter the name of the record you look for. Enter the name of that record and the record will appear on the screen.

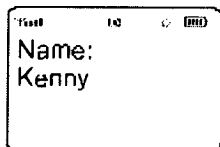

You can enter the full name of that record or enter the just the first few letters. The names starting with those letters will be listed on the screen. Press  or  on the navigation key to scroll through the names until you see the one you look for.

Press  key and the details will appear on the screen.

To dial that number, press  key again. To view its options, press  on the navigation key.

Find by location

You can find a Phone Book record by the location of that record in the Phone Book. The location is a number that you assign to a record when you save it to Phone Book.

Press  key to enter, and all phone book entries will be displayed by location. You can press  or  on the navigation key to scroll through the entries.

If the location is "2", press  key and then  key. The details of that record will be displayed on the screen. If you have added voice tag(s) to this record, the  icon will appear to the upper right corner of the screen.

Besides, in standby mode, you can also find a Phone Book record by entering its location and then press  key.


For example, in standby mode, if you want to read the details stored in Phone Book record number 2, press  and  key. The details will appear on the screen.




Acer C200 Mobile Phone

Add a record


You can add a new record to your Phone Book here. Follow the steps below:

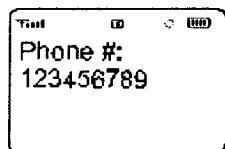

Step 1: Press key and you will be prompted to enter the phone number. Enter the phone number and press key to continue.

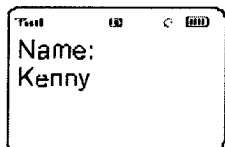


Step 2: Enter the name of that number (maximum 12 characters) and press key. There will be several options for you to label that number: "Home", "Office", "Mobile", "Pager", "Fax" and "No Label". Highlight an appropriate item by pressing or on the navigation key and press key to confirm. (If the name you entered already exists, you will be asked if you want to add a new number to the existing record).

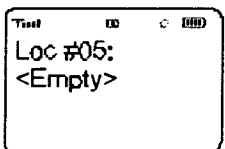

Step 3: The screen will then prompt you to enter a location for that record in the Phone Book. You can press key to use the pre-assigned location directly or enter a new location, then press key.

Step 4: When finished, the options below will appear on the screen. You can press or on the navigation key to select and press key to confirm, or press key any time to abort.

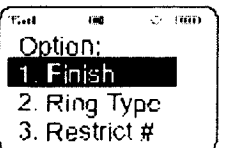

Finish: save the record to Phone Book and return to standby mode.

Ring Type: you can assign a ring type when your phone receives a call from the number in that record.

Restrict #: restrict this telephone number.

Voice Tag: create a voice Tag for this record (see "Record voice tags" on page 57).

There are other alternatives to add a record to Phone Book

Option 1: In standby mode, Press on the navigation key to enter Phone Book, then select "Add Record". Follow the instructions in the "Add Record" section above.



Acer C200 Mobile Phone

Text
Option:
1. Dial
2. Save
3. Find

Text
Log #02
Kenny
1 1-234-567-890
6:00p May 18

Text
Loc #02
Kenny
1 1-234-567-890
►Option

Text
Option:
1 1-234-567-890
2 Add #

Text
Phone Type:
1. Home
2. Office
3. Mobile

Option 2: In standby mode, enter the phone number, then press ► on the navigation key and choose "Save". Follow Step 2 - 4 in the "Add Record" section above.

Option 3: In standby mode, press ▲ on the navigation key to enter "Outgoing Log", "Incoming Log" or "Missed Log" menu. In either of these menus, press ⌂ key to browse the call logs. You can scroll the call logs by pressing ▲ or ▼ on the navigation key. When you find the call log you want to add to the Phone Book, press ► on the navigation key. Follow Step 2 - 4 in the "Add Record" section above.

To add a new phone number to an existing Phone Book record

Step 1: Find the record you want to add the number to (See page 34).


Step 2: Press ► on the navigation key and select "Add #" in the option list that appears.

Step 3: You will be prompted to enter the telephone number. Enter the number and press ⌂ key.

Step 4: There will be several options for you to label that number "Home", "Office", "Mobile", "Pager", "Fax" and "No Label". Highlight an appropriate item by pressing ▲ or ▼ on the navigation key and press ⌂ key to confirm.






Erase phone book record

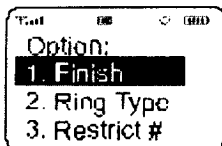

When you want to erase a Phone Book record, you can choose to do it in one of the following ways:



Erase a phone number in a Phone Book record

- Refer to "Find By Name" and "Find by location" on page 52 to find the record.
- When the record appears on the screen, press ► on the navigation key to display the phone number(s). Press ▲ or ▼ on the navigation key to scroll through the numbers and highlight the number you want to erase.
- Press ► on the navigation key. Use ▲ or ▼ on the navigation key to highlight "Erase #" and then press  key. The phone number will be erased.

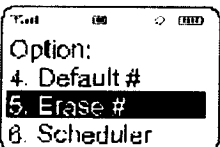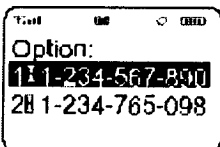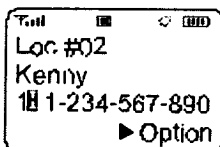

Erase a record in Phone Book





- Refer to "Find By Name" and "Find by location" on page 52 to find the record.
- When the record is displayed on the screen, press ► on the navigation key to display the options. Press ▲ or ▼ on the navigation key to highlight "Erase Rec".
- Press  key and the record will be erased.

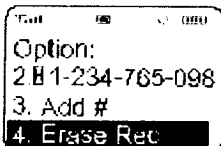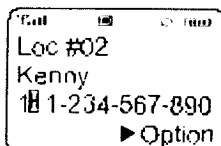



Acer C200 Mobile Phone

Edit phone book record

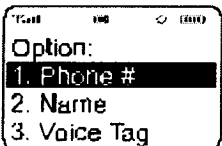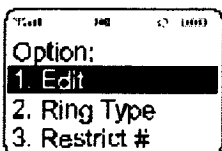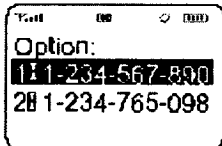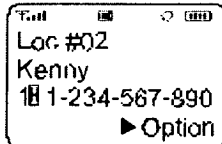




- Refer to "Find By Name" and "Find by location" on page 52 to find the record.
- When the record appears on the screen, press ► on the navigation key to display the phone number(s). Press ▲ or ▼ on the navigation key to scroll the numbers and highlight the number you want to edit.
- Press ▼ on the navigation key. Use ▲ or ▼ on the navigation key to highlight "Edit" and then press  key. The following options will appear on the screen. You can use ▲ or ▼ on the navigation key to highlight the item you want and press  key to enter.

Phone #: edit the phone number in the record. When you finish editing the number, press  key. Choose "Home", "Office", "Mobile", "Pager", "Fax" and "No Label" from the Phone Type list and press  key to save.

Name: press  key to start editing the name in the record. When you finished, press  key to save.

Voice Tag: add this record to Voice Dial list (see "Record voice tags" on page 57).

Restrict phone number

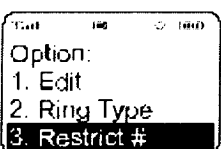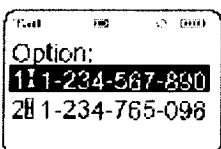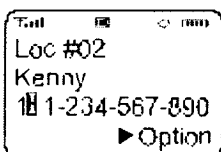


You can restrict a phone number if you wish to keep it private or restricted. Once a phone number is restricted, you have to enter the phone lock code before you dial.

- Refer to "Find By Name" and "Find by location" on page 52 to find the record.
- When the record is displayed on the screen, press ► on the navigation key to display the phone number(s). Press ▲ or ▼ on the navigation key to scroll through the numbers and highlight the number you want to restrict.
- Press ► on the navigation key. Use ▲ or ▼ on the navigation key to highlight "Restrict #" and then press  key.




Acer C200 Mobile Phone

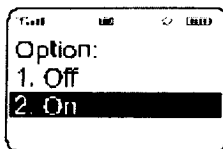


- An option menu will appear on the screen. Use ▲ or ▼ on the navigation key to highlight "On" and press  key. If you want to deactivate the Call Restrict function, select "Off".


Set default phone number

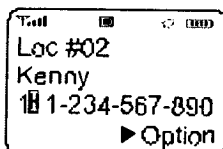

If you set a number as the default number, the Phone Book record will display that number when it is found and when you use one-touch dialing, this default number will be dialed.

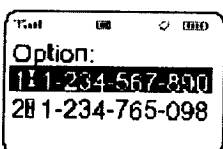

- Refer to "Find By Name" and "Find by location" on page 52 to find the record.

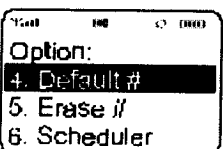


- When the record appears on the screen, press ► on the navigation key to display the phone number(s). Press ▲ or ▼ on the navigation key to scroll the numbers and highlight the number you want.

- Press ► on the navigation key. Use ▲ or ▼ on the navigation key to highlight "Default #" and then press  key.


Record voice tags

Your phone allows you to dial a number by speaking the name of the number to the microphone. Before you can use this "Voice Dialing" function, your phone needs to be trained so it can recognize your voice. The first thing you need to do is to add a voice tag to each number in the Phone Book.

To add a voice tag:

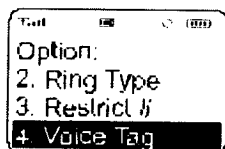

When you add a new record to Phone Book or edit an existing Phone Book record (see "Add a record" on page 53), choose "Voice Tag" from the options list.

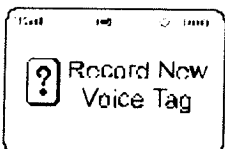


Press  key and "Record New Voice Tag" will appear on the screen. Press  key to continue.



Acer C200 Mobile Phone



The screen will prompt you to say the name of the phone book record. Say it to the microphone. "Recording..." will appear on the screen.

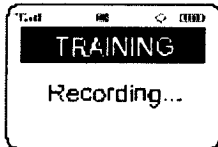

If your voice is recognized successfully, the screen will prompt you to say the name again. Say it again to the microphone.



When the phone is "trained" successfully, "Voice Tag Trained Successfully" will appear on the screen.

Erase voice tags


You can choose to erase voice tags in the following ways:

Erase all voice tags: choose "Erase all voice tags" from the Voice Service Menu (see "Erase voice tags" on page 58).

Erase a voice tag:

- Refer to "Find By Name" and "Find By Location" on page 34 to find the record.
- When the record is displayed on the screen, press ► on the navigation key, then press ▲ or ▼ on the navigation key to select "Erase Tag".
- Press  key to erase the voice tag.

Use voice dialing

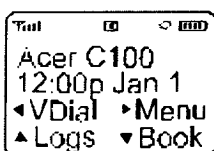

If the voice tags are set up properly, you can start to use the voice dialing function.

To use voice dialing:

- In standby mode, press ◀ on the navigation key, then say a name (voice tag) to the microphone.



Acer C200 Mobile Phone

Test 100% 100% 100%
RECOGNIZING
Please Be
Ready To
Speak Name

Test 100% 100% 100%
Calling...
Kenny

Test 100% 100% 100%
VR-RECOGNIZING
Did You Say
Kenny
1234567

- If the name is recognized successfully, the number will be dialed automatically.
- If your voice can not be recognized clearly, the screen will list several possible candidates. If the first matched number is correct, say "Yes" (the control word) to the microphone, and it will be dialed automatically. If the first matched number is not correct, say "No" and the phone will jump to the second matched number. Repeat until you find the correct number.
- When a number is being dialed, you can say "No" to cancel dialing that number.




Acer C200 Mobile Phone

<Memo>




Voice Service Menu

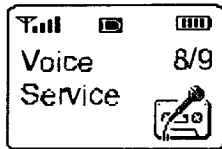

The Voice Memo function allows you to use your phone as a handy recorder to record and play voice memos.


You can press  key to enter its submenu that includes the options listed below. You can use  or  on the navigation key to highlight an item and press  key to enter.

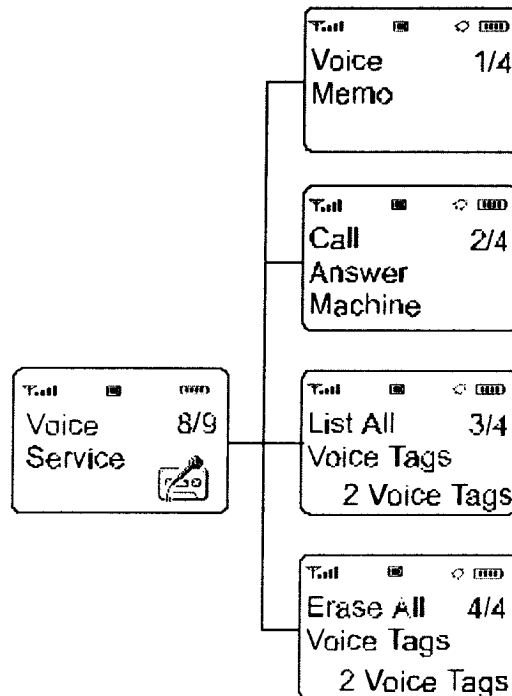



Acer C200 Mobile Phone


Voice Memo

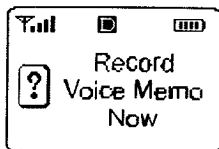

You can record, play and erase voice memos here.

If the voice memo memory is empty, the screen will prompt you to record a new voice memo.

If you have voice memo stored in the memory, three options will be displayed on the screen:

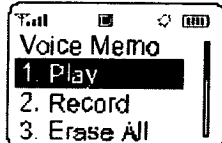


Play: you can use ▲ or ▼ on the navigation key to select a voice memo to play, then press ⏮ key to start. To replay the memo, press ⏮ key again. You can press ▶ on the navigation key to delete the voice memo.



Record: follow the instructions below to record a voice memo.

- After you select "Record" in the menu, you will hear a prompt tone. Begin recording the voice memo by speaking to the microphone after the prompt tone.
- To stop recording, press any key on the keypad.
- When finished, the following menu will be displayed on the screen:

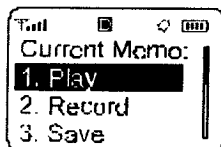

Play: play the voice memo that you have just recorded.

Record: re-record the voice memo.

Save: save the voice memo to memory.

- If you choose "Save", you can use the default memo label by pressing ⏮ key, or press ① key to key in a label for the memo (maximum 28 characters). Finally, press ⏮ key to save.



The total voice memo length capacity is about 4 minutes long.

Erase All: press ⏮ key to erase all voice memo.




Call answer machine

Your phone can be used as an answer machine when you can not answer a call. The call will be answered automatically after a greeting message is played. The caller can then leave a message in your phone and you can listen to the message later.

Before you can use the function, you need to:
Configure the call answer machine setting
Record greeting message

Please follow the instructions below:

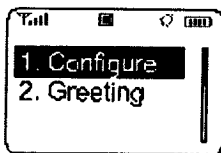


- Press  key and select "Configure" in the menu that appears.
- Use  or  on the navigation key to scroll the following options:

Answer Machine: press  key and select "On".

Personal Greeting: you can choose to play personal greeting or not after a call is answered. If you choose "On" and no personal greeting is recorded, you will be prompted to record your personal greeting. Speak to the microphone after the prompt tone. When finished, press any key on the key pad.

Call Screen: if you choose "On", you can hear the content of the message while the answer machine is working to screen messages.

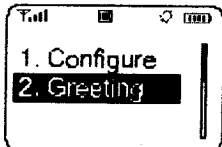

You can also select "Greeting" in the menu to re-record or play your personal greeting.



While answer machine is working, you can press  key to answer that call.

Call answer machine messages are saved as voice memos. You can enter the voice memo function (see "Voice Memo" on page 62) to listen to these voice memos.



Acer C200 Mobile Phone

List all voice tags


All voice tags are listed here. Voice tags are used when you use voice dialing function. For how to set up a voice tag, please see "Record voice tags" on page 57.

Erase all voice tags

You can erase all voice tags here. Press  key twice and all voice tags will be erased.




Security Menu

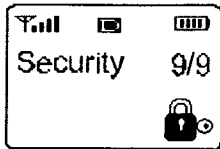

The options in the Security Menu can help you to keep from unauthorized access to your phone.

You have to enter the security code to enter the sub-menu. The default security code is 0000.

After you enter the security code, press  key to access the submenu that includes the options listed below. You can use  or  on the navigation key to highlight an item and press  key to enter.

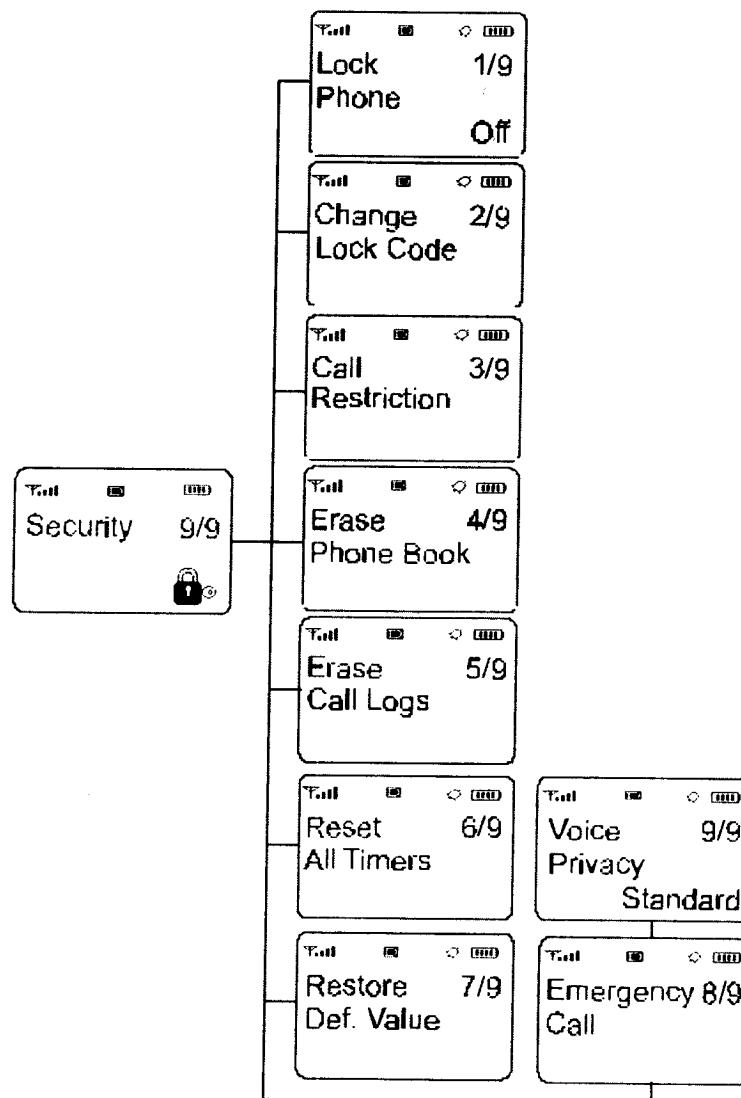




Lock phone

This function allows you to lock the phone. If the phone is locked, you can only make emergency calls (see "Emergency calls" on page 68).

Press  key and then ▲ or ▼ on the navigation key to highlight one of the following options. To select, press  key.

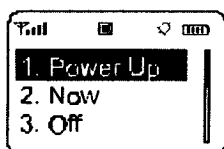

Power Up: the next time you power on your phone, it will be locked automatically. To unlock the phone, you need to enter the unlock code.

Now: the phone will be locked up immediately.

Off: cancel all lock modes.

Change lock code

You can change the security code here.


Press  key and you will be prompted to enter the new lock code (4 digits). Enter the new lock code and press  key. Enter the new code again and press  key to confirm.

Call restriction

This function allows you to restrict incoming and outgoing calls.

Incoming Calls

Press  key to enter and then ▲ or ▼ on the navigation key to highlight "On" to activate the function or "Off" to deactivate the function, then press  key to confirm.

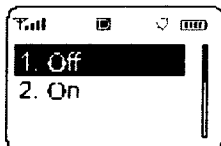

Outgoing Calls

Press  key to enter and then ▲ or ▼ on the navigation key to highlight "On" to activate the function or "Off" to deactivate the function, then press  key to confirm.



Acer C200 Mobile Phone

Erase phone book


If all the records in Phone Book are no longer needed, you can erase them here.

Press key and "Erase All Phone Book?" will appear on the screen. To proceed with erasing, press key again. If you want to abort, press key.

Erase logs

You can use this function to erase the call logs stored under the Call Log menu (see "Call logs" on page 21).

After you press key, you can press or on the navigation key to highlight one of the following items:

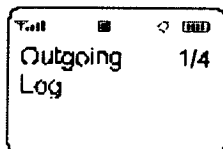

Incoming Log: erase all logs in the Incoming Log menu.

Outgoing Log: erase all logs in the Outgoing Log menu.

Missed Log: erase all logs in the Missed Log menu.

All Logs: erase all logs in the Call Logs menu.

Reset all timers

You can use this feature to reset all timers. The timers include "Total Timer", "Home Timer", "Roam Timer", "Last Timer" and "Limit Alert Timer".

Press key to erase.


Restore default value

You can use this function to reset all phone settings to the manufacturing default. The settings include: Banner, Alert Option, Backlight, Answer Mode, Retry Mode, Touch Dial, Call Restrict, Ring Volume, Ring Type, Key Beep Volume, Key Beep Type and Lock Code.

Press to reset.



Emergency calls

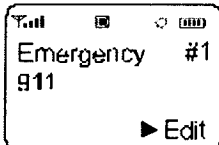

You can store three emergency numbers in the emergency number list. When the phone is locked, only numbers that match the numbers in the emergency number list can be dialed.

To add an emergency number:

- Press  key and the screen shows the emergency number stored in the memory. If the memory is empty, "Empty" will be displayed.
- Press  or  on the navigation key to scroll the location of the emergency number (1, 2 or 3), then press  on the navigation key to start entering the number.
- When completed, press  key.
- To add more emergency numbers, repeat the steps above.

Voice privacy

The Voice Privacy function can enhance the privacy of your phone conversation by encoding and encrypting the voice signal from your phone during transmission.

Press  key and then press  or  on the navigation key to select from the following options:

Standard: cancel the Voice Privacy function.

Enhanced: enable the Voice Privacy function.

Chapter 4 : Care and Maintenance



Acer C200 Mobile Phone

Your phone is a delicate electronic device and shall be used and handled carefully in compliance with the instructions below. Failure to observe these instructions may cause your product warranty to void.

- Do not use your phone in dusty and humid areas. Your phone is extremely vulnerable to liquid and sand grains can scratch the surface of your phone.
- Do not store your phone in extremely hot or cold areas. Heat can cause damage to both the outer case and components inside the phone. In an extremely cold area, moisture can form inside the phone after you turn on your phone and it can damage the components inside.
- Do not drop, shake or knock your phone. This will cause damage to the components and circuits of the phone.
- Do not use strong detergents, thinners or other corrosive liquid to clean your phone. Instead, use a clean, lint-free and slightly dampened cloth. When you do so, keep water from getting inside the phone.
- Keep your phone, batteries and accessories away from reach of small children.
- Use only supplied or approved replacement antenna and other accessories. Unapproved antenna and accessories can cause damage to your phone and your health.
- Follow the safety instructions as set forth at the beginning of this manual.

Chapter 5 : Accessories




Acer C200 Mobile Phone


In addition to the battery and battery charger already in the package, you can choose to purchase the following optional accessories for your phone.

Batteries

There are several kinds of optional batteries available for your phone. Batteries with larger capacity can lengthen the talk and standby time.

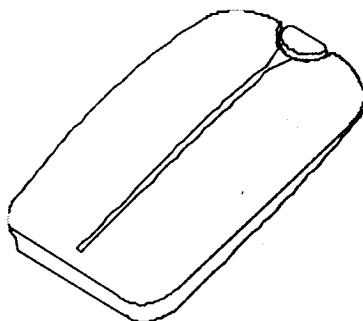


600mAh Li-ion battery

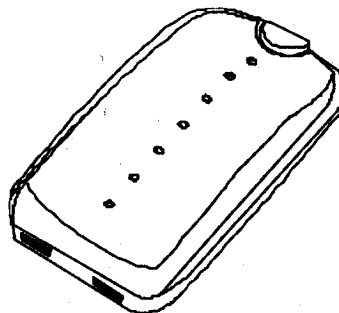


900mAh Li-ion battery

Battery charger


The optional battery chargers allow you to charge your phone batteries more conveniently.

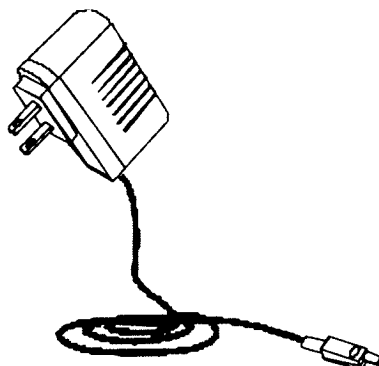

Fast travel charger

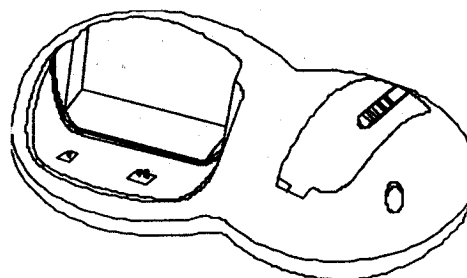

Desktop charger

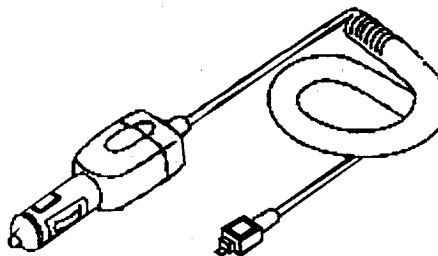

Cigarette lighter charger



Acer C200 Mobile Phone

<Memo>

Chapter 6 : Troubleshooting



Acer C200 Mobile Phone

When you encounter problems while using your mobile phone, please refer to the following table to solve the problem. If problem persists, please contact your dealer immediately for service.

Problems	Possible cause	How to solve the problem
Poor signal reception	You are using your mobile phone in a location (e.g. in the basement or building) where signal is weak.	Move to a location where signal can be received properly.
	You are using your mobile phone in a call-crammed time (e.g. the rush hour).	Avoid using your mobile phone in such time.
	You are too far from the base station of your network service provider.	You can ask your network service provider for a service range map.
Echo or noise	Due to the quality of the network trunk of your network service provider. Poor local telephone line quality.	Hang up the phone and then dial again. You can be switched to a better-quality network trunk or line.
The standby time becomes short	The standby time can depend on the system settings of your network service provider.	If you are in a location where the signal is weak, turn off your phone temporarily.
	The battery life is over.	Use a new battery.
	If the phone can not get connected to a network, it will continue searching for the signal from the base station, which consumes battery capacity.	Change your location or turn off your phone temporarily.
Unable to power on	The battery is used up.	Check the battery capacity.
Unable to send message	Your network service provider doesn't support such service.	Contact your network service provider.
Unable to make a call	You have enabled fixed dial function.	Cancel fixed dial function.



Acer C200 Mobile Phone

Unable to charge the battery	The battery or charger is out of order.	Contact your dealer.
	The phone temperature goes under 5°C or above 40°C.	Change the battery charging environment.
	Poor connection.	Check if all connectors are connected properly.
Unable to input data into the Phone Book	The Phone Book memory is full.	Delete some data from the Phone Book.
Unable to choose certain function	Your network service provider doesn't support such function.	Contact your network service provider.



Acer C200 Mobile Phone

 
<Memo>

Quick Access Card

Main Menu

In standby mode, press ► on the navigation key to access the Main Menu.

Use ▲ or ▼ on the navigation key to move between each menu.

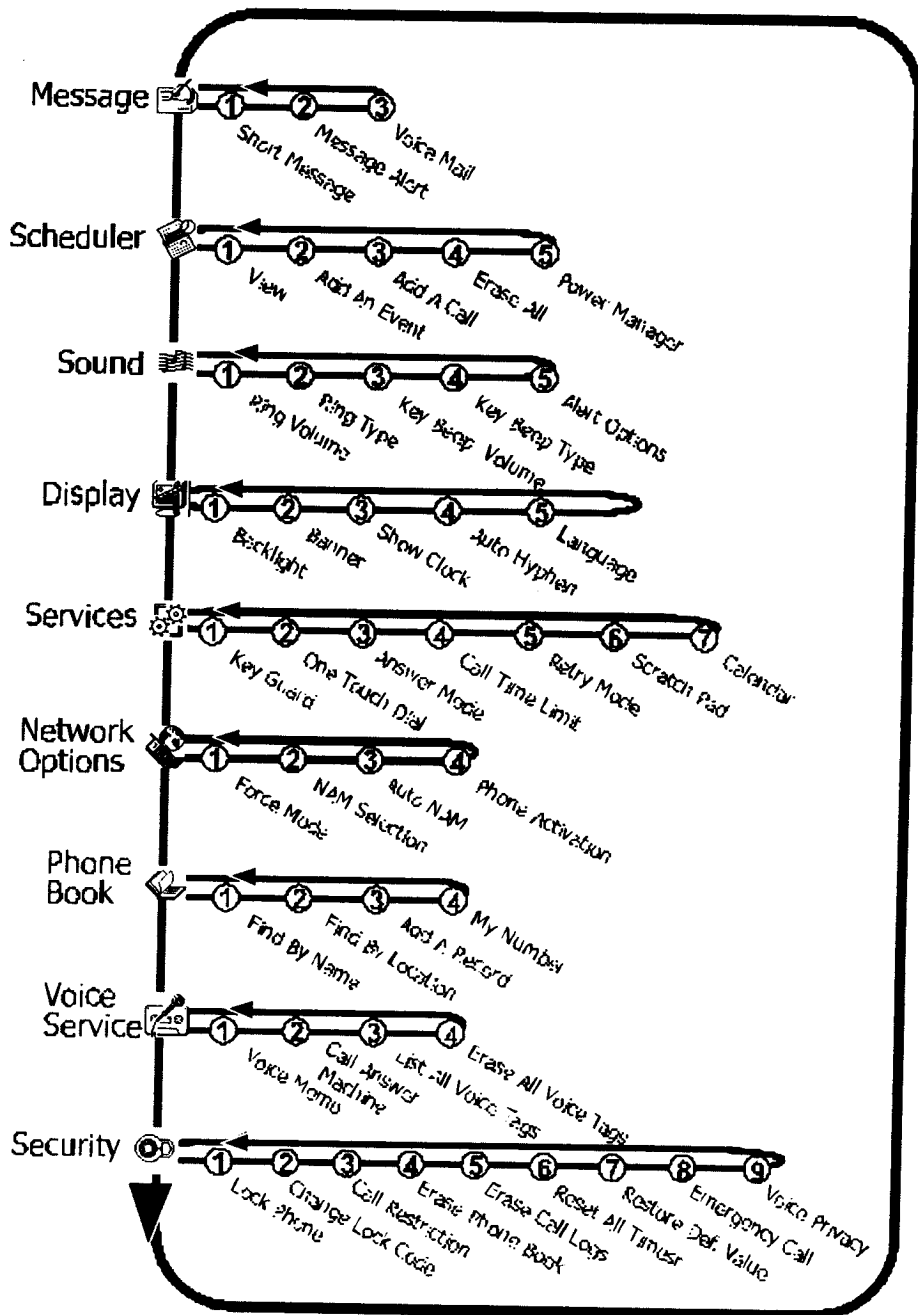

To...	Press these keys...
Make a call	
End a call	
Listen to voicemail	
Redial last number	
Adjust ring volume	
Adjust ring type	
Adjust ear piece volume	
Hold current call	
Make three way call	

