 


DETAILED FUNCTIONS


[FM Region]

- This function is used to select FM Region nation by nation.
- After pressing [MENU] button a long while, enter the FM radio mode, and then go to the "Region". Using [▲/▼] button up and down, set the FM radio.
- FM Radio - Korea, Japan, USA, China, Europe
- Press [MENU] button and select.
- Press [ESC] button shortly when canceling the selection.



[Preset Setting]

- This function is used to change FM mode to PRESET / MANUAL mode.
- After pressing [MENU] button a long while, enter the FM radio mode, and then go to "Preset Setting".
- Using [▲/▼] button up and down, set the preset.
- Press [MENU] button and select.
- Press [ESC] button shortly when canceling the selection.

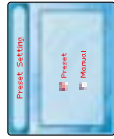


DETAILED FUNCTIONS

RECORD

[Source]

- This function is used to set the sound source such as MIC record(voice) or outside equipment sound (outside input recording).
- After pressing [MENU] button a long while, enter the recording mode, and then go to "Source". Using [▲/▼] button up and down, set the sound source.
- The sound source: (Voice, Outside sound).
- Press [MENU] button and select.
- Press [ESC] button shortly when canceling the selection.

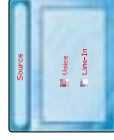


[AUTO-Sync]

- This function is used to set the auto recording mode of outside sound.
- After pressing [MENU] button a long while, enter the recording mode, and then go to "Auto-Sync". Using [▲/▼] button up and down, set the Auto-Sync.
- Press [MENU] button and select.
- Press [ESC] button shortly when canceling the selection.



[Bit Rate]

- This function is used to change the sound quality in recording mode.
- After pressing [MENU] button a long while, enter the recording mode, and then go to "Bit Rate". Using [▲/▼] button right and left, set the desired bit rate.
- It can be set between 32 ~ 128 Kbps.
- Press [MENU] button and select.
- Press [ESC] button shortly when canceling the selection.

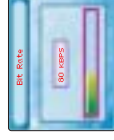


DETAILED FUNCTIONS

TEXT

[E-Book Color]


- This function is used to change the font color of text.
- After pressing [MENU] button a long while, enter the system mode, and then go to "E-Book Color".
- Using [▲/▼] button up and down, select various color.
- Press [MENU] button and select.
- Press [ESC] button shortly when canceling the selection.

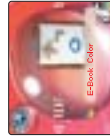

SYSTEM SETTING

[Scroll Speed]

- This function is used to adjust the scroll speed of text.
- After pressing [MENU] button a long while, enter the system mode, and then go to "Scroll Speed".
- Using [▲/▼] button up and down, set the scroll speed.
- Low: To lower the scroll speed
- Middle: To adjust the scroll speed at medium
- High: To lighten the scroll speed
- Press [MENU] button and select.
- Press [ESC] button shortly when canceling the selection.

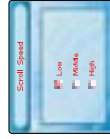

[Reset]

- This function is used to set all the menu values to initial values at factory shipment.
- After pressing [MENU] button a long while, enter the system mode, and then go to "Reset".
- Using [▲/▼] button up and down, set the reset function.
- Press [MENU] button and select.
- Press [ESC] button shortly when canceling the selection.



DETAILED FUNCTIONS

[Inform]

- This function is used to check the FM Version and memory capacity.
- After pressing [MENU] button a long while, enter the system mode, and then go to "Information".
- Press [ESC] button shortly when canceling the selection.



[Language]

- This function is used to change the language nation by nation.
- After pressing [MENU] button a long while, enter the system mode, and then go to "Language".
- Using [▲/▼] button up and down, select the language.
- English—Korean—French—German—Spanish—Portuguese—Italian—Dutch—Finnish—Norwegian—Traditional Chinese—Simplified Chinese—Japanese
- Press [MENU] button and select.
- Press [ESC] button shortly when canceling the selection.



[FONT Color]

- This function is used to change the font color.
- After pressing [MENU] button a long while, enter the system mode, and then go to "Font Color".
- Using [▲/▼] button up and down, select desired font color.
- Press [MENU] button and select.
- Press [ESC] button shortly when canceling the selection.



DETAILED FUNCTIONS


[Auto P(Power)-Off]

- This function is used to turn the power off automatically in case of no button operation at stop.
- After pressing [MENU] button a long while, enter the system mode, and then go to "Auto P(Power)-Off". Using [◀/▶] button right (OFF-5Mins) during playback.
- Press [MENU] button and select the selection.
- Press [ESC] button shortly when canceling the selection.



[Sleep]

- This function is used to set the power off time.
- After pressing [MENU] button a long while, enter the system mode, and then go to "Sleep". Using [◀/▶] button right and left, set the Sleep function (Off ~ 60 Mins).
- Press [MENU] button and select the selection.
- Press [ESC] button shortly when canceling the selection.

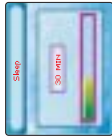

[Time Setting]


- The function is used to set the time of electronic watch.
- After pressing [MENU] button long while, enter the system mode, and then go to "Time setting". Using [◀/▶/▲/▼] button right/left and up/down, set the year/month.
- Press [MENU] button and select the selection.
- Press [ESC] button shortly when canceling the selection.



DETAILED FUNCTIONS

[Lighting Time]

- This function is used to display LCD screen as set up.
- After pressing [MENU] button a long while, enter the system mode, and then go to "Lighting Time". Using [◀/▶] button right and left, set the background lighting time.
- Press [MENU] button and select the selection.
- Press [ESC] button shortly when canceling the selection.

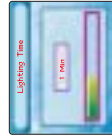

[Rotation]

- This function is used to rotate the screen right and left.
- After pressing [MENU] button a long while, enter the system mode, and then go to "Rotation". Using [▲/▼] button up and down, fit the screen to right or left handed person.
- Press [MENU] button and select the selection.
- Press [ESC] button shortly when canceling the selection.




[Opacity]

- This function is used to change the opacity of the screen according to the screen borderline according to transparency.
- After pressing [MENU] button a long while, enter the system mode, and then go to "Opacity". Using [◀/▶] button right and left, set the screen brightness.
- Press [MENU] button and select the selection.
- Press [ESC] button shortly when canceling the selection.



MENU TABLE

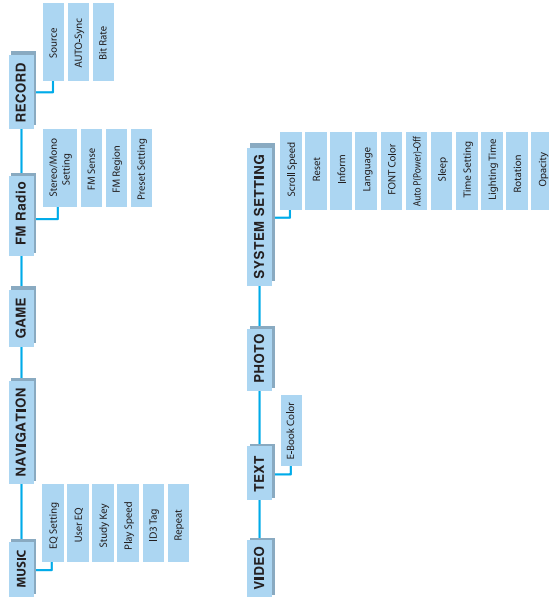

MINISD CARD LIST

No	Manufacturer	Size
1	SANDISK	64MB/128MB/256MB/512MB/1GB
2	TRANSCEND	128MB/256MB/512MB
3	GOLDFLASH	128MB/256MB/512MB/1GB
4	LG	64MB/128MB/256MB/512MB/1GB
5	TOSHIBA	64MB/256MB
6	SAMSUNG	128MB/256MB
7	IO DATA	128MB/256MB/512MB
8	PRETEC	128MB/256MB/512MB

※ In case of minisD card, some cards may not be compatible.
You must check out the manufacturers.
(The end Nov. 2005)



IS THE BODY ABNORMAL?

Please check out lower items if the operation is abnormal.

Status	Measures
The software does not operate.	<ul style="list-style-type: none"> ▶ Refer to the recommended PC requirements.
The product does not operate and there is no display on screen.	<ul style="list-style-type: none"> ▶ Check out battery is charged. ▶ Press the reset hole.
Can't listen the sound after press the play button at the music mode.	<ul style="list-style-type: none"> ▶ Check out the lock switch is locked. ▶ Check out the MP3/WMA files are saved on the memory.
Can't listen the sound after press the play button at the music mode.	<ul style="list-style-type: none"> ▶ Check out the driver is installed properly on the computer and the computer. ▶ Check out the USB connection between the body ▶ Check out the memory is full ▶ Press the reset hole.
Can't turn on the backlight.	<ul style="list-style-type: none"> ▶ Check out the lighting time of background. ▶ Check out battery is charged.
Can't operate after press the button on the body.	<ul style="list-style-type: none"> ▶ Check out battery is charged. ▶ Press the reset hole.
The product is turned off of it self.	<ul style="list-style-type: none"> ▶ The power is turned off at the stop state as set up.
The play display time is abnormal.	<ul style="list-style-type: none"> ▶ Check out if it is VBR(Variable Bit Rate)file.
The file name is abnormally displayed.	<ul style="list-style-type: none"> ▶ On the menu move [Settings] →([language) and change the language setup.



IS THE BODY ABNORMAL?

Please check out lower items if the operation is abnormal.

Status	Measures
Though there are files saved in the body, "The file does not exist" message is displayed on the screen	<ul style="list-style-type: none"> ▶ Check out the file can be played.
Can't connect to the PC.	<ul style="list-style-type: none"> ▶ WIRGSE: Install the drive and connect again. ▶ WINME 2000/XP: Press the background screen and executes the Windows Update. After selecting important updates and service pack items and update all. Reboot the PC and connect again.



SPECIFICATIONS

Item	Specification
Model Name	GMP-A667/GMP-A66/GMP-A66H/GMP-A66J
Memory Capacity	256MB/512MB/1GB/2GB
Battery Lifetime	MP3 Playback : 18 hours (our test conditional)
Supported File (MUSIC)	Support MP3, WMA, Ogg(O10), Audio/ASF
Encoding	WMA (32Kbps ~ 128Kbps)
Decoding	MP3 8Kbps ~ 320Kbps, VBR WMA 5Kbps ~ 192Kbps
S/N Ratio	85 dB Over
Earphone	18mW (16 Ohm)
USB Cable	PC Interface USB 1.1/2.0
LCD	Graphic(220 X 176) 262K TFT LCD
Supported Language	14 languages including Korean, English, Chinese(traditional & simplified characters), Japanese
FM Frequency Range	87.5 MHz ~ 108.0 MHz
Dimensions	95 X 46.5 X 14.5mm (W x H x D)
Weight	65g
Storage Media	Embedded flash memory/miniSD CARD
Condition of use	0°C ~ 40°C

※ Product specifications and appearance are subject to change for product improvement without a prior notice.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICES MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIREED OPERATION.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.