

 
产品配色与工艺说明图

Product Colour, Material & Finishing Specfications

Product Model 产品型号	QIC-501	Brand 品牌		Job No. 图档编码	3-608Q5010602B0001
Product Type 产品类	说明书	Description 描述	/	Revision 版本号	QH-SMS-24018 V1.0(QIC-501- CO04)
Dimension 尺寸	76*105mm	Original Designer 原设计师		Date 日期	2024.03.25
Scale 比例	1:1	Technology 工艺	128g哑粉纸 四色印刷	Verifing 审核	



GRINDER



Shenzhen Cospro Technology USA Inc

Thanks for choosing us!

Important Safety Information Inside, Read all Instructions before using.
Use only as directed. Save these instructions, This product is designed for household use only.

ELECTRICAL REQUIREMENTS

BEBLE IN CAL REQUIREMENTS

Models(Q-So)
Compatible charger.

Linguist ACLDO-240 voits 30/30 Hz
Cordises Grinder.

Voitage ICS 2006 of the plant deserted in the pout and the plant and the plant and the plant and the plant deserted in the plant deserted in the plant deserted in the plant deserted in the plant and way.

Lithium-ion Battery operated product DisPoSAL Always dispose the battery operated products according to the federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

Getting Started

BEFORE RIST LISE

Licharge the battery until the battery status indicator turns solid green.

2. clean all the parts and accessories.

3. Remove all the packaging materials if present.

TX/RX Frequency Range 110-148kHz(Only for EU&UK)

BATTERY STATUS

 


A single cordless grinder is fully charged within 2.5 hours. When charging, the grinder base indicator light breather, the grinder base legit action relight breather, the grinder base legit tay, or and all indicator lights of the grinder go off According to the recommended battley maintenance, the cordinate to the recommended battley maintenance, the cordinate grinder go. (2) and the condition of the cordinate grinder and grind of 40 minutes when tally charged, using the thinness level of withe people as the standard.


Note: The cordies grinder will automatically charge when placed back on the base, ensuring that the battery is charged when a battery stasts indicator light flushes.

There should be no metal objects on the base of the wireless charge, otherwise will affect charging efficiency or safety, It is best to store the cordiess grinder at room temperature. When the device is charging, the automatic locking program will be enabled to prevent

BATTERY CHARGING



HOW TO USE

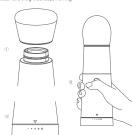

the product.

® Remove the pull groove in the middle of the base to clean the excess residue.





IMPORTANT SAFE GUIDE

When using electrical appliances, basic safety precautions should always be followed:

Do not put the appliance in water or any othel liquid, this may cause personal injury and/or flammable funes.

To protect against fire, do not operate the unit in the presence of hazardous materials and/or extreme temperatures.

Do not us the right offer or anything other than for its intended use.

For indoor use only, Do not expose this product to rain or other extreme conditions.

extreme conditions.

Alever force the grinder to tighten or twist it or attempt to speed up the mechanism.

Do not attempt to disassemble the product by yourself, otherwise warranty will be invalid.

When recharging the electric grinder, please keep your workspace free from potential hazards.

The product is designed for grinding pepper and salt only, please do not use for other purposes.

Jeep the grinder out of the reach of children.

(c) Simple measures that can be taken by the user to correct interference.

