

**Features:**

- Full Function Radio Control.
- 2.4GHz Frequency – allows up to 6 vehicles to run at the same time.
- Wheel Alignment – Adjust the wheel alignment located on bottom of vehicle between front wheels.
- Internal Lithium battery with USB charging cord.

**Features – Operated by the controller:**

1. Move Left joystick up to move the vehicle FORWARD.
2. Move Left joystick down to move the vehicle in REVERSE.
3. Move Right joystick left or right to move vehicle LEFT or RIGHT.

**Batteries/Recharging Unit (Included):**

Transmitter – 2 “AA” batteries.

Vehicle – Internal rechargeable Lithium Ion Battery with USB Charging Cord.

**Charge by USB:**

1. Locate the ON/OFF Switch on underside of vehicle and switch to the OFF position.
2. Open the USB Cord Compartment cover located on the underside of the vehicle. Use care when extending cord. Do not pull or tug on cord.
3. Plug USB cord into any computer or USB outlet brick (not included).
4. While charging, the Charging Status Light will be on. Once fully charged the light will turn off. (Approx. 2-3 hours When charging from a computer).
5. Return cord and replace compartment cover.

**The Transmitter:**

1. Open Battery Compartment cover located on back of transmitter.
2. Insert 2 “AA” batteries in the battery compartment. Be sure the (+) and (–) are properly matched.
3. Replace battery compartment cover.
4. The transmitter will automatically sync with the vehicle.

**The Vehicle:**

Locate the ON/OFF switch near USB Cord Compartment. Switch to the ON position. The vehicle is now ready for use.


**IMPORTANT!**

The internal Lithium Ion battery pack is only PARTIALLY CHARGED prior to shipment and it is recommended the battery be fully charged before first use.

**Caution:**

Chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this charger cable until the damage has been repaired.

**Notes:**

1. Operate the vehicle within 80-100 feet (25-30 meters) range.
2. Switch off the toy when not in use.
3. Remove “AA” batteries in transmitter when not in use for long periods.
4. If vehicle is not functioning properly, make sure batteries in transmitter are fresh, vehicle is fully charged.
5. Adult supervision recommended.
6. Please remove all packaging attachments before giving this toy to your child.
7. Do not insert the USB cable into electrical socket outlets.
8. Do not use the included USB cable for purpose other than recharging this vehicle.
9. USB Power Adapter is not included.
10. To protect the battery and prolong its life, do not overcharge the vehicle.
11. The toy is only to be connected to equipment of Class II bearing this symbol. 

The reception performance may be affected under a strong interference disturbance environment.

This product would not perform normally under a strong electrostatic environment.

We wish you many happy hours of pleasure with your New Bright toy.

**Note:**

When replacing Transmitter batteries:  
Use alkaline batteries only.  
Do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries.

