

The image shows the front cover of a user manual for the Maxwest Astro 4P. The cover has a dark grey background with a thin, light-colored border. At the top, there is a red circular logo with a white 'M' inside. To the right of the logo, the brand name 'maxwest' is written in a lowercase, sans-serif font. Below the brand name, the product name 'Astro 4P' is prominently displayed in a large, bold, white serif font. Underneath the product name, the words 'User Manual' are written in a smaller, white, sans-serif font. The overall design is clean and professional.

Overview



The diagram illustrates the front and back views of the Freescale MX6UL smartphone. The front view shows the screen with the Google search bar and various app icons. The back view shows the camera lens, flash, and the Freescale logo. Numbered callouts identify the following features:

 
 
- 1 Front Camera
- 2 Volume Keys
- 3 Power Key
- 4 Menu
- 5 Home
- 6 Back
- 7 Rear Camera
- 8 Flash

SIM Card Installation

A SIM card contains your phone number and other necessary data. To install the phone has a single SIM card slot that supports 4G (LTE) SIM card.

To Install the SIM Card

1. Make sure the device is turned off and the front facing down. Hold the firmly and use the notch at the bottom corner to loosen the cover. Use material with a hard, thin edge such as your fingernail or a credit card to carefully run along the seam to loosen. Then lift the cover until it detaches completely.



2. Remove the battery if it is in. Locate the SIM card slot and insert the proper SIM card into the proper slot. For more information on SIM card installation check out the included [SIM Card & Micro SD Card Installation Guide](#).
3. To turn on/off a SIM card go to Settings > SIM management. Then slide the SIM card slider. To turn on/off a SIM card* 's data connection, go to Settings > SIM management, click on the "Data connection" option, and select a SIM card which has 4G capability.

Keys/Touch Points

Power Key: to power on/off it, press and hold power key for a few seconds. When it is ON, press the power key once to activate or deactivate the screen.

Home key (○): Touch the key to return to the home screen. In idle screen, touch and hold the key to view recently opened apps.

Options key (□): In home screen, touch the key to set wallpaper, manage apps, and to access system settings. Touch it to view menu options.

Back key (◀): Touch to go back to the previous menu.

Charging battery

New batteries are shipped partially charged. Before using your device, install and charge the battery. Batteries perform best after several full charge / discharge cycles.

Charging your battery

Place charge the battery using the following methods:

1. Charge the phone by connecting it to a computer via the USB cable.
2. Connect the USB cable to the phone and the AC adapter. Plug the AC adapter into an electrical outlet to start charging.

As the battery charges, an icon will appear in the status bar of the home screen. When the battery is fully charged, a full battery icon appears on screen.



The diagram illustrates two methods of charging the device. In the first method, a smartphone is connected to a laptop via a USB cable, with a red arrow and the number '1' pointing to the connection. In the second method, the smartphone is connected to a USB cable, which is then plugged into an AC adapter (labeled with a red arrow and the number '2'). The AC adapter is then plugged into a standard wall outlet, also indicated by a red arrow.

Warning:

 
- Do not remove the battery while the device is charging.
- Use only the AC adapter & USB cable provided with your device.

Note: For safety, the battery will stop charging if in danger of overheating.

Audio Profile/Sleep Mode

Interactive keyboard

From the home screen, swipe up to open APP Drawer & select "Settings". Go to "Sound" and change the audio settings: by Changing Sound levels and change your ring tones.

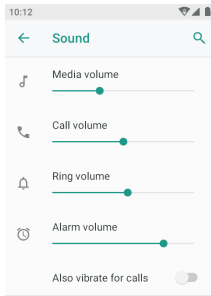

Sleep Mode

Turn on **sleep mode** to save your battery power.

1. On the home screen, touch "App Menu" & select "Settings".
2. Select "Display".
3. Select "Sleep" and choose a time interval from the list.

Screen Lock

1. On the home screen, touch the "APP Menu" & select "Settings".
2. Select "Security and location" then select "Screen lock".
3. Select the desired type of lock & follow the prompts to set up.

Phone Features

Description Icons

Icons	Descriptions	Icons	Descriptions
	Shows the phone's network signal strength.		Show the phone's battery capacity.
	Speaker has been activated.		You have unread SMS.
	Call on hold		USB storage turned on.
	The ringing tone is set on Vibration.		Flight Mode
	4G network in use.		3G network in use.
	You have missed calls.		A clock alarm is active.
	In call		Bluetooth ON

Main Menu & Its Functions

Select  to enter the main menu...

 
Allow you to view a list of features available in your phone.

- 1. Clock**
Allow you to set the Alarm from Clock.
- 2. Browser**
Browse the internet. Search engine- default set as Google.
- 3. Calculator**
Allow you to make tedious calculations quickly.
- 4. Calendar**
View the calendar & add events.
- 5. Camera**
Allow you to click pictures anytime you want. Your Asio4P has a 5.0 MP High Definition camera with LED flash supporting many special features like Face Detection which ensures you to take good quality pictures and stores them in the Gallery. In Camera, easily choose Camcorder to record Video.
- 6. Contact**
To see your list of Contacts. Access your digital phonebook through this function.
- 7. Email**
Allows you to set up your POP/IMAP email accounts.

Phone Features

- 8. Gallery**
Allows you to save & view photos & videos.
- 9. Google Play**
Log in to your Gmail account to view all the applications & download from thousands of applications available on Google Play -

Note:
To use this app please connect to an internet connection.
- 10. Messaging**
Allows you to send messages sent & received as a thread.
- 11. Music**
A list of songs available in your phone. View the artists, albums, playlists & more.

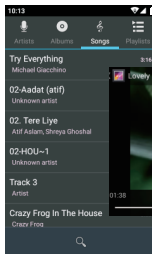

- 12. Phone**
Allows you to make phone calls.
- 13. File Manager**
Allows you to manage, view, modify and install your files.
- 14. SMS and MMS**
This service is provided by the operator. It provides phone plan information.
- 15. Sound Recorder**
Allows you to record sounds.
- 16. Videos**
View from list of videos.

 
Phone calls/Texting

To Make Phone Calls

1. Touch the phone icon.
2. Click on a contact from your contact list to make a call.

Composing text messages

Maxwest automatically corrects and suggests words as you type.

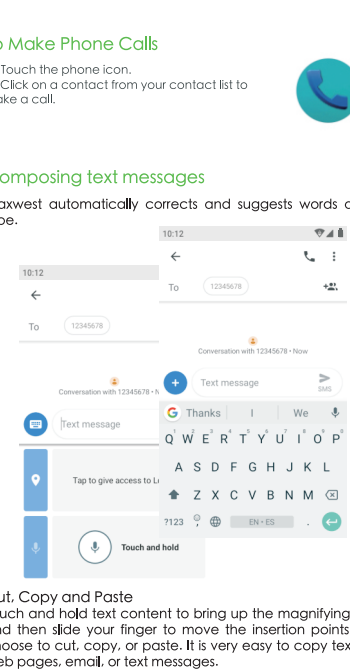

The image is a composite of two screenshots from an Android phone. The top screenshot shows a contact list with a contact named '12345678' selected. Below the contact list, there is a 'Call' button (phone icon) and a 'Text' button (envelope icon). The bottom screenshot shows a text composition screen. At the top, it says 'Conversation with 12345678 - Now'. Below this, there is a text input field with the text 'Text message'. To the right of the input field, there are icons for 'Voice' (microphone) and 'Video' (camera). Below the input field, there is a keyboard with a 'Touch and hold' button. At the bottom, there is a 'Send' button (arrow icon).

WLAN

Turn on WLAN

Mostest supports **WLAN Direct** which allows **Android™ 8.1 (Oreo™)** (Go edition) or later devices with the appropriate hardware to connect directly to each other via Wi-Fi without an internet access point. Using the API, you can discover and connect to other devices, if each device supports Wi-Fi Direct, then communicate over a speedy connection across distances much longer than a Bluetooth connection. This is useful for applications that share data among users, such as a multiplayer game or file sharing.

10:14

← **Wi-Fi preferences** 🔍

Turn on Wi-Fi automatically

Wi-Fi will turn on automatically when your phone is unlocked, like your home network.

Open network notification

Adding users a high quality public network is available

Install certificates

Network rating provider disabled

Wi-Fi Direct ⋮

10:16

← **Wi-Fi Direct** 🔍 ⓘ

Astro 4P

Peer devices

Android_7633 Available

- Enter "Settings" >> Click "NETWORKS & internet" >> Select "Wi-Fi" >> Select "Wi-Fi Direct" >> Select "Advanced" >> Then click "Wi-Fi direct" to access Wi-Fi direct feature.
- After click "Search" at the bottom and it will display the available devices.
- Click "Android_7633" (in this case specifically) and it will give you option connect.
- Click "Connect" to connect and it will pop up an interface to confirm like below.

1. Click "OK" and the devices will be connected

Camera
Capture images or record videos and share with family and friends!

2. Click "Switch to front/rear camera" and the camera will switch to the front camera

3. Click "Video Mode" and the camera will switch to video mode

Connecting to E-mails

Log into your e-mail accounts.

You may login to your e-mail accounts from the phone to access your e-mails.

From the Home screen, select Application "Gmail" and then Enter your email address, password and tap "Next".

Select which type of email account you are setting up and enter the proper settings. (POP3 / IMAP / Microsoft Exchange Account)

You will need to enter your user name, password, and server information depending on the type of email account or you can change the settings by tapping "Manual setup" at the top right corner screen. Tap "Next" and select "OK" to accept."

Compose new:

1. Press MENU and select "Compose".
2. Add recipients by typing a name or email address in the "To" field. Matching contacts will appear. Select or recipient or continue typing in the email address to send to multiple contacts.
3. Once finished typing the mail, select "Send". "Save as draft", or "Discard".

Tap on "Compose" contains "Reply", "Reply all" and "Forward" options.

Delete message:

1. Touch & hold the message you want to delete.
2. Select "Delete".

File Transfer

Connecting Smartphone to PC

Connect the USB cable to your smartphone and computer. Once connected successfully, on your phone, slide the top menu down and click on "Android System" , then, press "Transfer Files" button.

A new storage named **Atte4P** will appear on your PC file "My Computer" . Click-on it to view files in the smartphone and/or to transfer documents between devices. When finished, press **Disconnect device from PC** .

Note: Photos taken with the camera will be saved under the "DCIM" folder. Screenshots captured will be saved under "Pictures" folder. Put Musicfiles in the "Music" folder for the files to be played properly.

Screen Capture

Press Volume(-) and power button at the same time to capture" Screenshot" . All captured screenshot will be saved under gallery.



Warning

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. The limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- SAR Tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. In general, the closer you are to a wireless base station antenna, the lower the power output.
- Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC.
- For body worn operation, this model phone has been tested to meet the FCC RF exposure guidelines. This phone is not an accessory designated for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 1.0 cm from the body.
- Non-compliance with the above restrictions may result in violation of RF exposure guidelines.