

MEGAWHEELS®

**ELECTRIC SCOOTER A6
USER MANUAL**




Contact Information:


Website: www.megawheels.com
Official website service: support@megawheels.com
Amazon store service: m_scooter@hotmail.com
eBay store service: ebay-support@megawheels.com
Whatsapp: 008613760468813

Powered By LEQISMART 

Package Contents

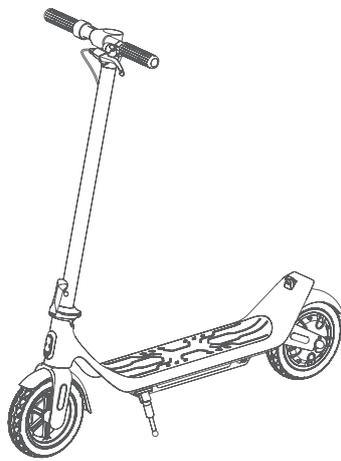

User Manual

 

Power Adapter




T-shape Allen Key



Screw

Function

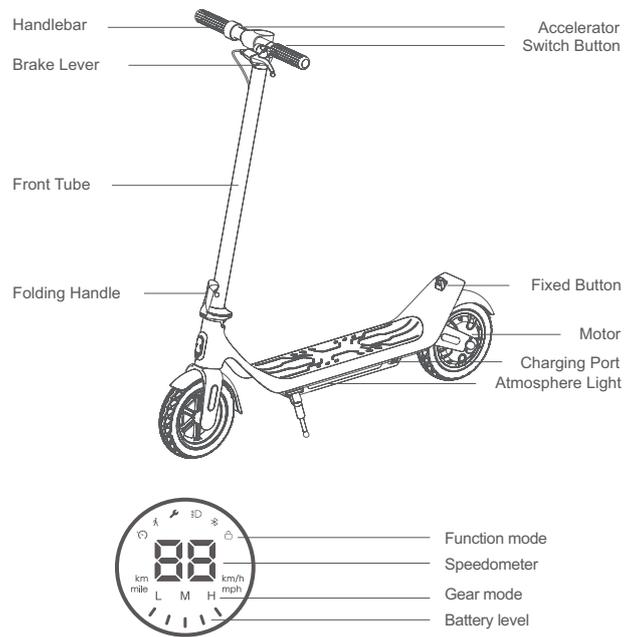


Function mode: Cruise mode, Pedestrian mode, Fault prompt, Light, Bluetooth, Lock.
Speedometer: Displays the current speed; displays the remaining mileage within 6 seconds after power-on.
Gear mode: The maximum speed limit is 6 km/h for L gears, 15 km/h for M gears and 25 km/h for H gears.
Battery level: Displays the remaining batterypower; it displays in red and flashing when the power is about 10%.
Switch button: Press it to turn on, press and hold for 3 seconds to shut down; in power-on state, press once to turn on/off the light, and press twice consecutively to switch gears; in power-off state.

Parameters

Model	A6
Net weight	Approx 14 KG
Expanded size	115.6×44×116 CM
Applicable age	Age 10+
Applicable height	130~200 CM
Maximum load	100 KG (254 LB)
Maximum speed	25 KM/H (15.5MPH)
Mileage	Max 25 Kilometers (15.5Miles)
Gradeability	About 15%
Protection grade	IP65
Charging time	About 4H
Battery capacity	5200mAh
Voltage	36V
Motor	250W
BMS management	Over-charge, Over-temperature, Over-discharge, Over-current, Short circuit, Over-voltage
Brake system	Durm brake + Electronic brake
Connection method	Bluetooth
Tire size	9 inch puncture-proof tubeless tyres



Assembly

1. Pull the folding handle upwards until there is a click sound, and pull the folding handle to confirm whether it is locked.
2. Manually connect the fixing seat and the data cable in the front tube, and check whether it is turned on normally.
3. Insert the fixing seat into the front tube, and use a T-shape Allen Key to tighten the six screws.

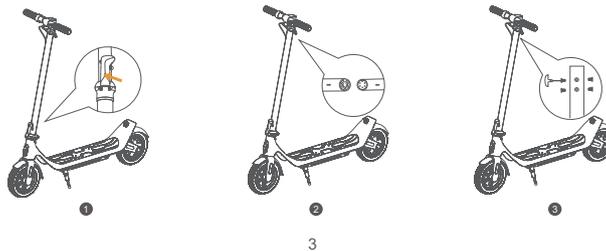

Charge Your Scooter

1. The indicator light of the charger turns green when connected the charger to the power supply.
2. Inserting the charging plug, and the indicator light will turn from green to red.
3. After charging, the indicator light turns from red to green.

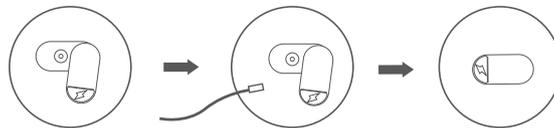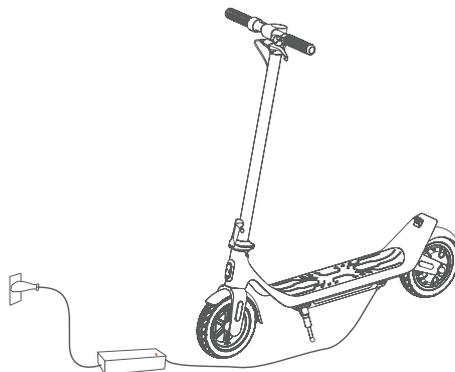

Open the rubber flap


Plug the power adapter
into the charging port

Fasten the rubber
flap after charging

i Attention:

1. Only use the original power adapter when charging.
2. Keep away from children and animals when charging, and keep away from flammable materials.
3. Do not charge or use the battery if it emits a peculiar smell, overheats or leaks.
4. Do not open the battery pack or insert anything into the charging port as the battery contains dangerous substances.
5. If it won't be used for a long time, please fully charge it first, store in a cool and dry place, and fully charge it every 30 days.


How to ride

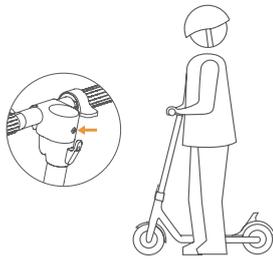

1. Press the switch button to turn on the scooter and check the battery level. If the battery level is too low, please charge it in time.



2. Stand with your right foot on the pedal and thrust against the ground with your left foot. When the speed of the scooter is ≥ 4 km/h, press the accelerator to start the motor, and keep speeding.

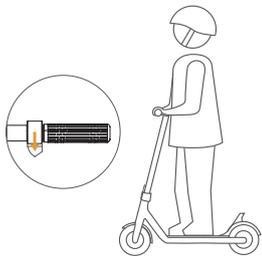


3. During the sliding, keep your balance, place the other foot on the pedal and lightly press the accelerator to move forward.



4. When steering or decelerating, release the accelerator and use the brake lever to brake.


Folding

Flip the fold switch up and turn on the fold wrench. Fold and lower the front tube, place the folding hook on the front tube into the hook holder.

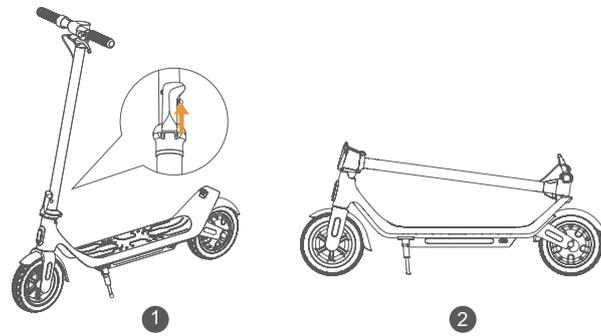

Unfolding

Press the red button in the folding hook to remove the folding hook from the hook fixing buckle, straighten the front tube, close the folding handle until there is a “click” sound; flip the folding handle and confirm whether it is locked.

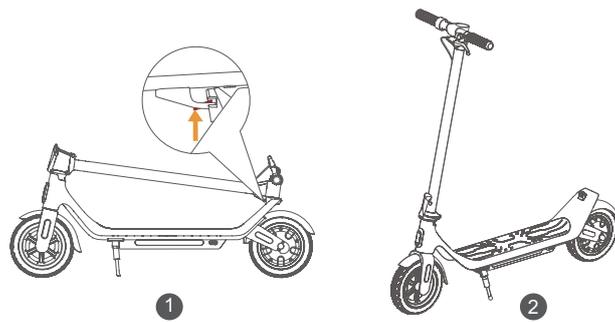

LEQISMART APP

Scan the QR code below with your mobile phone or search for "LEQISMART" in the APP market, download and install the APP.

-  If the APP has already been downloaded on your mobile phone, please upgrade the APP to the latest.



STEP 1

Press the button to turn on the scooter and turn on the Bluetooth function of the mobile phone.



STEP 2

Open the LEQISMART APP. For the first use, please register/log in to your account according to the APP guide.



STEP 3

Enter on APP homepage, select "Search for binding".The APP will scan the scooter to be configured with "Megawheels" and add the device according to the prompt in the APP interface.

Safety Precautions

1. Please carefully read the user manual, which will assist in explaining the basic working principles and provide tips on how to best enjoy your scooter experience.
2. Please wear all appropriate safety and protective gear as previously mentioned in the User Manual before operating the scooter.
3. Obligation to always wear shoes, make sure to wear comfortable clothes.
4. Do not use any accessories or additional items not approved by the manufacturer with the scooter. Do not try to open or modify your scooter, as doing so will void your manufacturer warranty, and may cause failure to your device leading to serious bodily injury or death.
5. **WARNING!** Keep plastic covering away from children to avoid suffocation.
6. Do not operate the scooter while under the influence of drugs and/or alcohol.
7. Do not operate the scooter when you are restless or sleepy.
8. Use your best judgment to keep yourself out of dangerous situations with your scooter.
9. The scooters have a range of about 25 km and a maximum speed of 25 km/h.
10. Do not turn sharply, especially at high speeds.
11. Do not abuse your scooter, doing so can damage your unit and cause failure to the operating system leading to injury.
12. Do not drive in or near puddles of water, mud, sand, stones, gravel, debris or near rough and rugged terrain.
13. The scooter can be used on paved roads that are flat and even. If you encounter uneven pavement, please lift your scooter over and past the obstruction.
14. Do not ride in inclement weather: snow, rain, hail, sleet, on icy roads or in extreme heat.
15. Do not ride in or near pools or other large bodies of water.
16. Traffic in the city has many obstacles to cross such as curbs or steps. It is recommended to avoid obstacle jumps. It is important to anticipate and adapt your trajectory and speed to those of a pedestrian before crossing these obstacles. It is also recommended to get out of the vehicle when these obstacles become dangerous due to their shape, height or slippage.
17. Do not attempt to ride over bumps or objects greater than 1.5 cm even when prepared and bending your knees.
18. **PAY ATTENTION** - look at where you are riding and be watchful/attentative of the road conditions, people, places, property and objects around you.

19. Do not operate the scooter in crowded areas.
20. Operate your scooter with extreme caution when indoors, especially around people, property, and narrow spaces like doorways and other narrow spaces.
21. Others recommendations such as: special precautions for use at dark; not to touch the brake disc.
22. Do not operate the scooter while talking, texting, or looking at your phone.
23. Do not ride your scooter where it is not permitted.
24. Do not ride your scooter near motor vehicles or on public roads.
25. Do not climb or travel down steep hills with your scooter.
26. The scooter is intended for use by a single individual, Do not attempt to operate the scooter with two or more people.
27. A statement that any load attached to the handlebar will affect the stability of the vehicle. Do not carry anything while riding the scooter.
28. Individuals with lack of balance should not attempt to operate the scooter.
29. Women who are pregnant or are preparing for pregnancy should not operate the scooter.
30. Young children and the elderly should not operate the scooter without proper instruction and supervision from a Certified scooter trainer.
31. At higher speeds, always take into consideration longer stopping distances.
32. Do not step forward off your scooter.
33. Do not attempt to jump on or off your scooter.
34. Do not attempt any stunts or tricks with your scooter.
35. Do not ride the scooter in dark or poorly lit areas.
36. Do not ride the scooter near or over potholes, cracks or uneven pavement.
37. Do not operate your scooter off-road.
38. Do not exceed the maximum weight limit of 100 kg.
39. Avoid driving the scooter in unsafe places, including near areas with flammable gas, steam, liquid, dust, fiber, which could cause fire and explosion accidents.
40. Scooter users are recommended to be 10+ and 130 to 200 cm tall.
41. In any case, anticipate your trajectory and your speed while respecting the code of the road, the code of the sidewalk and the most vulnerable.
42. Notify your presence when approaching a pedestrian or cyclist when you are not seen or heard.
43. Cross the protected passages while walking.
44. In all cases, take care of yourself and others.
45. Do not divert the use of the vehicle.

46. This vehicle is not intended for acrobatic use.
47. Caution, the brake may become hot in use. Do not touch after use.
48. Warning aiming to draw the user's attention to any damages related to intensive use and to recommend periodic inspections of the frame, fork and suspension attachments (if any).
49. Regularly check the tightening of the various bolted elements, in particular the wheel axles, the folding system, the steering system and the brake shaft.
50. Do not modify or transform the vehicle, including the steering tube and sleeve, stem, folding mechanism and rear brake.
51. For pneumatic tires, the recommended maximum tire pressure is 45-50 psi.
52. **WARNING !** As with any mechanical component, a vehicle is subject to high stresses and wear. The various materials and components may react differently to wear or fatigue. If the expected service life for a component has been exceeded, it may break suddenly, therefore risking causing injuries to the user. Cracks, scratches and discoloration in the areas subject to high stresses indicate that the component has exceeded its service life and should be replaced.
53. List regarding the maintenance that can be performed by the user himself; Instructions for routine inspection, maintenance, cleaning and/or cleaning.
54. Instructions covering all functions of the vehicle, specially driving power assistance start mode (e.g. pushing the vehicle by more than 4 km/h and activating the power assistance mode).
55. Do not place the scooter in a high temperature higher than 50 °C or a low temperature lower than -20 °C (for example, do not put the scooter in a car exposed to the sun in summer). Do not put the scooter into a fire, otherwise it may lead to battery failure, overheating, and even fire risk.
56. Environmental conditions (e.g. outdoor or indoor charging); requirement to power-off the vehicle during charging, or into a certain non-operational mode.
57. When not in use for more than 30 days, fully charge, store in a cool, dry place, and fully charge every 30 days.
58. The equipment contains a radio transmitting module with type approval code CMIIT ID:2020DP3421. Do not use wireless devices in places where the use of wireless devices is prohibited. Otherwise, it may interfere with other electronic devices or cause other risks.
59. Take the time to learn the basics of the practice to avoid any serious accident that can take place in the first months.
60. An instruction to keep the printed instructions for further reference and to be read carefully before use.

Cleaning and Storage

If there are stains on the surface of the scooter, use a soft cloth to dip in a small amount of water to wipe; If there are stains that are difficult to clean, smear them with toothpaste and brush them repeatedly, then clean them with a damp cloth. If the plastic parts of the body are scratched, use sandpaper or other abrasive materials to polish them.

ⓘ Attention:

Do not use alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents to clean, otherwise it will seriously damage the appearance and internal structure of the car body. It is forbidden to use pressure water gun to spray and wash. Ensure that the scooter is off and the charging port rubber cover is tightly fastened during cleaning, otherwise electric shock or serious failure may occur due to internal water inflow. When not in use, store in a dry and cool place indoors. Avoid outdoor storage for a long time. Long-term sun exposure, overheating and cold outdoor environment will accelerate the appearance and tire aging of the scooter, and reduce the service life of the scooter and battery pack.

Tire Inflation Maintenance

This product tire is a vacuum tire, when the tire height sinks 20%-30%, needs to inflate. The recommended tire pressure is 45-50 psi after inflation, and the tire should be inflated at least once every 2-3 months. Regular inflation and cleaning of tire surface debris can prolong the service life of the tire.

Battery Maintenance

- Do not use battery packs of other models or brands, or else there may be safety risks.

It is strictly forbidden to disassemble, squeeze, or puncture this product; it is forbidden to throw this product into water, fire (including heat sources such as stove, heater, etc.) or expose it to an environment with a temperature higher than 50°C.

- Water entering the battery may cause damage to the internal circuit, and there is a risk of fire or even explosion; if the

battery is suspected of water entering, please stop using it immediately and contact the after-sales service.

- Do not touch the battery contacts, disassemble or puncture the case. Avoid metal objects contacting the battery contacts, or else it may cause short circuits, damage to the battery or personal injury or death.
- Avoid recharging after the battery is completely depleted, and try to charge as soon as possible, so as to prolong the service life of the battery.
- Only use the original power adapter when charging, or else there is a danger of damage or fire.
- Please fully charge the battery before storing it after each use, which will help to extend the battery life.
- Do not place the scooter in an environment above 50°C or below -20°C (for example: in a car exposed to the sun in summer). It is forbidden to throw the scooter into a fire, or else it may cause the battery to fail, overheat, and even cause a fire.
- When used at normal temperature, the battery pack can exert a higher range and performance; if used in an environment below 0°C, the battery life and performance will decrease. For details, please refer to the remaining mileage display in the APP.
- If it won't be used for a long time, please fully charge it first, store in a cool and dry place, and fully charge it every 30 days, or else the battery may be damaged and such damage is not covered by the warranty.
- Improper disposal of used batteries may seriously pollute the environment. Please abide by local regulations when disposing of the battery pack. Do not throw away the battery pack in order to protect the natural environment.

Environmental Protection

This product contains battery or recyclable electronic waste, and the built-in rechargeable battery contains substances that may pollute the environment. When disposing of the product, please do not pile it with general household waste, but hand it to the electronic waste collection point designated by the state, which is beneficial to environmental protection.

Limited Warranty Statement

30 DAY SATISFACTION GUARANTEED RETURN POLICY

If you are unsatisfied with your purchase, MEGAWHEELS return policy allows you to return the product purchased on the Authorization channel within 30 days counting from the date of receipt of shipment, and request a refund from the Authorization channel for any reason. NOTE: Express shipping cost is non-refundable.

For the return request, MEGAWHEELS is not responsible for lost packages due to the carrier, or products received that cannot be verified. Received products that have damage determined to have been caused by the end-user may be subject to denial of the return request.

TO QUALIFY FOR A REFUND, ALL THE FOLLOWING CONDITIONS MUST BE MET:

1. A Return Merchandise Authorization (RMA) must be requested from MEGAWHEELS within 30 days from the date of receipt of shipment. To request an RMA, contact MEGAWHEELS Service:
m_scooter@hotmail.com
2. The cost of return shipping will be borne by the customer.
3. For warranty service, please keep your receipt and/or invoice to validate proof of purchase.
4. Returned product must be in good physical condition (not physically broken or damaged).
5. All accessories originally included with your purchase must be included with your return.
6. If you return a product to MEGAWHEELS (a) without an RMA from MEGAWHEELS(b) without all parts included in the original package, MEGAWHEELS retains the right to refuse delivery of such return.

HOW TO OBTAIN WARRANTY SERVICE

A Warranty Service Order must be requested from MEGAWHEELS within Warranty Period from the date of receipt of shipment. To request a Warranty Service Order, contact MEGAWHEELS:

m_scooter@hotmail.com

To obtain warranty service, you must deliver the product, in either its original packaging or packaging providing an equal degree of protection, to the address specified by MEGAWHEELS. In accordance with applicable law, MEGAWHEELS may require the customer to furnish proof of purchase details and/or comply with registration requirements before receiving warranty service. period or thirty (30) days, whichever is longer, or for any additional period of time that may be applicable in your jurisdiction.

Warranty Content

Type	Parts	Times
Main parts	Frame body, motor components, controllers, handles, meters, handle mounts, front tubes, brake discs, disc brake components, front fork components	12 Months
Attachment	Battery body, charger, throttle dial, brake lever, folding hook, front wheel, Brake cable, connecting cable, foot support group	6 Months
Wearing parts	Cover, front and rear lights, front and rear fenders, silicone pad, atmosphere lamp, rubber plug, instrument cover, reflective strip, frame bottom cover, charging seat, hook fixing seat	3 Months

Question & Answer

1. What if the E-Scooter arrived missing accessory or broken part?

A: Please take a photo and send it to MEGAWHEELS Support Team by sending an email: m_scooter@hotmail.com
And MEGAWHEELS Support Team will reply to you soon and send the correct accessory or part replacement.

2. Is that possible to replace some components for example the tire?

A: Yes, please take a photo and send it to MEGAWHEELS Support Team by sending an email: m_scooter@hotmail.com
And MEGAWHEELS Support Team will reply to you soon.

3. Is there an Android/iOS APP? If so, what does it do?

A: Yes, the APP is LEQISMART APP. The APP can be installed by scanning the QR code in the manual or searching "LEQISMART" in the Google Play. Simply pair Megawheels scooter via Bluetooth and use the app to view current speed, remaining miles, and other real-time riding statistics.

Contact US

Contact us if you experience issues relating to riding, maintenance and safety, or errors/faults with your electric scooters.

E-mail Service: m_scooter@hotmail.com



[@Megawheels.com](#)



[Megawheels](#)



www.megawheels.com

Contact Information:

Website: www.megawheels.com

Official website service: support@megawheels.com

Amazon store service: m_scooter@hotmail.com

eBay store service: ebay-support@megawheels.com

Whatsapp: 008613760468813

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **Shenzhen LEQI Intelligent Technology Co., Ltd.** may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.