

## Keyfinder Transmitter

### INTRODUCTION

The Portable Electronic Key Finder is a device that makes finding keys simple.

The everyday hassle of finding lost keys is eliminated with the touch of a button. You can count on an alarm to direct you to your keys. Whether your keys are lying close by or up to 45 feet away, the Portable Electronic Key Finder's wireless transmitter will locate your keys while being carried in-hand with ease. This package includes a remote transmitter, two key ring fobs, and a tabletop cradle for storage.

Requires 2 AAA batteries (not included).

1. Grasp the back cover of the transmitter and firmly slide it down to access the battery compartment inside.
2. Insert 2 "AAA" 1.5V batteries into the transmitter, aligning the polarity (+/-) of the batteries to match the labels provided inside the battery compartment.
3. Reattach the back cover of the transmitter. Start by positioning the cover on the device with the top edge aligned at the level of the top-most screws, and then firmly push the entire cover up.

## SAFETY WARNINGS- PLEASE READ CAREFULLY

- This is not a children's product.
- Small parts, especially the button cell batteries, pose a choking hazard to young children.
- If the product appears cracked or broken in any manner, discontinue use and discard immediately.

## BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire - they may leak or explode.
- Only use manufacturer specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.