 




# Bluescape™

## Mini Waterproof Pool Speaker

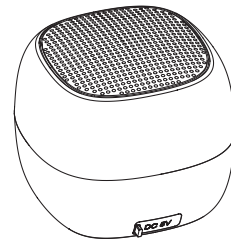

 
100129878

### Read Before Use

**NOTE:** This speaker is recommended for poolside use and is not meant to float or be submerged in water for long periods of time. However, it can withstand some interactions with water.

IPX7 = Immersible in up to 3 feet of water for 30 minutes.

### Overview

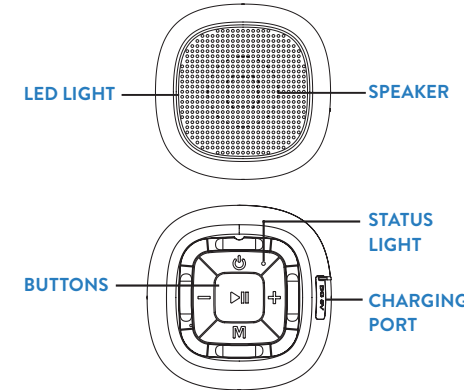

### Buttons

- Power Button**
  - Press and hold to turn the speaker on/off
  - Press to cycle between LED light effects
- + Volume Up/Next Button**
  - Press to turn up the volume
  - Press and hold to go to next song/FM channel
- Pause/Play Button**
  - Press to pause/play the current track
  - Press and hold to search for FM channel
- Volume Down/Previous Button**
  - Press to turn down the volume
  - Press and hold to go to previous song/FM channel

### Buttons

- M Mode Button**
  - Press to switch between Bluetooth® and FM Radio modes
  - Press and hold to access/connect TWS; press and hold again to exit/disconnect TWS

 
### Charging Your Device

Plug the included USB-C® cable into the speaker's charging port, and connect the other end of the cable to a power adapter (sold separately). Allow approximately 3 hours to fully charge the battery.

Note: We recommend using a USB wall adapter with a 5V output.

### Initial Setup

- Once your device is fully charged, press and hold the Power button until you hear a prompt indicating the device has entered Bluetooth® pairing mode.
- On your smartphone or tablet, search for the Bluetooth® device named **"BluescapeSpeaker"** and tap to connect.
- A prompt will play once pairing is successful.

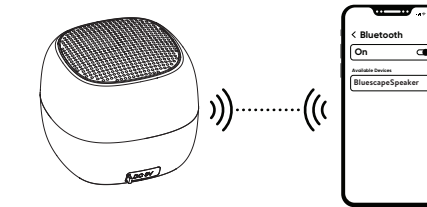

### TWS Mode

This device features TWS Mode technology, which allows you to play music on two of these pool speakers simultaneously, creating a surround sound experience.

- Press and hold the Power button on both speakers to turn them on and enter Bluetooth® Pairing Mode.
- On your smartphone or tablet, search for the Bluetooth® device named **"BluescapeSpeaker"** and tap to connect to one of the speakers.
- Press and hold the Mode button on the speaker that is connected to your smartphone or tablet.
- You will hear a sound prompt while the speakers are pairing. The status light will illuminate on both speakers once connected.



HAVING TROUBLE? WE CAN HELP  
**1-888-516-2630**  
7 DAYS/WEEK 7:00AM- 9:00PM CST

Manufactured by Walmart

LED Light Effects	Resetting Your Device	Specs	FCC Warning	FCC Warning	FCC Warning
<p>This device features 4 different LED light effects. Press the Power button once to cycle through all 4 LED light effects.</p>	<p>If your speaker is not operating properly, you may reset it. To do so, press and hold the Power button for approximately 8 seconds until the speaker powers off, and then power it on again as usual.</p>	<ul style="list-style-type: none"><li>• Speaker Horn Output Power: 3W RMS (12W Peak)</li><li>• Frequency Response: 160 Hz ~ 16000 Hz</li><li>• Battery: Built-in rechargeable</li><li>• Battery Life: Up to 10 Hours (Battery life measured as number of playtime hours with volume set at 50%.)</li><li>• IPX7 Waterproof (Protected from immersion in up to 3 feet of water for 30 minutes)</li><li>• Bluetooth® Mode</li><li>• TWS Mode (Can pair with another Bluescape Mini Waterproof Pool Speaker)</li><li>• FM Radio</li><li>• Range: 33 ft (10m)</li><li>• Input: USB-C®</li></ul>	<p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>⚠ CAUTION</b> Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy</p>	<p>and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"><li>• Reorient or relocate the receiving antenna.</li><li>• Increase the separation between the equipment and receiver.</li><li>• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li><li>• Consult the dealer or an experienced radio/TV technician for help.</li></ul>	<p>This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.</p> <div><div>BC</div><div>MODEL: 100129878 FCC ID: 2AVRV100129878</div></div>
FM Radio					
<p>1. Switch to FM Radio mode by pressing the Mode button.</p> <p>2. Press and hold the Pause/Play button to scan radio stations 87.5-108. Stations with good reception strength will automatically save.</p> <p>3. Press and hold the Previous and Next buttons to access saved radio stations.</p> <p>Insert the included USB-C® cable into the Charging Port while in FM mode to use it as an external antenna and improve signal.</p>					