### Statement

Please read this guide carefully before using the device to ensure your safety and correct use of the device. For information about the device configuration, please refer to the contract or information related to the device and the seller of the device to you.

The pictures in this guide are for reference only. If some pictures do not match the actual products, please refer to the actual products. Many network functions described in this document are special services provided by network service providers (ISPs). The availability of these network functions depends on the ISPs that provide the services

No part of this Manual shall be reproduced, excerpted, backed up, modified, transmitted, translated into other languages, or used in whole or in part for commercial purposes in any form or by any means without the permission of the Company

## Package Content

Components Name	Quantity
V66 MiniPOS Terminal	1
Battery	1
USB Cable	1
Power Adapter (Optional)	1
Stylus (Optional)	1
Quick operation guide (Certificate of qualification and Warranty card)	1

Aisino Vanstone Electronic (Beijing) Co., Ltd.

Address: 3F, No.2 Building, Aisino Corporation Park 18A,

Xingshikou Road, Haidian District, Beijing, China 100195.

Factory Address: 4F, No.12 Building, Aerospace Science and

Technology Industrial Park, No.51, Zhongkai Road, Huizhou

Factory Name: Huizhou Vanstone Flectronic Co., Ltd.

City, Guangdong Province, China 516006.

Website: https://www.vanstone.com.cn/en

Email: info@vanstone.com.cn

## **₽** Product Description





Function introduction Used for bar and QR code scanning. Magnetic stripe card reader, support bi-direction swiping. Used for connecting external PC or other terminals, Type-C USB port<sup>3</sup> allows to do data transmission and battery charging. The battery charging indicator light. Charging indicator light Optional Touch screen, display transaction and operation prompt information, etc. Power on and off, input amount and code. IC card reader IC card reader Contactless sensing area® Induction area for contactless IC card reading and writing that may vary depending on the application configuration Used for bar and QR code scanning Use when the light is dim when taking pictures or scanning code Pair with machine equipped with a resistive touch screen for electronic signature operations. Connecting Charging Dock or Docking Station. Battery socker 14 Battery insertion port

SAM card slots.

Note: Those marked with "\*" in front of the module name in the above table

### Quick installation

Take out the POS terminal, lithium battery, the power adapter, and other necessary parts from the packing box, then follow the steps below for a quick installation.

#### ①Open the battery cover.

②Follow the silkscreen indication and place each of the needed SIM/ SAM card separately into the right slot.

## Cautions When installing or removing the SIM/ SAM card, please confirm that the device is power-offed, otherwise the cards

- may be damaged. • When installing the SIM/ SAM card, the chip faces toward the internal side of the device.
- · SIM/ SAM card cannot paste stickers, tags, or other materials that may change the thickness of the card to prevent non-smooth installation or disassembly.

#### 2 Install the lithium battery:

①Open the battery cover.

2)Hold the battery with the label facing upwards and place it in the battery slot in the direction of the contact point between the battery and Host

3 Close the battery cover.

### Usage and Operation

1.Power on / Power off / Restart:

• Power on: press and hold the "power" key on the keyboard for 3 seconds. When the backlight of the display screen is on, the device is activating.

· Power off/ Restart: press and hold the "power" key for 3 seconds. The screen will display options for "standby/shutdown/restart mode" menu. Press the "shutdown" key to complete the shutdown; Press the "restart" key to restart the

[Cautions] When operating a transaction, the user interface is in the communication status. Please do not turn off your

## 2.Magstrip card swiping:

When the screen prompts to swipe the card, swipe the card at the magnetic stripe reader, which is available in both [Cautions]

• The card must be in parallel contact with the bottom of the card slot during the swiping process, otherwise the data may he read incorrectly.

· Swipe the card at a moderate speed

#### 3.Contact IC card:

When the screen prompts to insert the card, place the IC card chip side up and push it into the IC card holder, do not pull the card out during use. [Cautions]

• Do not pull out the card while it is being read. • Do not wrap the card in metal, otherwise it may cause a short

circuit.



## 4.Contactless card:

When the screen prompts to touch the card, place the contactless card on top of the screen and remove the card after successful reading

#### [Cautions] • Do not move the card during the card reading process.

• Do not place more than one card in the reading area at the same time, otherwise the card will fail to be read.



## 5.Barcode scanning:

When the screen prompts to scan, point the camera at the barcode or QR code and wait until the device beeps to indicate that the scan is complete.

• If the barcode is small, the scanning port should be close to the barcode, while larger barcodes should be kept at a distance from the scanning port, which will help you to identify the barcode more easily.

• If the barcode is highly reflective, you may need to scan at an angle to identify the barcode.

charging icon, a full charge takes about 3 hours.

Plug the USB into the adapter, when the power adapter is

connected to the power supply, the machine will have a

# After-sale service

If you have any questions, please contact your local dealer.

Warranty card Product Name:

#### Warranty terms:

- 1. Our company will provide you with high quality after-sales service.
- 2. If the user causes product damage due to human factors. the company will charge maintenance fee when repairing.
- 3. Please take good care of this card, which will be the warranty basis of our company.

# Certificate

#### Troubles and Troubleshooing

Troubles	Troubleshooting
Failing to turn on the device when pressing the power key	The battery is exhausted and cannot be recharged. Please change the battery.     The battery volume is low. Please recharge the battery.
Display screen shows error massage about network or service	The device may lost the ability of receiving signal when you are in a place where the signal is weak or reception is bad. Please try to relocate and try it again.     Some of the options may not be able to use because of the lack of reservation. Please contact your service providers for more information.
Touch screen slow or incorrect reaction	If the device has a touch screen, and the screen reaction is incorrect, please try with the following options:  1. Take off the protective film on the screen because it may prevent the device recognize input correctly. We do not recommend to use any type of protective films for touch screens.  2. Please ensure that the screen is clean without greasy dirt. Please keep fingers dry and clean when touching the screen.  3. Please restart the device to solve any type of temporary software errors.  4. If the screen is scratched or damaged, please contact the agent or distributor selling the device to you.

1. Please turn off some functions for saving power when do not using them, such as Short standby duration Bluetooth/WiFi/Data service, and etc. 2. Turn off not-in-use applications on the backstage will help to save power. Please ensure that Bluetooth and wireless ons have been turned on. 2. Please ensure that the connected device has Cannot find another turned on its Bluetooth and wireless functions Bluetooth device Please ensure that the POS terminal and the nnected device are within the maximum Bluetooth range of 10 meters. If the problem remains the same, please contact customer service.

## ■ Matters need attention

### Cautions for use

SAM card slots<sup>(5)</sup>

 Unauthorized disassembly of this device will cause the built-in security key to be destroyed resulting in unusable

- If the power adapter plug or power cord is damaged, please do not use them in case of electric shock or fire. Please do not touch power cord with wet hand or pull out
- the power adapter like pulling power cable. Please do not touch the device and nower adapter with wet hand in case of short circuit, malfunction, or electric
- Please stop using the power adapter and contact sales representatives for exchanging if the power adapter is caught in the rain, getting wet, or affected with damp seriously.

- The charge must be certified by local regulations and meet the charging specifications of the device.
- If the device has to connect USB ports, please ensure that the USB ports has USB-IF identification, and its performance is qualified with the USB-IF requirements.
- Do not use the device during thunderstorms. Otherwise, the device may fail or you could get an electric shock.
- Keep the device away from rain, moisture and acid liquids that corrode circuit boards.
- Do not store or use the device in dusty or dirty places. • Do not store the device at high temperature. High
- temperature shortens the life of electronic devices Do not place the device in a too cold environment. When
- the temperature of the device rises, moisture may form inside the device, which may damage the circuit board. Please do not disassemble the device without permission. Non-professional operation may damage the
- Do not touch the screen with pens, pencils or other sharp
- Do not strike, throw, step on, or subject batteries to severe physical shock.

- Please use manufacturer-authorized batteries, power adapters and other accessories. Use of unauthorized or incompatible accessories may result in fire, explosion or other hazard
- The usage of unauthorized accessories will result in the violation of the warranty provisions or local relevant provisions, and may cause safety accidents. To obtain authorized accessories, contact the sales agent or distributor who sold the devices to you.
- If the power adapter plug or usb cable is damaged, do not
- use it to avoid electric shock or fire. Do not touch the device and power adapter with wet hands to avoid short circuit, device failure or electric
- When charging the device, the power socket should be near the device and easily accessible. The charging area of the device must be kept away from debris, combustible materials or chemicals.
- Disconnect the charger from the device and the power socket when the battery is fully charged. Disconnect the power cord when you are not charging the device.
- Do not charge for a long time unattended.
- Do not strike, throw, step on, or subject the charger to severe physical shock. If the charger cover is damaged, contact the seller who sold the device to you to get it

or other hazard.

- Do not short circuit batteries, do not let metal objects or other conductive objects be in contact with the battery • Do not crush, puncture, dismantle, bend or cut the
- batteries. Do not insert foreign bodies into the battery, immerse or expose to water or other liquids, expose to fire, explosion
- Do not place or store the battery in high temperature environment
- Do not put the battery in water. If there is a battery fluid leakage, avoid contact with eyes or skin. In case of contact with eyes or skin, rinse immediately with plenty of water and seek medical
- advice Do not use damaged batteries. When the standby time gets shorter than normal, please
- replace the battery. This product uses lithium batteries. If your country has

regulations, be sure to dispose old batteries in the right

There will be a danger of explosion using the wrong model of battery The battery must be disposed in accordance with the instructions.

#### FCC compliance statement This device complies with Part 15 of the FCC Rules.

- Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received. including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the ECC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installa-
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Regrient or relocate the receiving antenna.
- -- Increase the separation between the equipment and

- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with
- The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 4.0 W/kg

any other antenna or transmitter.

averaged over ten grams of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the limbs.

Aisino Vanstone Electronic (Beijing) Co., Ltd.

Quick Operation Guide V66 MiniPOS Terminal



The pictures and descriptions in this guide are for reference only.