

MERKURY
INNOVATIONS

MERKURY INNOVATIONS **CONFIDENTIAL**

FILE INFORMATION

DATE: 08/28/19
FACTORY: Shenzhen Ground Enterprises Co
MODEL NUMBER:
MI-S041S-101, MI-S041S-199 (MANUAL)

PRINTER SPECIFICATIONS

FILE NAME: MI-S041S-Series_Manual_082819.ai
SCALE: 100%
SIZE: Trim: W 202mm x H 152mm
PAPER STOCK: 80g Art Paper

INKS: 1/1
Greyscale
PRESS WORK / NOTES: Trim to size, score, fold,
& glue in specified areas.
----- Trim
----- Score

DO NOT print Comments or Dielines.
Physical sample according to specs must be approved
by MERKURY before proceeding to production.

CONTACT

MERKURY CHINA:
Perry
perry@merkuryinnovations.com.cn

COMMENTS (Internal reference only)

File created by Toshiko
- Please include this manual in all packaging
for MI-S041S-Series
- Greyscale
- Double sided printing

MANUAL

FOLD LINE

Troubleshooting	
No power from speaker or microphone	Recharge your speaker or microphone separately using the included adapter
Music is not playing over Bluetooth	Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart speaker.
Bluetooth device will not reconnect with the microphone	Navigate to the Bluetooth settings menu on your device. Tap "MERKURY S041S" and select "Forget." Now follow the steps to pair your device again.

Specifications:
Power output: 10W
Frequency: 100Hz-18KHz
Driver: 5 inch
Lithium battery: 5.0v/1800 mAh
Product size: 11 x 4.2 x 9.4 in
Playback time: Approx. 3 Hours*
Charging time: Approx. 3 hours
Standby time: Approx. 1 month
*Approximate playback time. Battery life depends on individual use and may be slightly more or less than the time specified.

Bluetooth® Information:
Bluetooth® Specification: V4.2
Operating Distance: 30 feet (Class II)
System Requirements: Bluetooth-capable device

Additional Connection Sources:
Power Source: Built-in rechargeable battery via Micro USB to USB cable

Compatibility:
Works wirelessly or wired with most devices, tablets, smartphones and laptops.

Technical Support:
If you are experiencing problems, do not attempt to fix the product yourself or return it to the store you purchased it from. Please refer to the user's manual or just contact our helpful tech support team:

Merkury Innovations
45 Broadway, 3rd Fl
New York, NY 10006
www.merkuryinnovations.com
support@merkuryinnovations.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions:
1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

©2019 Merkury Innovations, LLC.
To explore our full selection of products, visit us at: www.merkuryinnovations.com
The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google, Google Play, and related marks and logos are trademarks of Google LLC. All other trademarks and trade names are those of their respective owners. The illustrated product and specifications may differ slightly from those supplied.
Made in China

MERKURY
INNOVATIONS

Bluetooth®

THE
STAR
Karaoke Speaker + Wireless Mic




User's Manual
for MI-S041S

Included:
Wireless Speaker
Wireless Microphone
USB Charger
AUX Cord
User Manual

Sing along with your favorite karaoke apps
or YouTube karaoke videos




IMPORTANT Please read before using this product

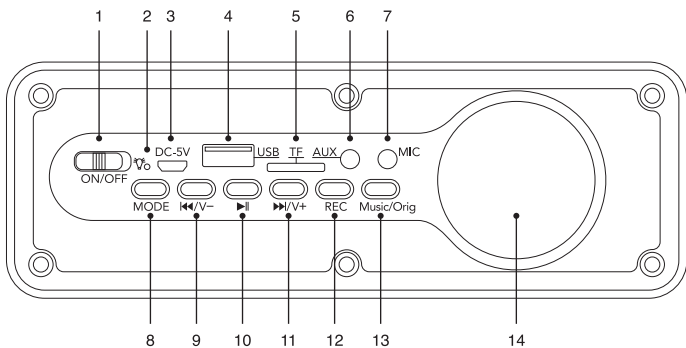

SPEAKER:

- 1. On/Off Switch**
Power speaker ON and OFF. Speaker will return to the mode it was on when last in use
- 2. Indicator Light**
Turns on during charging, turns off when fully charged. Always unplug USB cable when charge is complete. Please charge fully when using for the first time.
- 3. 5V Charging Input**
Please use a powered USB port to charge the speaker with the included micro USB cable.
- 4. USB**
Insert USB drive to play music files. The Star can play most common audio formats.
- 5. TF**
Insert TF/MicroSD card. The Star can play most common audio formats.
- 6. AUX Port**
Connect via AUX port using the included AUX cable.
- 7. Microphone Port**
Input port for 3.5mm wired microphone. (Sold separately)
- 8. Mode Select:** USB/MicroSD/BT/AUX
When a MicroSD, USB drive, or AUX cord is inserted into the speaker, the mode changes to the designated playback automatically.
- 9. Volume Down**
Press and Hold: Previous Track (Bluetooth, MicroSD, USB mode only)
- 10. Play/Pause**
Play and Pause your music (Bluetooth, MicroSD, USB mode only)
- 11. Volume Up**
Press and Hold: Next Track (Bluetooth, MicroSD, USB mode only)
- 10. Record**
While in TF/MicroSD or USB mode, Press and hold for 2 seconds to begin recording. (A wired microphone must be used) When you are finished, press REC button again to stop recording.
- 13. Music/Orig**
Press ON/OFF to lower music from speaker instantly to isolate vocals from microphone.
- 14. Wireless Microphone Holder:** Dock for microphone when not in use. Please power off the microphone, as the microphone dock is not powered.

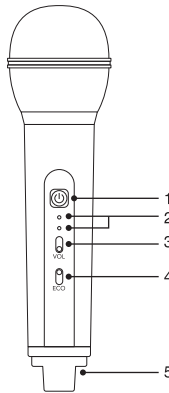

MICROPHONE:

- 1. Power Button:** Use to power wireless microphone ON and OFF
- 2. Indicator Lights:** Lights will blink when wireless microphone battery is low. To charge, please connect to the included USB cable.
- 3. Volume adjuster:** Adjust the volume of the microphone higher or lower.
- 4. Echo adjuster:** Adjust level of echo effect on the vocals.
- 5: USB 5V Charging Input:** Use to charge wireless microphone with the included USB plug.

NOTE: Wireless Microphone charges with the included USB cable separately from the speaker.

Charging

- Plug the included USB cable into the 5V input on top of speaker and plug the other end into a standard USB port.
- When charging, the indicator light will glow. Once fully charged, the indicator light will turn off.

Pair and Connect with a New Bluetooth Device

- Turn speaker on with the On/OFF Switch
 - If needed, press the Mode Select Button to switch speaker to Bluetooth Mode (BT)
 - On your Bluetooth enabled device, navigate to the Bluetooth setting menu and search for new devices.
 - Wait a few seconds and select "MERKURY S041S"
 - Speaker will emit a tone when connection is successful!
- NOTE:** If asked for a password, you may need to enter "0000."

Reconnect to Bluetooth

- You only need to pair your Bluetooth device with the speaker once.
- With your previously paired device's Bluetooth turned on and in range, power on the speaker.
- The speaker will automatically reconnect to the last Bluetooth device it was connected to.
- If a previously paired device does not auto-reconnect, navigate to the Bluetooth settings menu on your device, and select "MERKURY S041S" from the list of Bluetooth devices.

Karaoke App Support

- The Star supports many apps found in Apple and Android App store.
- Try out some of these popular apps: Smule, The Voice: On Stage, Karaoke Sing and Record, Yokee: Sing Like A Star!, and StarMaker
- The microphone also supports using Youtube for your karaoke music and lyrical needs. Just search for karaoke songs and press play!

OUTSIDE

INSIDE

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.