T1021P/T1021T

Pad

USER GUIDE





Use r g uid e T1021P/T

CONTENT

TABLET PART	3
GETING STARTED	4
Se tting s Me nu	7
How to Use TFc and	8
How to connect with computer	9
Connection to Internet	10
C A MERA	10
TRO UBLE SHO O TING	12
C lo se Applic a tio n	12
Mandatory Poweroff	12
Re sto re De fa ult Se tting	12
SPEC IFIC ATIO NS	14
WARNING S	16

Use r g uid e 11021P/1

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class Bdigital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againsthamful interference in a residential installation. This e q uip ment ra d ia te ra d io generates, use s and can fre que nc ye ne rg y and, no tinsta lle d and use d accordance if in harmfulinte rfe rence to with the instructions, cause mav communications. However, there is no guarantee that interference will notoccurin a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of fand on, the user is encouraged to try to correct the interference by one or more of the following measures:

- •Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from that to which there ceiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


The device complies with RF specifications when the device used at 0mm from your body.

Use r g uid e T1021P/T

Specific Absorption Rate (SAR) information: This Tablet pc meets the government's requirements for exposure to radio waves. The guide lines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. This cquipment should be installed and operated with minimum distance of 0 cm the radiator your body.

Use r g uid e 11021P/1

TABLET PART

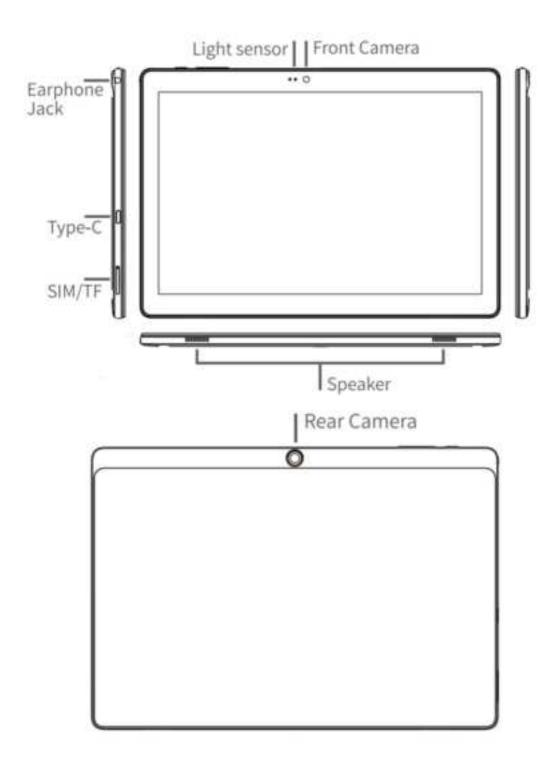

Tablet part table according to the image in previous page

NAME	FUNCTION
Volume +	Press to increase the volume.

Use r g uid e T1021P/T

	·
Volume -	Press to decrease the volume.
Power	Keep pressed to turn on/off the tablet. Shortly press
	to activate standby.
	Press and hold 8 seconds to do force power off.
Earphone jack	Connectearphone to this standard 3.5mm jack.
Type-C	PC connection/peripheralconnection through
	HOST cable, for example keyboard or an USB
	device.
Rear Camera	5.0 MP c a me ra.
Front Camera	8 MP camera.
SIM/TF	SIM card slot and Micro TF card slot.

GETTING STARTED

Battery charging

The tablet has a built-in rechargeable Li-polymer battery. To charge connect the AC power adapter to the USB jack on the left side of the tablet and the battery icon shows the battery status and charging status.

The tablet can be used even if the battery is being charged. No replacement of battery without authorization, or the explosion hazard might happen. Recharge it for at least half hour if it has been idle for long time and fails to start itself. Regularly recharge it at least one time monthly. 35° - 5° is the optimum temperature for the battery recharging or the battery performance might deteriorate slightly.

Disposal


Use r g uid e T1021P/T

The battery might contain the polluting material, please give it to the official recycling-station before disposing the tablet, and don't litter.

How to use the protect cover

A protector cover come with the tablet in the box, there is 2 modes you can use the protector cover to stand.

Use r g uid e 11021P/T

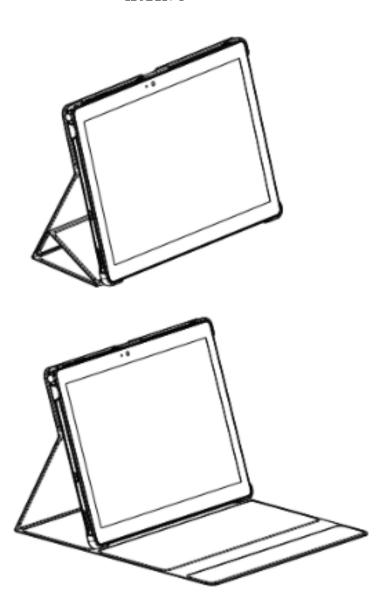

Use r g uid e T1021P/T

PowerON/OFF

ON: Press the power button continuous 5 seconds until the tablet turns on.

OFF: Press the power button for continuous 2 seconds and it will appear

"Poweroff", "Airplane mode" and "Reboot" choices. Select "Poweroff" to turn

off the tablet

Screen Lock: System is id le . The screen will turn off a uto matic ally after 1 minute

inactivity. Manually activated by pressing the Powerbuttononce.

Screen unlock: Drag the lockicon up to unlock the screen.

Home screen

The Desktop contains shortcuts to your most-used applications and widgets. Touch the screen icon to quickly search the World Wide Web using Google.

Se tting s Me nu

The settings menu allows you to adjust Tablet system configuration. To change settings touch the "Settings" menu icon on the Application menu, the Settings menu will open and then touch a category title to view further options:

Wi-Fi: Connect to/disconnect from wire less networks, view connection status.

Data usage: Enable/disable mobile data, view current usage, set mobile data

limit (note: this function is a vailable only on devices $\sup p$ lied with 3G).

Sound and notifications: Change audio profiles and notifications management.

Display: Change brightness, wallpaper, sleep settings, font size, etc.

Use r g uid e

Storage: Manage NAND and Mic ro SD card, view available capacity, etc.

Battery: See battery status and powered-on time.

Apps: Manage applications, running services, etc.

Location services: Change approximate location detection, improve search results, GPS satellites, etc.

Security: Change screen lock type, encryption, password, credential storage, etc.

Language & input: Select language, add to the dictionary, edit on-screen keyboard settings, vocal search, etc.

Backup & reset: Backup & restore data, perform factory reset, etc.

Date & time: Set date, time zone, time, clock format, etc.

Accessibility: Set up large text, auto-rotate screen, speak password, etc.

About tablet: Information about your Android device.

Ne two rk func tion:

Step 1 - At off mode insert SIM card in the slot.

Step 2 - After inserting SIM card turn on the tablet and wait to display the cell reception icon.

Step 3 - Once the connection with the operator, you can use the network connect to the internet.

How to Use TFc and

• This device support Micro SD card

1. Insert the TFc and into the TF/SIMs card slot. Gently push TFc and into slot until it clicks into place.

Userguide 11021P/T

2. A prompt will be seen on the screen saying "Preparing SD card".

Removing TFc and

- 1. Close all applications and documents which have been opened from the TF c ard.
- 2. Se le c t "Se tting" and find "Storage" then c lick "Unmount SD c ard".
- 3. A prompt will be seen on the screen saying "SD card safe to remove".
- 4. Gently press the TFc and to remove and pull out the TFc and.

Note: Insert the TF card in correct position, otherwise it will damage the card and the slot.

How to connect with computer

Turn on your table t before connect the table t to PC by USB cable.

- 1. Use USB cable to connect table twith computer.
- 2. The PC will detect an external disc named T1021P/T1021T, this is the internal memory of the tablet.
- 3. Then slide down from top to inside, click "USB for charging". Choose "File transfers", then you can transfer files from computer to the device. Please check below image for reference.



Use r g uid e 11021P/T

Connection to Internet

Wireless:

- 1. Se le c t" Se tting s".
- 2. Se le c t "Wi-Fi" and slide OFF to ON status.
- 3. All detected wire less networks in the area will be listed. Click to select desired wire less connection.
- 4. Enter ne twork ke y if ne c e ssary.
- 5. Once connected to a wire less network, settings will be saved
- 6. Wire less icon will appear on the taskbar when connected successfully.

*Note: When the tablet detects the same wireless network in the future, the device will connect to the network automatically with same password record.

Connect to the internet and launch the browser.




CAMERA

Touch the icon to entercamera mode and the interface is shown as

Use r g uid e T1021P/T

fo llo ws:

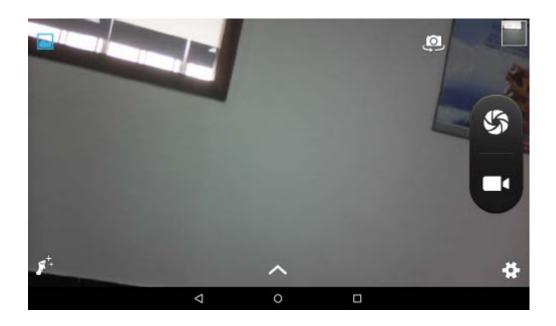

- 1. Touch the icon to take a photo.
- 2. Touch the icon to start camera recording.
- 3. To uch the photo miniature on the top right to see the previous picture and you can also delete, share or set it as the wallpaper. Click return button to exit camera interface.
- 4. Touch the icon to switch from front to backcamera.

Userguide 11021P/1

TRO UBLE SHO O TING

Close Application

When an application is not responding you can close it and will make system response faster. Please shut down all idle applications to release memory and get the system speed back to normal.

To close the application, click the icon to enter the system configuration interface. Select the Apps, tap the application you want to close, a pop-up window will be displayed and finally tap "Stop" to close that application.

Mandatory Poweroff

1. Press and hold the power button for 8 seconds and the device will be powered off.

Re sto re De fa ult Se tting

If you want to reset the factory setting and erase all materials, please press Settings / Backup & reset / Factory data reset.

* Warning: Factory data reset setting will delete your data and configuration of system and applications from downloading.

Use r g uid e 11021P/T

** Ple a se use this function care fully.

Use r g uid e T1021P/T

SPEC IFIC A TIO NS

Please visit www.alldocube.com for the latest product information. Design, specifications and user guide are subject to change without notice.

Display: 10 inc h IPS (1200*1920) capacitive multi-to uch screen.

CPU: T1021P: MTK6771(P60) Octa-Core, 2.0GHz

T1021T: Uniso c T618 O c ta - C o re, 2.0G Hz

RAM Storage: 4GB*

ROM Storage: 64GB*

Expansion Memory: Mic ro SD c and up to 1TBGB (not supplied)

Built-In Wireless: 802.11 a/b/g/n/AC

SIM 4G-LTE module:

- 3G: B2(1900)、B5(850)、B8(900);

- 4G: FDD LTE B2(1900)、B4(AWS)、B7(2600)、B8(800)、

B28(700)

- 4G: TDD LTE B40(230)

Built-in Bluetooth: Version 5.0

Use r g uid e T1021P/T

Navigation: GPS, Beidou, Glonass

FM Radio

Double camera: Front 5 MP and Rear 8 MP.

Adapter: USB adapter 5V-2A.

Operating System: And roid 11

*Note: Internal memory is divided in two partitions, system partition (hidden) and user partition (visible). In the hidden partition is included the software necessary to recovery the operative system and the installed applications, while in the visible partition you can find the user data.

Use r g uid e T1021P/T


WARNINGS

	Correct disposal of this Product (Waste Electrical & Electronic
	Equipment) (WEEE).
100	Your product is designed and manufactured with high quality
\ \	materials and components which can be recycled and
1-8	re use d.
	This symbol means that electrical and electronic equipment,
	at their end of-life should be disposed of separately from your
X	ho use hold waste.
Db	Please dispose of this equipment at your local community
PD	waste collection/recycling centre.
	In the European Union there are separate collection systems
	for use delectrical and electronic products. Please help us to
	conserve the environment we live in!
A CHILLE	DO NOTplace objects on top of the device, as objects may
X	scratch the device.
1-20	Se la tell tille de vie e.
×	
•	DO NOTexpose the device to dirty or dusty environments.
ו	
	DO NOT place the device on an uneven or unstable surface.
V11 // R	
~ = 0 //	DO NOTinsert any fore ign objects into the device.
Ludanianiani V	
V	DO NOT expose the device to strong magnetic or electrical
X	field.
	IIC At .
- Mer	DO NOT expose the device to direct sunlight as it can
XXX	damage the device. Keep it away from heat sources.
but.	admage me device. In op way nom near so die es.

Use r g uid e 11021P/T

00/C(142F)	DO NOT store your device in temperatures higher than 40°C (104°F). The internal operating temperature for this device is from 20°C (68°F) to 60°C (140°F).
×	DO NOTuse the device in the rain.
(A)	Please check with your Local Authority or retailer for proper disposal of electronic products.
×	The device and adaptor may product some heat during normal operation of charging. To prevent discomfort or injury from heat exposure, DO NOTleave the device on your lap.
RATING	POWER INPUTRATING: Refer to the rating label on the device and be sure that the power adaptor complies with the rating. Only use accessories specified by the manufacturer.
2 X	Clean the device with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.
(GFE)	Always power off the device to install or remove external devices that do not support hot-plug.
· → · · →	Disconnect the device from an electrical outlet and power off before cleaning the device.
X	DO NOT disassemble the device. Only a certified service technician should perform repair.
S A S	The device has apertures to disperse heat. DO NOTblock the device ventilation, the device may become hot and malfunction as a result.

 Userguide 11021P/1



Risk of explosion if battery replaced by an incorrect type. Dispose of used batteries according to the instruction.



PLUGGABLE EQUIPMENT: the socket-outlet shall be installed near the equipment and shall be easily accessible.



European Union: Disposal Information.

This symbol means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

MADE IN CHINA