

Brookstone®

Bluetooth speaker Model: M60



Fold

LITHIUM-ION BATTERY WARNINGS

This device contains a non-removable lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Fold

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTE:

This device complies with Part 15 of the


following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Fold

LOCATION OF PORTS AND CONTROLS

1. Power Button
2. Play/Pause Button
3. Volume +/ Track FWD Button
4. Volume -/Track Back Button
5. Power LED Indicator
6. Battery LED Indicator x 4
7. Micro USB Port
8. Aux-In Port
9. USB Out Port
10. Microphone
11. Micro USB Charging Cable (not shown)

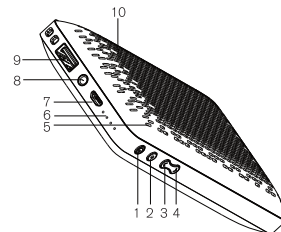

Fold

CHARGING THE SPEAKER

1. Connect the USB Cable (included) to the Micro USB Port on the speaker.
2. With the speaker power off, plug the other end of USB Cable into a USB Port on your PC or a 5V 1A adapter (not included).
3. The Battery LED Indicator light will illuminate white while charging and all the LED Indicators will turn solid white when speaker is fully charged. Charges in approximately 3 hours for up to 12 hours of listening enjoyment.

NOTE: When battery is low, the speaker will sound a beep tone every minute.

TURNING THE SPEAKER ON/OFF

1. Press and hold the Power Button for 2 seconds. The speaker is turned on and will sound ascending tones.
2. Press and hold the Power Button for 2 seconds again. The speaker will sound descending tones and power off.

NOTE: With the speaker power on or off, short press the Power Button once, the Battery LED Indicator(s) will lit on for 16 seconds to show the battery level.

Fold

Brookstone®
A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire, USA 03054
800-846-3000 • Brookstone.com
311671

Fold

PLAYING MUSIC THROUGH A WIRED CONNECTION

You can connect your audio device to the speaker with a 3.5mm audio cable (not included).

1. Plug one end of the cable into your audio device, just like you would a pair of headphones.
2. Plug the other end of the cable into the speaker's Aux-In port. The Power LED Indicator will illuminate red.
3. Use your audio device to control music playback, and adjust volume through speaker.

PAIRING YOUR DEVICE

1. Prepare your device to pair using Bluetooth® technology, making sure you are within 33 feet of the speaker. Refer to your device's owners manual for details if necessary.
2. Turn on the speaker.
3. Power LED Indicator will flash blue and the speaker is ready to pair.
4. Once the speaker is in pairing mode and your device is ready to pair, select 'Executive 2.0.' If prompted, use 0000 as a PIN for the pairing code. Once the speaker is selected, the speaker will sound tones and the blue light will become solid to confirm pairing is complete.

NOTES:

1. Aux-in will take priority over the Bluetooth® connection. When Aux cable is unplugged, the speaker will reconnect to the phone via Bluetooth®. A tone will sound and Power LED Indicator will turn solid blue again.
2. You can connect the speaker to other Bluetooth® enabled devices by holding the Play/Pause Button. The Power LED Indicator will flash blue and the speaker is in pairing mode again.

LISTENING TO YOUR AUDIO DEVICE

1. Play your audio device as you normally would.
2. Volume may be adjusted on your audio device or by pressing and holding the Volume Down or Volume Up buttons.
3. A single press of the Volume Down or Volume Up buttons will go back to the previous track or advance to the next track.
4. To pause audio, press the Power Button on the Speaker. To resume audio playback, press the same button again.

Fold

CHARGING YOUR SMARTPHONE

Connect your phone's USB charging cable to the USB-OUT Port on the speaker for charging your device.

MOBILE PHONE OPERATION

1. When you have an incoming call, the speaker sounds an incoming call tone. Both the speaker and your mobile phone may ring, depending on your mobile phone settings.
2. To answer an incoming call press and release the Power Button.
3. To end a call press and release the Power Button.
4. When you receive a call, while music is playing, the song will pause. After ending the call, the song will continue from where it was paused.

CARE AND STORAGE

Store the speaker in a cool, dry place.

Fold

SPECIFICATIONS

DC-Input: 5V, 1A

USB Output: 5V, 1A

Total Output: 3Wx2

Range: Class 2, up to 33 ft (10 m)

Li-ion Rechargeable Battery: 2500mAh

Charging Time: Approx. 3 hours

Battery Life: Approx. 12 hours

Compatibility: Bluetooth® 2.0 or above device with A2DP/AVRCP/HFP/HSP

Fold

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own

warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Fold

The Bluetooth® word mark and logos are registered trademarks owned of Bluetooth® SIG, Inc. and any use of such marks by Brookstone is under license.