
# SIZE:单页尺寸95X130mm,双面印刷,5折页

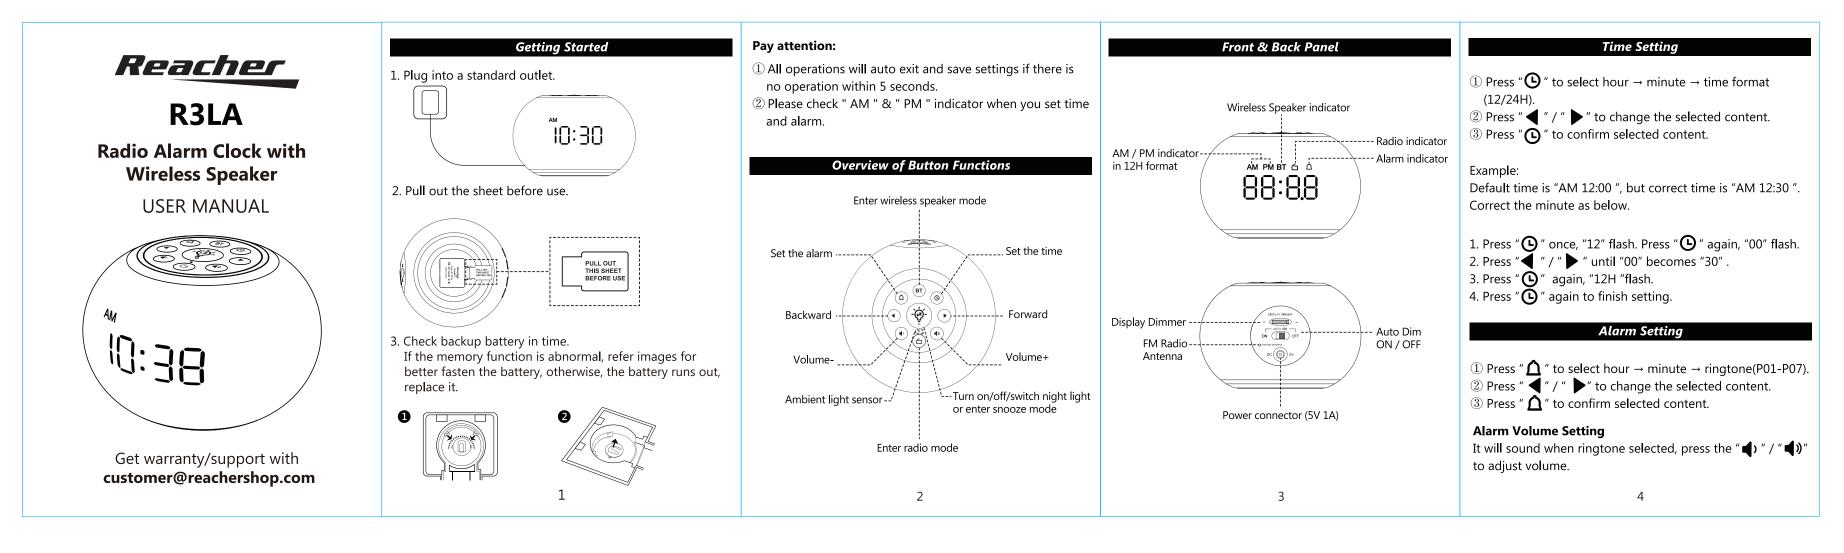

# Attention:

- 1. Alarm setting is similar to time setting.
- 2. When radio/wireless speaker is OFF, press " ()" / " ()" to select the ALARM volume level.

# Alarm On/Off

Hold " 🛆 " 2 secs to turn ON/OFF the alarm.

## Alarm Pause / Snooze

Alarm Pause: Press " (1) " when the alarm goes off or during snooze mode.

**Snooze:** Press "-?" to snooze for 9-minute when the alarm goes off.

(If you do not press any button, it will be keep ringing 30 minutes, then alarm will auto-off and sound in next day.)

# Nightlight Setting

Turn ON: Press "-💇" Switch Color: Press "-💇" repeatedly. Turn OFF: Long press "-💇" .

#### 5

# FM Radio Play Setting

Please extend the FM antenna on the back of clock.

Turn ON: Press " (1". Adjust Radio Volume: Press " (1) " / " (1) " Turn OFF: Press " (1".

Manual Tune FM Channel Press " ◀ " / " ▶ " to choose FM channels and long press to quickly adjust.

#### **Auto Search FM Channel**

- ① Hold " 👉 " 2 secs to scan and autosave the scanned stations.
- ② During the scan, briefly press " , to exit the search midway and save the found stations.

#### Attention:

Once auto scanning is completed, if you want manual tuning FM Channel, please RESTORE FACTORY SETTING first. ( Refer to Page 8 )

6

# Wake Up Radio Alarm Setting

When setting the alarm ringtone(Refer to Page 4), make sure you select P07.

When the radio is on, press and hold " $\triangle$  " for 2 secs, "AL" indicator will flash for 3 secs on the screen.

#### Attention:

After setting, the clock immediately saves this station as Wake Up Radio Alarm Sound(P07).

# Dimmer

Auto Dimmer

# AUTO DIM ON OFF

DISPLAY DIMMER

Turn on the auto dim switch**(on the back panel)**, will automatically adjust the display's brightness based on ambient light.

## Attention:

Do not block the Ambient Light Sensor, otherwise, the display will be very dark.

**Manually Adjust the Display Brightness** Slide the "auto dim" to the off position and slide the back wheel.

7

Wireless S	Speaker Setting	1

Turn ON: Press "BT "

time.

- **Connect:** When "**BT**" flashes, search and select R3LA from the device list to connect.
- Music Switching: Press " < " / " > " .
- Adjust Volume: Press " ◀) " / "◀) " (The phone can also adjust the volume).
- Play/Pause: Press " BT". Reset: Press " ◀ " and " ▶ " simultaneously for 2 secs. Turn OFF: Long press "BT" .( "BT" will disappear)

#### **Restore Factory Setting**

Disconnect the power supply and remove the battery, it will restore factory default setting when plug in the adapter next

## Safety Instructions

- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
- To avoid damage, never place the unit near radiators, in front of heating vents, under direct sunlight or near water.
- When disconnecting the power supply, pull the plug first.
- Do not pull the cord by itself. Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Do not open the housing.
- Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer's recommendation.

# Support & Warranty

Reacher backs 45-day refund policy and 12-month warranty for products in our store. 7×12H service: <u>customer@reachershop.com</u>. If you have any questions, please feel free to contact us.

8

#### FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.