

此页不印刷（本文件共30页）

SIZE:100mm X 135mm

材质: 封面铜版纸 内页: 书纸


工艺: 封面过亚膜

颜色:  PANTONE Black C

注意：不要随便删减空白页（特别是封面内页不能出现印刷内容）

AC10

AC10 Body Camera

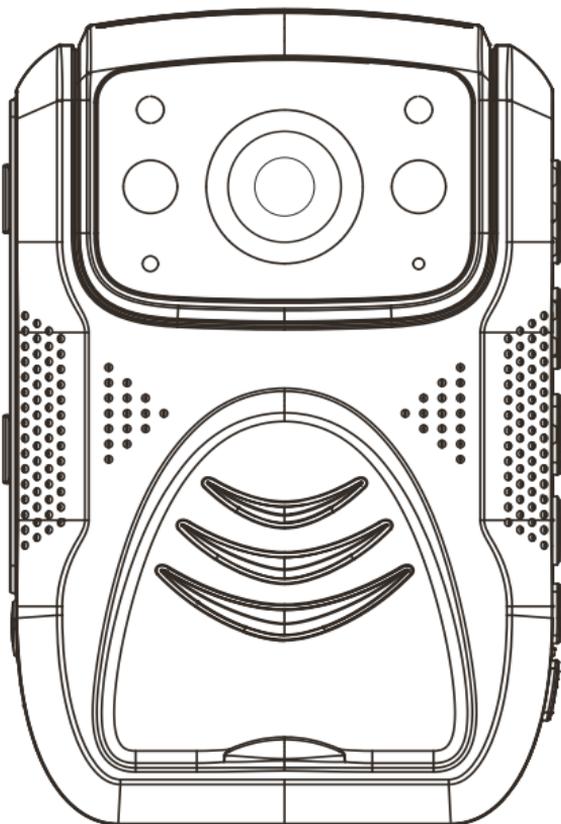

Contact us

If you encounter any problems or have questions Please contact us

AC@yoomail.com

We will give a timely and authoritative reply within 24 hours, and do our best to solve your problem as soon as possible.

If you are not satisfied with our products. Please tell us your thoughts. This would be greatly appreciated.

Content

Precaution	1
Camera Maintenance	1
Button Function and Interfaces	2
Indicator	3
Button Function	4
HOW TO START	6
Interfaces	7
Video Mode Setup Menu Section	8
Navigation menu	8
Video playback&photo playback&audio playback	9
Working mode	10
Setup Menu	11
Specification	15
WIFI Connection and APP	16
How to use GPS function?	19
Frequently asked questions and answers	21

Precaution



Thank you for your choosing AC10 camera. Please carefully read the manual before using, and keep it at a safe place for future reference

The compilation of the user manual refers to the latest information. The manual quotes captured Screen displays and graphics, with the aim to introduce the digital camera through detailed and Direct methods. Due to system update and product batch, those captured screen displays and Graphics indicated in the manual may differ from the actual camera you received.

Camera Maintenance

- When you are not using the camera for some time, please keep it in a dry and cool place, avoid direct sunlight.
- Use protective cases to avoid the scratches on lens and screen.
- Please clean the lens with soft clothes or tissue, DO NOT use organic solvent to clean the lens.
- Avoid dropping or bumping the camera.
- The camera will get warmer while working, that is normal.
- Working temperature: -20° to 60° It is forbidden to use in the environment below -20° and above 60°.
- The AC10 record video with high bitrate. To ensure normal function of the camera, please use high speed memory card, The writing speed should be at least 10MB/second, UHS 3 card are recommended.

Button Function and Interfaces:

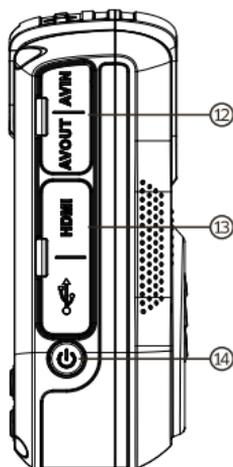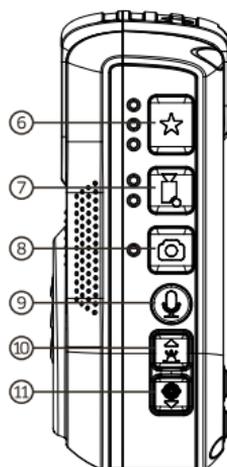

1. Back button
2. Alarm light
3. Confirm/Playback button
4. Reset button
5. Menu key
6. Empty
7. Video button
8. Camera button
9. Up button/manual night vision button
10. Down button/laser light
11. AVIN/AVONT interface
12. HDMI/USB interface
13. Power button

Indicator

Infrared light	When the infrared light is turned on, the red infrared light is always on
Laser light	When the laser light is turned on, the red positioning laser light is on, and the positioning target position has a red light spot
Warning light	When the warning light is turned on, the red and blue warning lights flash
Charge Indicator	In the charging state, the red charging indicator light is always on
Working Indicator	After power on, the indicator light is green, while recording, the indicator light flashes slowly in red

Button Function

Power	<ol style="list-style-type: none">1.when the camera is off, press and hold on to turn on the camera.2.When the camera is on, press and hold toturn off the camera
OK/Playback	<ol style="list-style-type: none">1.When on the homepage, short press the OK button to enter the playback mode (video-picture-recording)2.In playback mode, Short press the OK key to enter the folder, in the folder, short press the OK key to start playing video, recording and viewing pictures3.During video playing, short press to play/ pause.4.In setup menu, short press to confirm selection and changes.
Return	Return to the previous menu
Reset	Restore the factory settings of the machine
Warning light	Turn ON/OFF the warning light
M Button	Enter setting menu
Video	Turn ON/OFF video
Photo	Take piture
Recording	Turn ON/OFF recording
UP/IR	<ol style="list-style-type: none">1.In recording and standby mode, turn on/off

UP/IR	<p>the infrared light</p> <ol style="list-style-type: none">2.In the menu, select a function, and select an option in the function options3.In playback mode, select photos and videos
DOWN/ Laser light	<ol style="list-style-type: none">1.In the recording/standby state, turn on/off the laser light2.In the menu, select a function, and select an option in the function options3.In playback mode, select photos and videos

HOW TO START:

A.Charge the Li-ion battery

1. Use a 5V/2A standard USB adapter to charge the camera via a Micro USB cable or connect the camera to the computer to charge.
2. It usually takes 2-3 hours to charge the battery to fully charge.

B.How to use memory card.

1. The camera uses Micro SD card storage, the maximum support is 128GB. To ensure normal functions, please use a high-speed memory card. UHS 3 memory card is recommended.
2. Before using the camera, please format the memory card in the computer.
3. The camera does not support hot-swappable memory cards, please shut down before inserting or removing the memory card.
4. Insert the card slot according to the instruction icon until the card is fully inserted into the card slot.
5. To remove the memory card, gently press the edge of the memory card until it pops out.

C. On/Off

1. Turn on: Press and hold the power button for 3 seconds until the boot animation appears.
2. Shut down: Press and hold the power button for 3 seconds until the shutdown animation appears.
3. Automatic shutdown: the camera will automatically shut down when there is no other operation for a certain period of time in the standby state, for example: 3 minutes.
4. Low battery level: When the camera's battery level is very low, the battery icon's power display is blank (full power displays 3 bars). Please charge the camera battery in time, otherwise the camera will automatically shut down due to low battery.

Interfaces



- 1.Video resolution
- 2.Recordable time
- 3.Battery icon
- 4.WIFI icon
- 5.Memory card capacity

- 6.Date&Time
- 7.personnel number
- 8.WIFI account
- 9.WIFI password
- 10.GPS information

Video Mode Setup Menu Section

	Menu	1/30
Resolution		2K30
Photo Size		40M
Pre-Record		Off
Post-Record		Off
Video Quality		Off

Navigation menu

