

iHome
Model: IS7700

PLAYPRO

Bluetooth Mono Wireless Speaker

LED STATUS INDICATORS

— Blue LED : Bluetooth Status
— Red LED : Battery Status

BATTERY STATUS

○	SEC	Charge (charging indicator)
●	OFF	Full (charged)
○	RED	Low battery (Red light)

BLUETOOTH STATUS

○	BLU	Pairing (flashing)
●	BLU	Connected to Bluetooth

CHARGE UNIT BEFORE USE ABOUT 4 HOURS

WATERPROOF COVER

TRUE WIRELESS PAIRING (TWP) MODE (2 SPEAKERS)

1. Press and hold the **POWER** button and the **PLAY/PAUSE** button for 5 seconds.
2. The speaker will enter the pairing mode and the **LED** indicator will flash.
3. Repeat the same steps for the second speaker.
4. The two speakers will automatically pair and play music.

BLUETOOTH PAIRING

1. Press and hold the **POWER** button and the **PLAY/PAUSE** button for 5 seconds.

RESET BUTTON

Press the **RESET** button to reset the speaker to factory default settings.

[illegible]