# One Touch Motor Range

Operating Instructions



Please fully charge motor before first use.

When a motor has no limits set it will operate in jog mode. Once the blinds top and bottom limits are set this will change to a continuous operation between limit positions.

This motor range is for indoor use only, do not use outdoors or in humid environments.

Each rootor in this motor range has a built-in rechargeable Li-ion battery pack with integrated charging management. Max input voltage: 5V/2A. An LED on the motor head will flash 8 times at the start of operation when the battery is running low.

Each motor can be paired with a maximum of 10 controllers.

Do not operate a motor when it is being charged.


A motors upper and lower limits cannot be set at the same position.

Limits are saved even if the motor runs out of battery or is powered off. Removing any or all remotes does not remove set limits.

The motor can run for a maximum of 6 minutes continuously.

During the setup/programming stage the motor will jog in operation, please do not proceed to the next step until it has completed this function. When programming the motor, the operator has a 10 second window to complete each stage. If a stage is not carried out within the 10 second window, the motor will automatically exit the current mode and the motor will not be set.



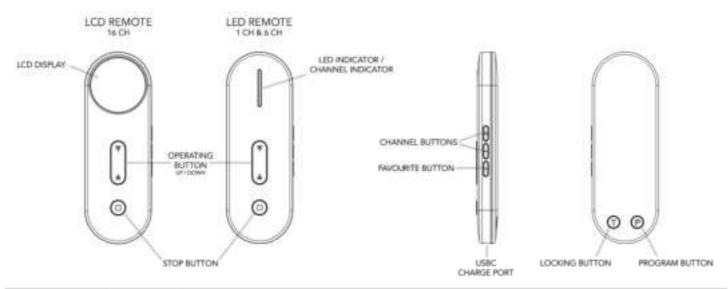

# Motor Head Button Operation

Control Blind - UP, STOP & DOWN

Short press the MHB. Each press will raise, stop or lower the blind.

### Add/Remove Controller

· Press and hold the MHB for 2 seconds. The blind will jog and flash orange. Press the PROG button on the remote and the blind will jog. Remoted is added/removed.

### Direction Reverse

 Hold the MHB for 10 seconds. The motor will jog and flash orange three times. The direction has been reversed.

· Hold the MHB for 16 seconds. The motor will jog and flash orange four times. All settings are deleted.

### Smart Hub Connecting

 Hold the MHB for 2 seconds, the blind will jog and flash orange. Then press 3 times within 10 seconds. The motor will flash blue, motor is in pairing mode.



(Flashes Orange or Blue)

# Power Source & Charging Options

Attatching the Solar Panel

- · Make sure the motor has enough charge to operate the blind.
- Attach the solar panel to the charge port on the motor.
- · Place / fix the solar panel so that it is facing direct sunlight.

Built in Lithium Battery Supply

- · Recharge using USBC cable provided.
- Charge time is between 6 8 Hours.
- · A full charge will last between 3 6 months. For the health of the battery we recommend charging at least once every 6 months.



## Pairing Remote NOTE: Parrigion not be done under group themselve 0 channel

### Option 1: Power on the motor and then add the remote



Option 2: Add controller B via pre-existing controller A



### Direction Reverse

### Checking current direction



Option 1: Changing direction if the limits are not set





### NCTE. Before firsts are set, the motor will not in jog mode. For commons operation hold down the UP or DOWN Sumon for 2 securists. Once limits are set, motor will not continuously between limits. Upper and Lower Limits cannot be set at the same point. Upper and Lower Limit Setting Setting Upper Limit





Same operation is used to move between both modes



1. Press PROG Button



2 Jog n 1



3. Press STOP





S. Press STOP



# Setting and Cancelling Favourite Position NOTE On Favourite Printed on the annual Printe

Setting Favourite position



DOWN





3. Press and hold STOP & FAV for 2s



4. Jog x 2



5. Feverte postron

Cancelling Favourite Position



1. Move to favorite



2. Press and hold STOP & FWY Surron for 2s



3. Jog v.1



Hot Key for Favourite Position



1. Press FAV Button



2. Blind moves to favorite position

# Adjusting Upper and Lower Limits NOTE: Proceedings and Inches and

Adjusting Upper Limit



Press and hold UP &
 FW Button for &



2. Jog s 1





3. Mose filind UP or DOWN



4. Position at new Upper Limit



5. Press and hold UP & FAV Button for 2s



Adjusting Lower Limit



1. Press and hold DOWN & FAV Button for 6s



2 Jog s 1



3. Move Blind UP or DOWN



4. Position at new Linear Limit



5. Press and hold DOWN & FAV Button for 2s



A Jug x 2

### Removing all set limits



1. Frees PROG Button



2 Jog v 1



3. Frees STOP





5. Press PROG Button



### Remove Controllers NOTE: Remove provides steel and remove an limits. To you a remove to remove a second remote, both result be pared to remove

# Remove a Single Controller



1. Press and Hold MHB for 2s





3. Press PROG Button



### Remove Controller B via Controller A





2. Jug a 1



3. Press PROG Button







### Remove All Controllers



1. Press PROG Button



2. Jog s 1



3. Press PROG Button



4. Jogst



5. Press DOWN Button



6. Jug x 7

Adjust Motor Speed NOTE: The motors have 3 speeds of this motor are 20 / 24 / 25 SPM. If the motor does not jug at the final stage, the marketin speed has been smarked. If the motor is less it will recur to its default speed.

### Increase Motor Speed



1. Press PROG Button





3. Press STOP





5. Press UP Button



### Decrease Motor Speed



1. Fress PROG Button



2. Jog # 1



3. Press STOF



4. Jog s 1



5. Press DOWN Button



6. Jog s f

## Soft Start/Stop NOTE: Soft Start/Stop is on an Sectiony default

### Turn Soft Stop/Start On

















1. Press PROG Button

2. Jog s 1

3. Press UP Button

4. Jog v 1

5. Press UP Button

6. Jog x 1

### Turn Soft Stop/Start Off

















1. Fress PROG Button

2. Jog a 1

3. Press DOWN Button

4. Jog x 1

5. Frees DOWN Button

Charging Light On/Off NOTE: When record is pluged in for charging a blue LED light will fash 6 times. During charging the blue LED light Radies 2 times every 8 seconds.

When the record is fully charged the blue LED light will stay on. The function turns the fleshing charging light on or all.

### Turn Charging Light On or Off









3. Press DOWN Button





5. Press STOP Button



NOTE: When Function Look is on all setting opinions are holled for that individual nemotes. Function look must be turned off to make any changes to the settings. The LCD remote screen flashes 5 times to show it has show it has stanged in or not of looking mode. When operating the LCD remote in looking mode the acresin flashes. The LED remote will flash loke 5 times when moving in or out of looking mode.

### Turn Function Lock on/Off



Press and hold T
 Button for 12s

### NOTE: Enables the user to operate the motor when out of range using the thick or a Smart Speaker. User must have (LiDneTsuch app installed. These steps will put the motor in the connect to the app. See separate detailed App Instructions for full connection and instillation process. Smart Hub

### Option 1: Entering Mode with Motor Head



1. Press and Hold MHS for 2s



2. Jog s 1



5. Press MHB 3 times



4. LED on Motor

### Option 2: Entering Mode with Remote



1. Press PROG Button



Z. Jog s 1



3. Press DOWN Button



4. Jog x 1



5. Press PROG Button





7. LED on Motor

# Matter Connecting

NOTE. Establish the user to operate the monor using a marter bevice. Example above is for Apple Hymelich using Apple Hymelich and Apple Hymelich using Apple Hymelich using Apple Hymelich user to the Hymelich connecting the motor please refer to manufactures instructions. The Hymelich device allows the app to commit the motors when user is all also. Make sure the phone used is connected to a Wi-Fit 2.4 GHz network.

Cither matter also connection.

### Option 1: Entering Mode with Motor Head



t. Press and Hold MHB for 6s



2. log x 2



 LED on Motor Head Fleshes Orange a 2



4. LED on Motor Head Flashes trive

### Option 2: Entering Mode with Remote



1. Press PROG Button



2. Jog s 1



3. Press DOWN Button



4. Jog s 1



5: Press UP Button




6. Jog s 1



7. LED on Motor Head Fleshes blue

### Setting App: Example Apple Home App

 Open Home App. Have HomePod added to App.

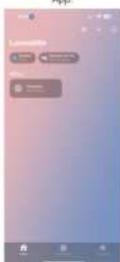

 The app will search for the motor. Blue LED on Motor head will flash for successful pairing.



2. Click '+' to Add or Scan Accessory



5. Set the Location of the Blind.



Scan the unique Setup Code on the motor to add to app.



6. Set the Name of the Blind.



7. Set up Automations.



 Blind can now be operated by the app from anywhere.



 App can visually display the position of your blind when away from the home.



# Troubleshooting

FAULT	CAUSE	SOLUTION
Motor is not responding		Add Controller
	·Motor is powered off	
		· Charge Motor
Motor stops suddenly	·Upper and Lower Limits not set correctly	-Re-set Upper and Lower Limits
	·Blind exceeds maximum lifting weight	-Check blind weight
		· Charge Motor
ED light flashes 8 times on motor head when motor starts		·Charge Motor

Label statement: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that my cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help. MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.