



CHARGING YOUR EARBUDS



- Place Right and Left Earbuds in battery case charging cradle and press the power button on the battery case (3)
- Charging case LED indicator (2B) will illuminate Blue and the earbud LED indicators (4, 6) will illuminate Red, indicating that the earbuds are charging properly. When Earbuds LEDs (4, 6) turn solid blue, earbud batteries are fully charged.
- After earbuds are fully charged, press the charging case power button (3) to turn the charging case OFF.

MONO MODE (SINGLE EARBUD USE)



- Remove earbud from charging cradle and power on by pressing the control button (7) or (5) for 3 seconds depending on which
- Once earbud is powered on, proceed to PAIRING

STEREO MODE (DUAL EARBUD USE)



- Remove both earbuds from charging cradle and place them in your ears.
- --- Make sure Bluetooth® Search Mode is turned off on your mobile device.
- Hold the right earbud button (5) for 3 seconds and then press left earbud button (7) for 3 seconds until they are powered on. (Earbud LEDs will flash Red and Blue to
- Earbuds will automatically link together after a few seconds, and earbuds will alert "connected" (LEDs will flash blue)
- Once Earbuds are linked together you may proceed to pairing with your mobile device.

PAIRING



*Note: Once earbuds have been initially paired successfully with your mobile device they will automatically pair the next time they are powered on.

OPERATING BLUETOOTH EARBUDS

Function	Operation
Power On	Press (5) or (7) for 3 seconds
Power Off	Press (5) or (7) for 5 seconds
Play/Pause	Single press (5) or (7)
Answer/Reject	Answer (7) or Reject (5)

Earbuds	LED indications (4) & (6)
Power On	Red and Blue LED will flash 1 second
Link Mode	Flashing Blue + Red
Paired Successfully	No flashing indicator light
Low Battery	Flashing Red
Power Off	LED Off
Earbuds in Cradle	
Charging	Solid Red
Fully Charged	LED Off

Charging Case See CHARGING YOUR CASE

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at customerservice@xtremecables.com

FCC Warnings

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate

responsible for compliance could void the user's authority to operate the equipment. This device may be present part and to the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device may not cause harmful interference, and (2) this device may a for any interference received, including interference that may cause undesired operation.

The complement complement of the complement of the complement of the properties of the properties of the complement of the properties of the properties

Note: This equipment has been tested and found to comply with the limits for a Chess I digital drowing, pursuant to part 15 of the EFC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Recorent or relocate the receiving antenna.
—Increase the separation between the equipment and receiver,
—Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.

- —Consult the dealer or an experienced radio/TV technician for help.