

背面

VIVITAR

wireless earphone

USER'S MANUAL: Item VB0021BT Earbuds

Specifications

Bluetooth Range Up to 33 feet (10 meters)
Charging Input: DC5V 1A max

Play Time: 4-6 hours

Applicable at 50% of maximum volume.
Results will be lower when volume is higher.

A Quick Look

Multi-Function
button
(Touch Control)

LED Light Indicator

MIC

Earbuds

Charging Dock

LED Charging
Indicator Light

USB = Charging
Port

Charging
Cable

Charging
Cable

LED Charging
Indicator Light

Charging

1. Insert the included charging cable's Micro USB end into the charging port on the case.

2. Insert the charging cable's standard USB end into the USB port of a computer or suitable wall adapter (not included).

3. The LED Charging Indicator Light will flash while the case is charging and will emit a steady light when fully charged.

Bluetooth Pairing

1. Remove the earbuds from the case and they will turn on automatically.

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

Pairing Mode
Flash LED

2. When in pairing mode, one earbud will flash red and blue and the other earbud will flash blue.

3. On your phone, go to the Bluetooth page in the Settings app. Make sure Bluetooth is on before connecting to the available device "VB0021 Earbuds".

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

Paired Mode
Flash LED

4. Both earbud's LED Indicator will slowly flash blue once paired to your phone.

Using Your Earbuds: Music Controls

1. Press either earbud's Multi-Function button to pause and play music.

2. Press the left earbud's Multi-Function button two times to go back to the previous song.
Press 3 times to lower the volume.

3. Press the right earbud's Multi-Function button two times to go to the next song.
Press 3 times to raise the volume.

4. Press and hold either earbud's Multi-Function button for 2 seconds to activate Voice Assistant.

TWS Earbuds can be used independently. One earbud can be used when the other is off, as long as it is connected to Bluetooth.

Important Safety Precautions

- 1. READ ALL INSTRUCTIONS BEFORE USING YOUR DEVICES.**
- Do not use your devices near water. Do not place your devices on any wet surfaces.
- Do not allow children to use the devices without proper adult supervision.
- Do not expose your devices to excessive heat or fire.
- Do not use in extremely dry environments, as this can lead to static discharge during usage.
- Do not expose your devices to temperatures above 100°F. Keep out of direct sunlight.
- Do not attempt to repair these products yourself. Contact a qualified service center if your devices are in need of service.
- Do not drop, puncture or expose your devices to excessive physical force.
- Your devices are not intended for commercial use.
- Do not place the devices near objects that generate a strong magnetic field.
- Use only the supplied charging cable. Unplug this device when not in use for long periods of time and during lightning storms.
- Use a soft cloth to clean your devices. Never use any abrasive chemicals.
- Please recycle or dispose of your devices properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your earbuds for further information.

Warranty One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for the term of one year.


What is Not Covered by Warranty:

Repairs or modifications not resulting from defects in material or workmanship and damages or malfunctions from other causes, including but not limited to, repair by unauthorized personnel, tampering, modification or excessive use.

 
To Obtain Warranty Service and Troubleshooting Information:
 Call 1-800-562-0541 in the U.S. or 1-800-917-4E31 in the rest of our website at www.vivitar.com.

This warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem identification and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products returned by the authorized service center that are not covered by warranty will be returned unopened.

Using Your Earbuds: Call Controls



1. Press either earbud's Multi-function button to answer and end a call.

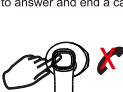

2. Press and hold either earbud's Multi-function button for 2 seconds to reject an incoming call.

FCC Statement

FCC ID:2BB3B-TWSY2Y 2BB3B-HP231

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can radiate radio frequency energy and if not installed and used according to the instructions, the radiation may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet Federal RF exposure requirement. The device can be used in portable equipment condition without restriction.

©2024 Sava International
 156 Carter Dr.
 Edison, NJ 08817
 Support: 180.992.8541
www.vivitar.com

