

ION-E UAP Tune up Procedure

The gain for the ION-E UAP is automatically set by the system based upon the input power detected. Output power is a fixed value defined in a user table. The user shall not provide an input power exceeding the limits of the input device.

The user does not need to take any action to tune the system.